

ZOE BED FRAME QUEEN

Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or Air conditioning vents.

Dust your wood furniture often to prevent the buildup of dust.

Blot spills do not rub, with a clean white cloth.


Before cleaning any part test a small spot in a hidden area.

Natural Fiber products are designed to be used under cover.


Clean spills with a damp cloth with warm water only.

Do not use any harsh chemicals, abrasive cleaners or

silicone or alcohol-based agents on woven materials.

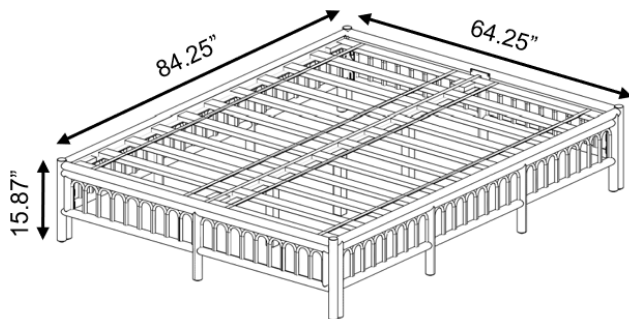

PARTS INCLUDED:

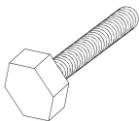

(A) Bolt
(M8 x 25mm) x12




(B) Spring Washer
(M8) x12




(C) Washer
(M8) x12




(D) Wrench
x1

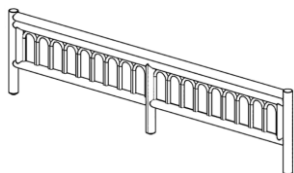

(E) Headboard / Footboard
x2

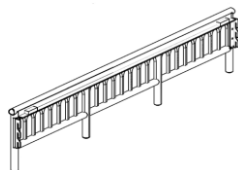

(F) Side Rail
x2

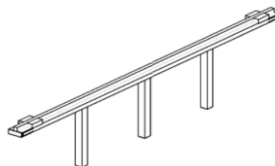

(G) Center Rail
x1



(H) Roll Slats
x2


ZOE BED FRAME QUEEN

URBAN OUTFITTERS

Assembly Instructions


STEP 1

Insert the bolts (A), spring washers (B), and washers (C) into the headboard and footboard (E) as shown. Partially tighten the bolts (A) with the wrench (D). Leave enough room to hang the hooks on the side rails (F) on the bolts (A); loosen the bolts (A) as necessary to accommodate hanging the side rail (F) hooks. Place the headboard (E) in its intended location, then, with help, hang the side rail (F) hooks on the bolts (A). Ensure the side rails (F) are seated on all the bolts (A) with the washer and spring washers in front of the hooks.

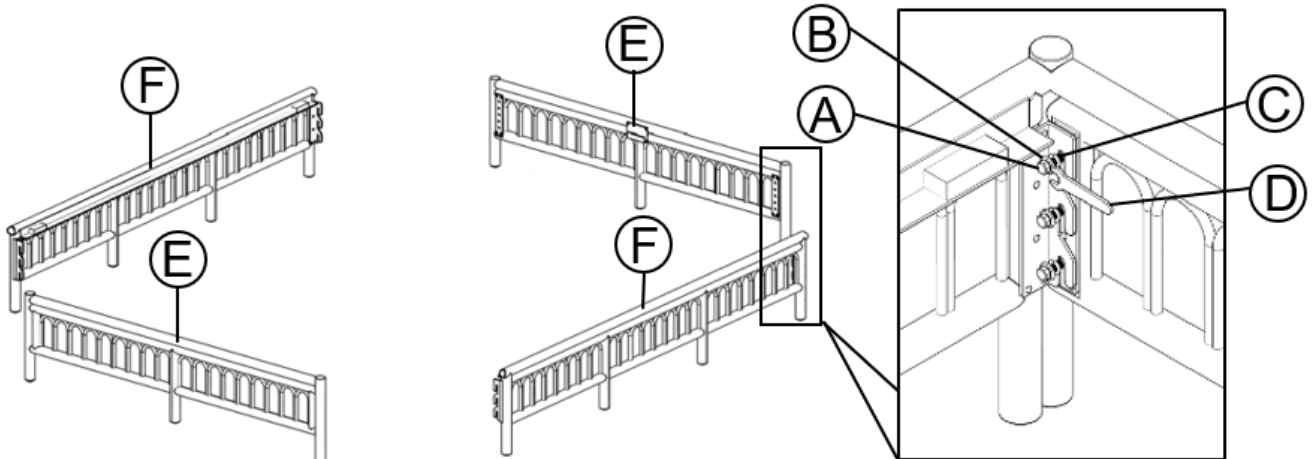

STEP 2

Align the center rail (G) with the headboard and footboard (E), as shown, and press it firmly into place. Fully tighten the bolts (A) from STEP 1 with the wrench (D). With help, lay the roll slats (H) onto the bed frame. Ensure the blocks on the side rail (F), headboard, and footboard (E) are between the last two slats on either end of the roll slats (H).

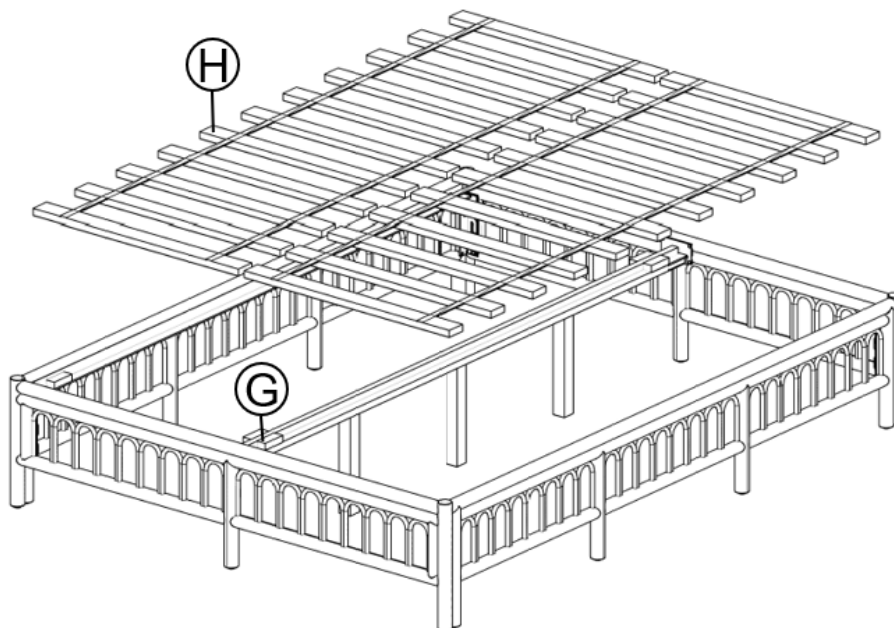

ZOE BED FRAME QUEEN

Assembly Instructions

STEP 3

URBAN OUTFITTERS

Adjust the levelers as necessary to accommodate uneven floors.

