

Marnie Vanity

Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not discard packing materials and the carton until assembly is complete.

Ensure all parts are present prior to assembly.

Contact customer service immediately if any parts are missing.

Assemble all parts on a clean, smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Blot spills with a clean, white cloth; do not rub.


Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.


Do not place over heat or air conditioning vents.

Do not over-tighten the parts.


The parts may loosen after initial use; re-tighten as necessary.

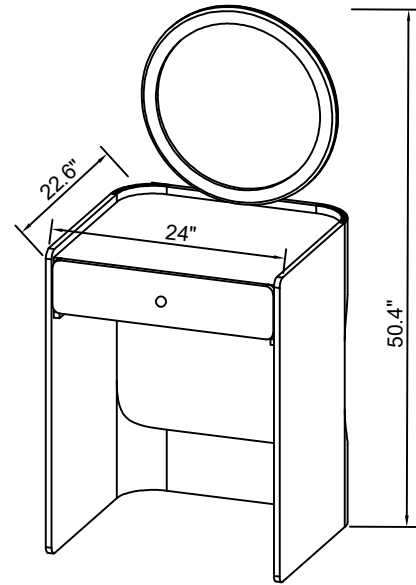

PARTS INCLUDED:

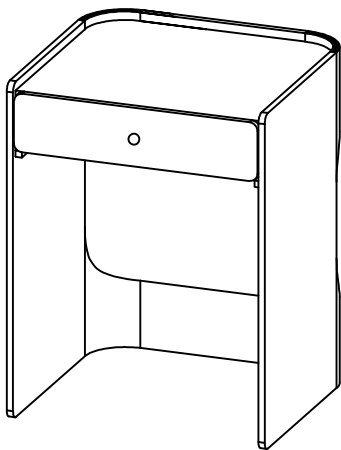

(A) Vanity
x1

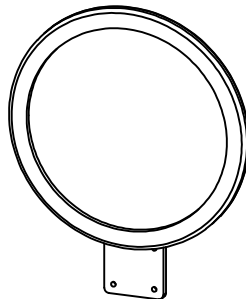

(B) Mirror
x1



(C) ROUND HEAD ALLEN BOLT
[M6 X 25MM]
x4



(D) WASHER [M6 X 16MM]
x4



(E) ALLEN KEY [4 MM]
x1

Marnie Vanity

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Align the holes in the mirror (B) with the holes in the back of vanity (A). Insert Allen bolts (C) and washers (D) then, tighten the Allen bolts (C) with Allen Key (E) to complete assembly.

