

MASON BOOKSHELF

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED: N/A


Phillips head screw driver, Pencil

WARNINGS:


At least two people recommended for assembly
Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface
Do no drag the shelf while moving

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place overheat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

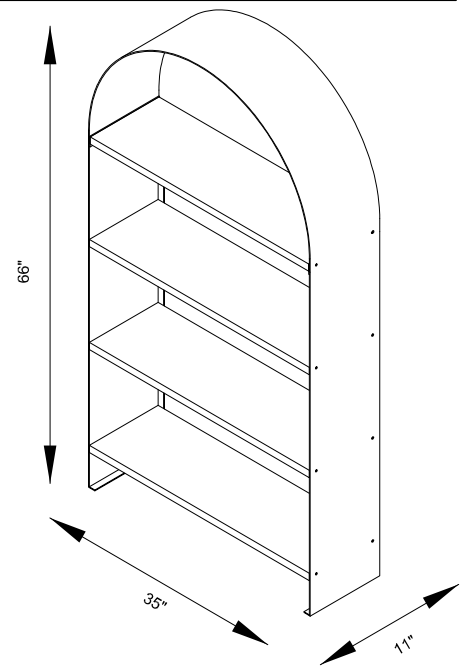


PARTS INCLUDED

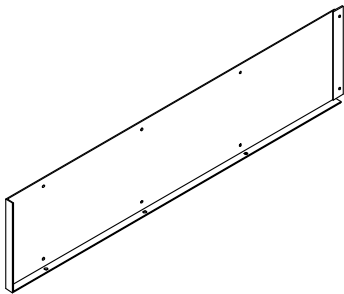


A-R) Right Side Panel x1

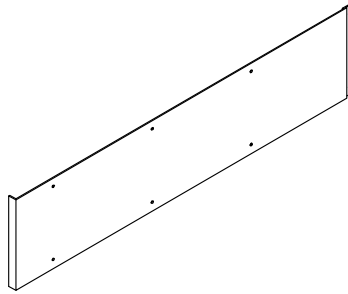


A-L) Left Side Panel x1

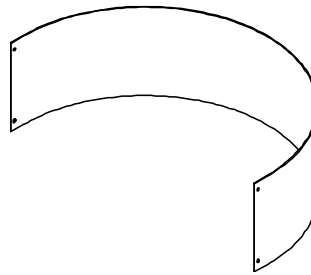

B) Metal Semi-Circle x1

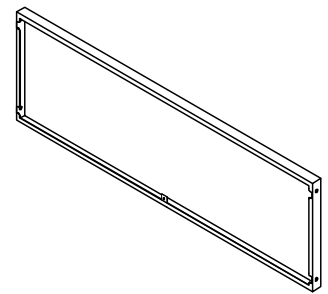


C) Top Metal Shelf x1

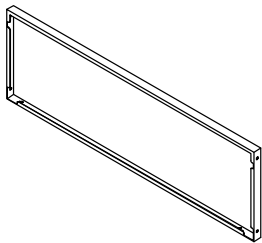

D) Metal Shelf x3




E) Nut [6mm] x22



F) Mushroom head bolt
[M6xL15mm] x22



G) EVA pad x4




H) Open Wrench x1




I) Allen Key x1



J) Drywall Anchor [13x40] x1



K) Wall Screw [4x32] x1



L) Bolt [M6xL10mm] x1




M) Anti-tip Bracket x1

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.
© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.


STEP 1

Lay down all the parts on the clean carpet or cardboard for assembly. Align Right Side Panel (A-R) and Left Side Panel (A-L) with Metal Semi-Circle (B). Align Top Metal Shelf (C) with both panel and semi-circle. Insert Mushroom head bolt (F) through the side panels, semi-circle and shelf. Place nut (E) on the end of the Mushroom head bolt (F), and tighten with Open Wrench (H). Attach the EVA Pad (G) to the bottom of bookshelf.

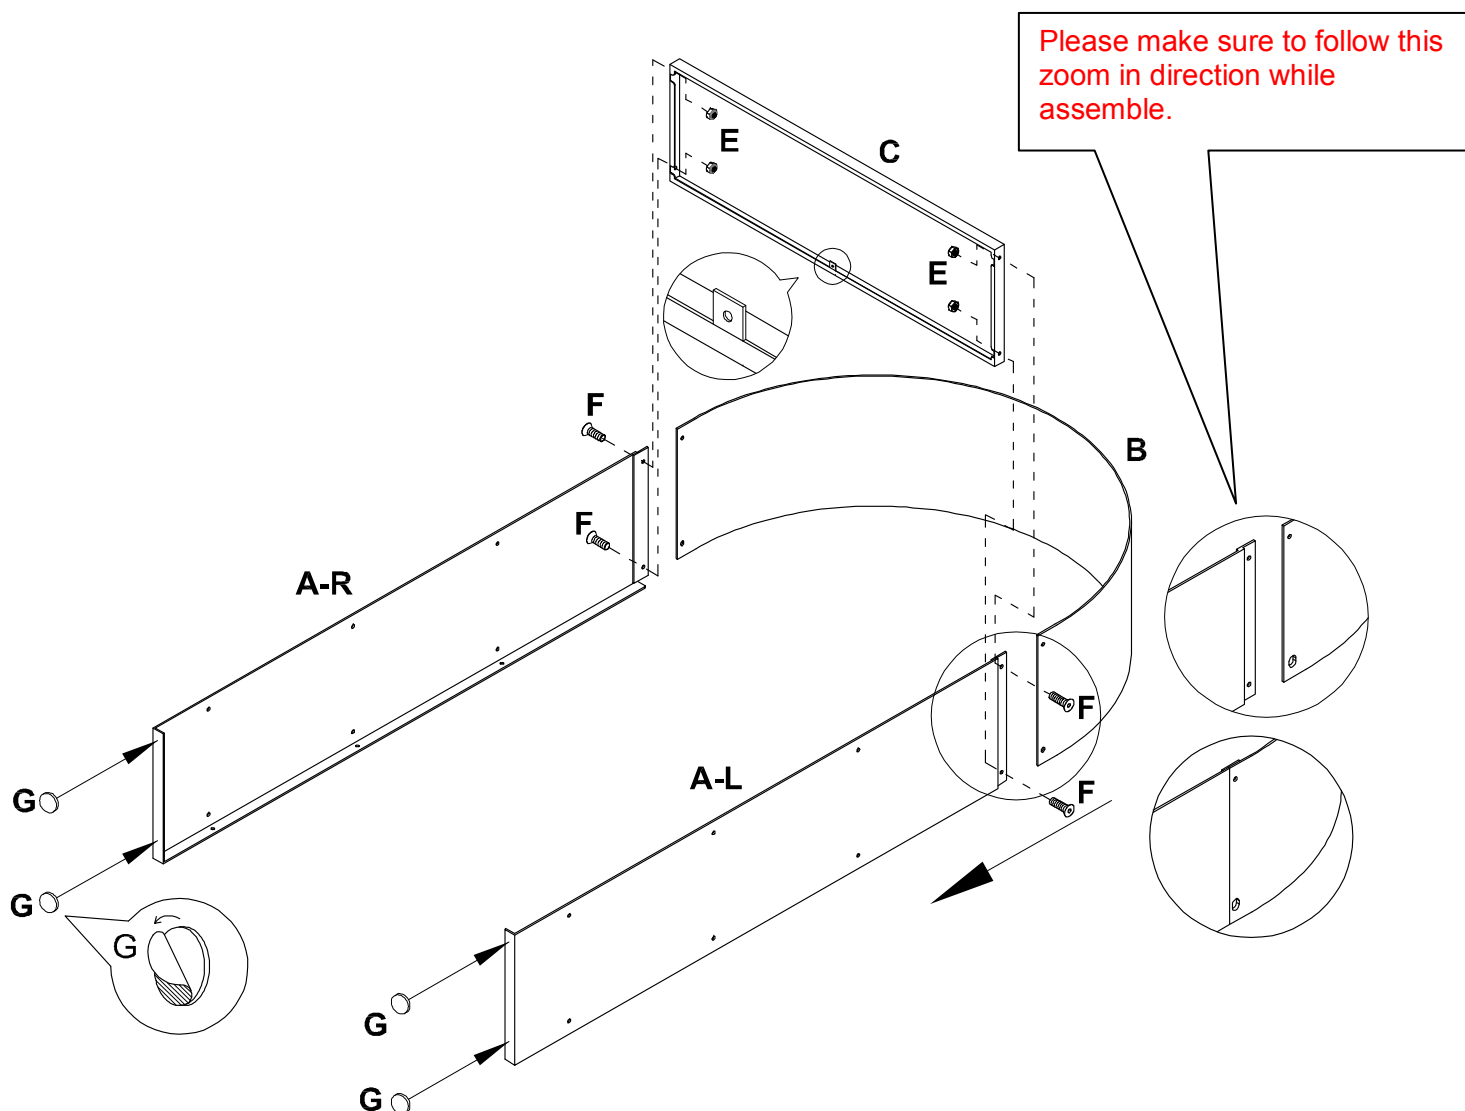

STEP 2

Align the Metal Shelves (D) with Right Side Panel (A-R) and Left Side Panel (A-L). Insert the Mushroom head bolt (F) through the side panels, and shelves. Place nut (E) on the end of the Mushroom head bolt (F), and partially tighten with Open Wrench (H). Once all bolts are inserted and partially tightened, tighten all bolts fully.

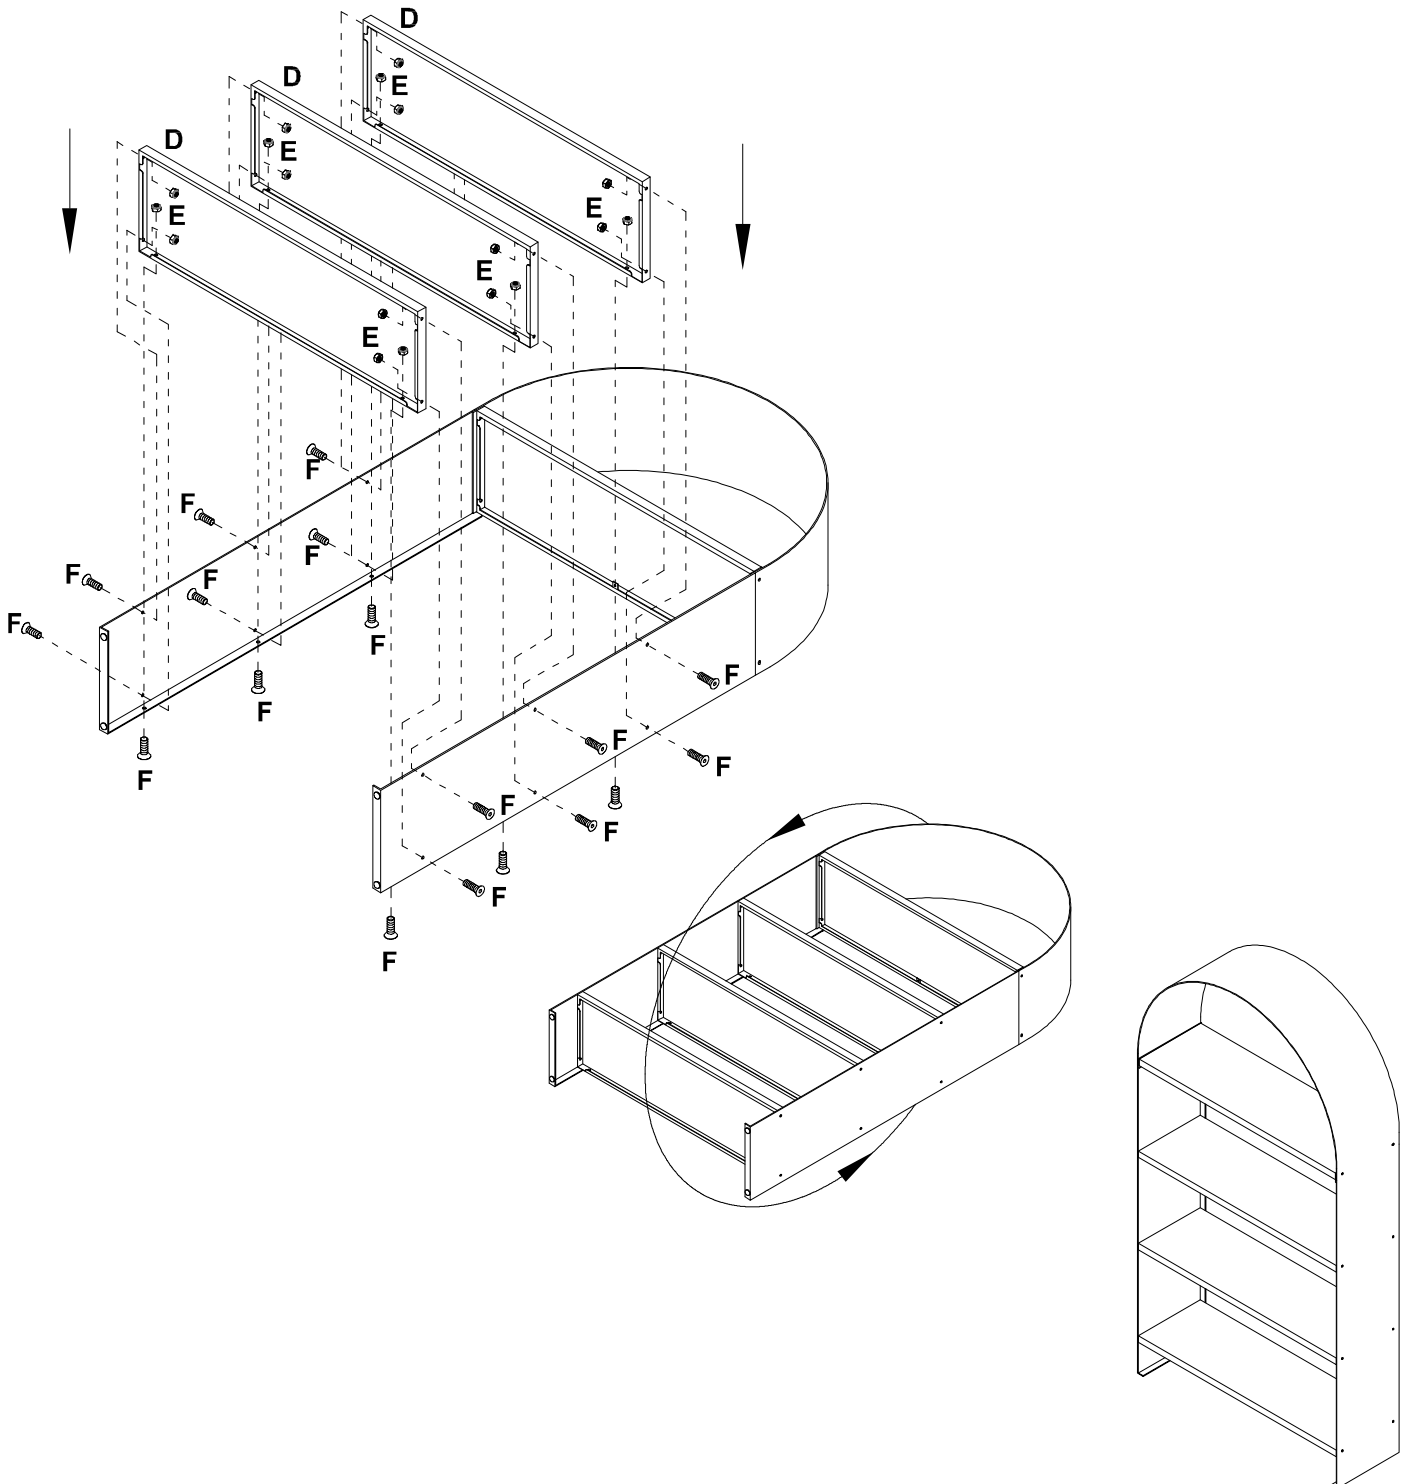

STEP 3

Place the shelf against the wall in its desired location and mark the location of the hole in the anti tip bracket (M) on the wall. Screw the drywall anchor (J) into the wall at the marked location. Insert screws (L) through the anti-tip bracket (M) into the drywall anchors (J) and tighten with a Philips head screwdriver (not provided).

Warning: This product is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws, brackets or straps.

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.

