

Alora Floor Lamp

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver, Wire cutters

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Use a 60W (MAX) Type A incandescent bulb or a 10W LED bulb.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Do not place over heat or air conditioning vents.

Adjust levelers so that the furniture sits flat on uneven floors. Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

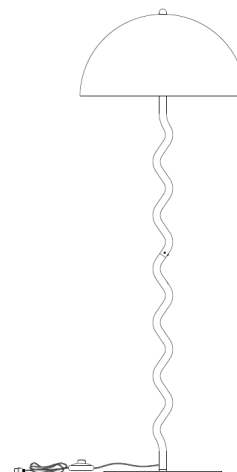


PARTS INCLUDED:



(A) Finial



(B) (D) Plastic Washer
[D20xT1.0mm] x2

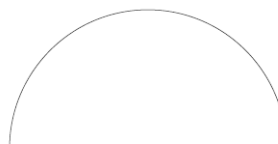

(C) Shade



(E) Metal Washer
[D20xT1.0mm] x1



(F) Shade Stem



(G) Upper Lamp Body



(H) Screws
[5/32x7mmL] x3



(I) Lower Lamp Body



(J) Base



(K) Allen Key

Alora Floor Lamp

Assembly Instructions

URBAN OUTFITTERS

STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.

STEP 2

Screw Lower Lamp Body (I) onto Base (J). Attach Upper Lamp Body (G) with Screws (H) using Allen Key (K) to tighten.

STEP 3

Screw shade stem (F) into assembled lamp body (G).

STEP 4

Place Metal Washer (E) and Plastic Washer(D) on the Shade Stem (F) as shown.

STEP 5

Place the Shade (C) onto the Shade Stem (F) then, place plastic Washer (B) on top of the Shade (C). Secure the Shade (C) by screwing Finial (A) on the Shade Stem (F) until tight.

STEP 6

Insert the specified light bulb into the socket. DO NOT EXCEED THE SPECIFIED WATTAGE.

STEP 7

Plug into outlet, turn on switch, and enjoy your new lamp

Use a 60W (MAX) Type A incandescent bulb or a 10W LED bulb. Do not use bulb that exceeds recommended wattage.

