

# CELESTE SHELF

## Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED

### WARNINGS:

Do not throw away packing materials and carton until after assembly.  
Ensure all parts are present prior to assembly.  
Contact customer service immediately if parts are missing.  
Assemble all parts on a clean smooth surface.

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.  
Do not place over heat.  
Do not use harsh chemicals.  
Clean with Soft dry cloth.  
Before cleaning any part test a small spot in a hidden area.



[30"L x 16"W x 51"H]

### PARTS INCLUDED:



(A) Top Shelf




(B) Lower shelves x3



(C) Posts x12



(D) Feet x4



(E) Wall Clip x2



(F) Zip Ties x2



(G) Screws x4



(H) Plastic Anchors x4


# CELESTE SHELF

## Assembly Instructions

URBAN OUTFITTERS


### STEP 1

Lay the parts down on a clean surface such as carpet or cardboard. Place the top shelf (A) on its side as shown below. Screw the posts (C) into the bottom of the top shelf (A) then, align the lower shelf (B) as shown below.

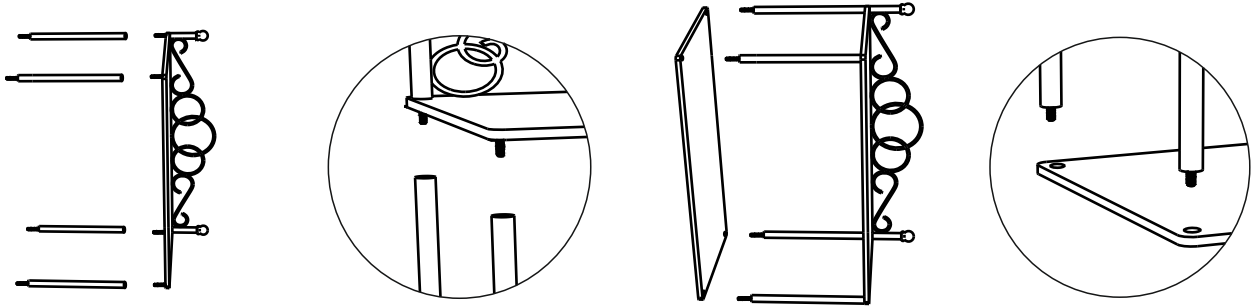


### STEP 2

Screw the additional posts (C) into the posts attached to the top shelf (A), then align an additional lower shelf (B); repeat this process to assemble the rest of the posts (C) and lower shelves (B).

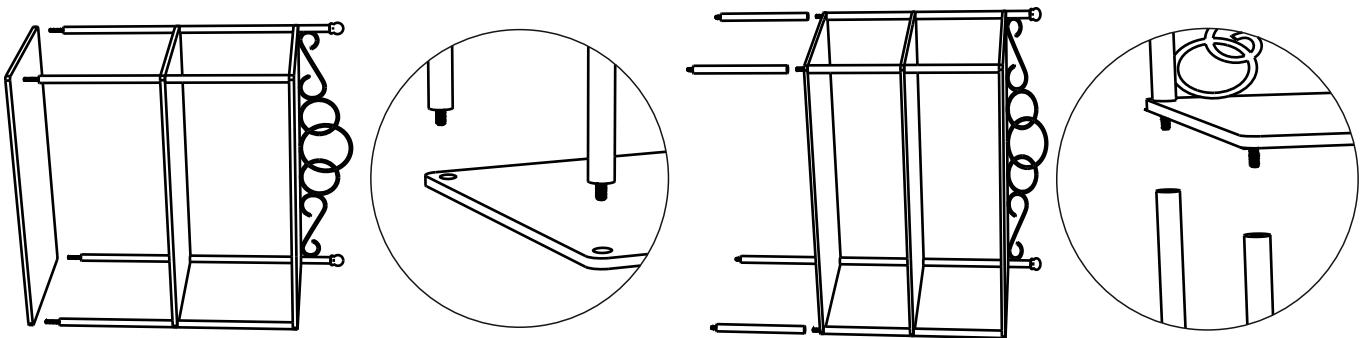

### STEP 3

Screw the feet (D) into the last set of posts (C) as shown below to complete assembly. Then, with help, flip the assembled shelf upright.

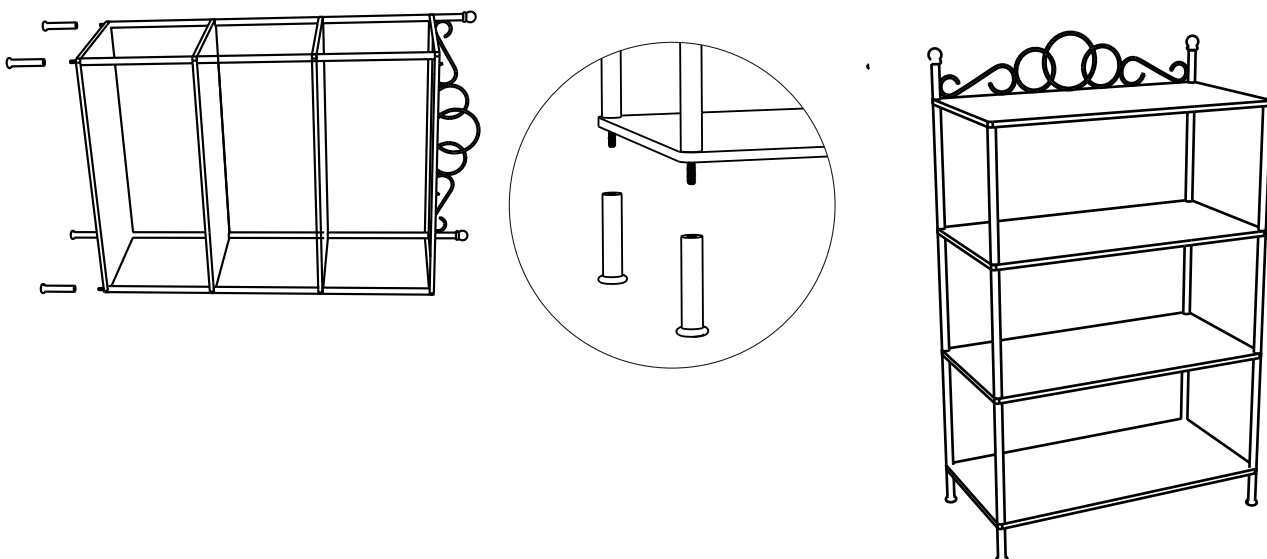


### STEP 4

Place the shelf against the wall in its desired location then, place the anti-tip brackets (E) on the wall below the top shelf on both sides, as shown, and mark the location of the hole in the anti-tip brackets (E) on the wall.


#### Wood or Stud Installation:

Insert screws (G) through the anti-tip brackets (E) into the wall and tighten with a Phillips head screwdriver.

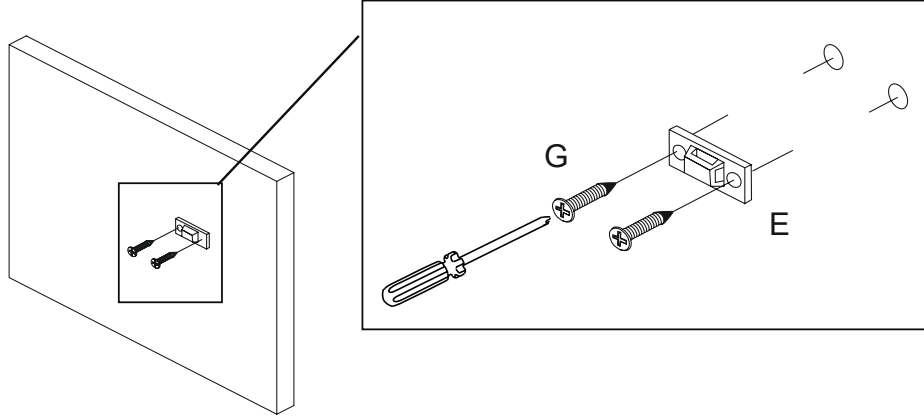

#### Drywall Installation:

Attach the plastic anchors (H) to the wall at the marked location using a drill and hammer. Insert screws (G) through the anti-tip brackets (E) into the plastic anchors (H) and tighten with a Phillips head screwdriver.

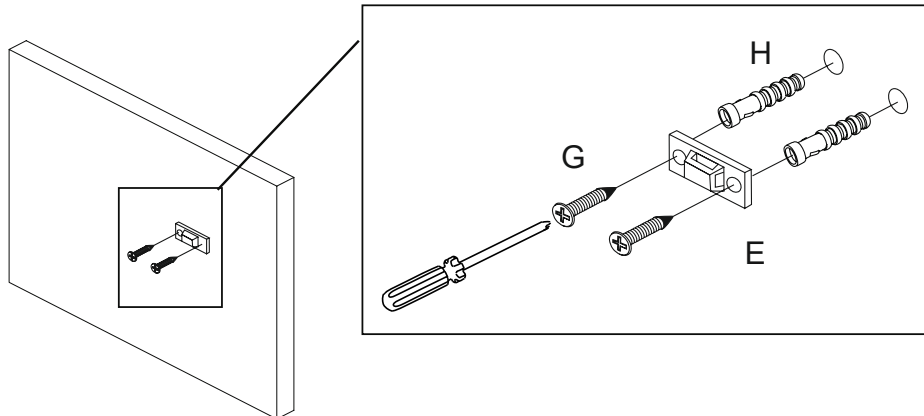

### STEP 5

Feed the zip ties (F) through the anti-tip brackets (E) and around the shelf then, pull the zip ties (F) tight.

