


# JOANNA PRESSED METAL WALL SHELF URBAN OUTFITTERS

## Assembly Instructions

### PARTS REQUIRED BUT NOT INCLUDED:



Do not throw away packing materials and carton until after assembly.  
Assemble all parts on a clean, smooth surface

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.


Blot spills, do not rub, with a clean white cloth.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

Use Phillips head screw 8.5mm

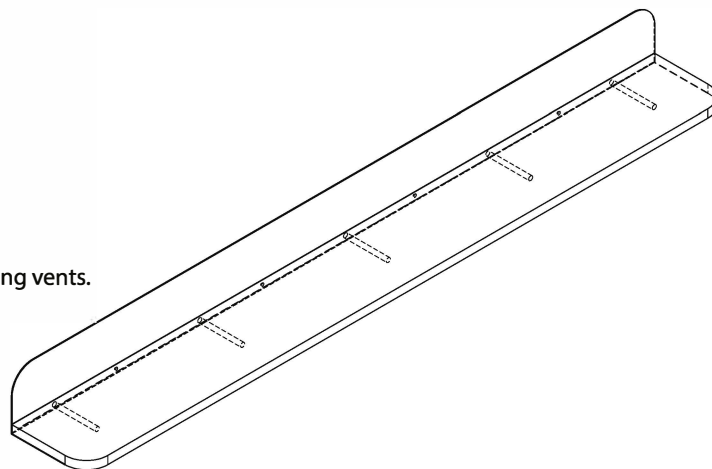


### PARTS INCLUDED:

(A) Metal Wall Mount Bracket

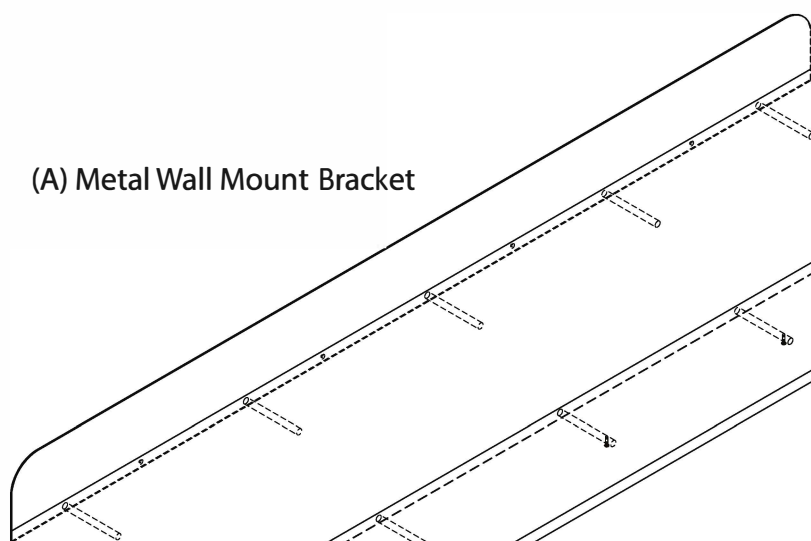

(B) Center Wooden Piece

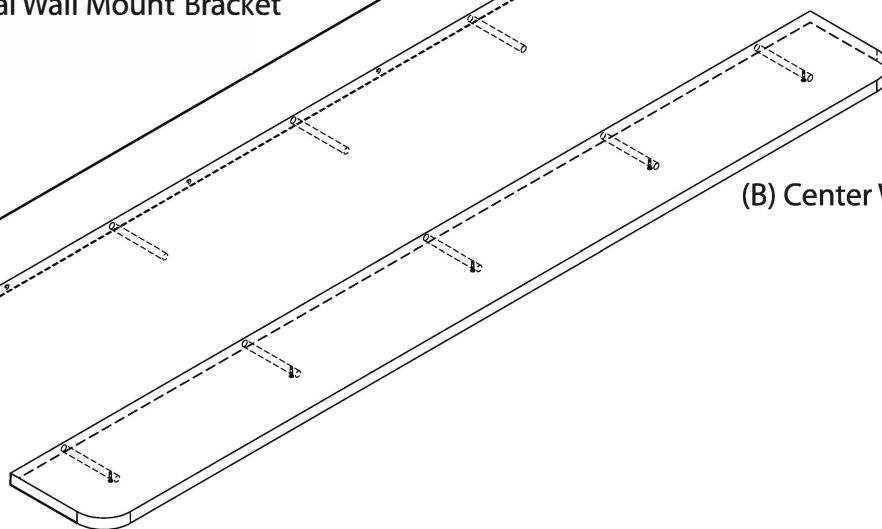


# JOANNA PRESSED METAL WALL SHELF **URBAN OUTFITTERS**

## Assembly Instructions


---

### STEP 1

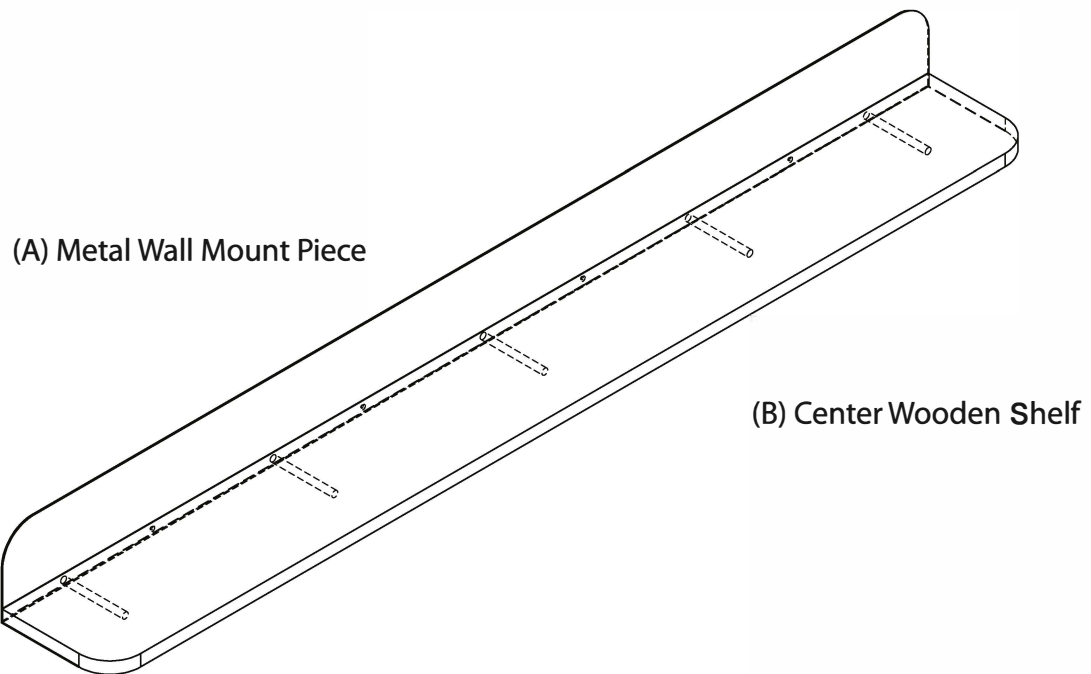

### STEP 2

Unscrew the small set screws in the bottom of the shelf to remove the Center Wooden Shelf from Metal Wall Mount Bracket

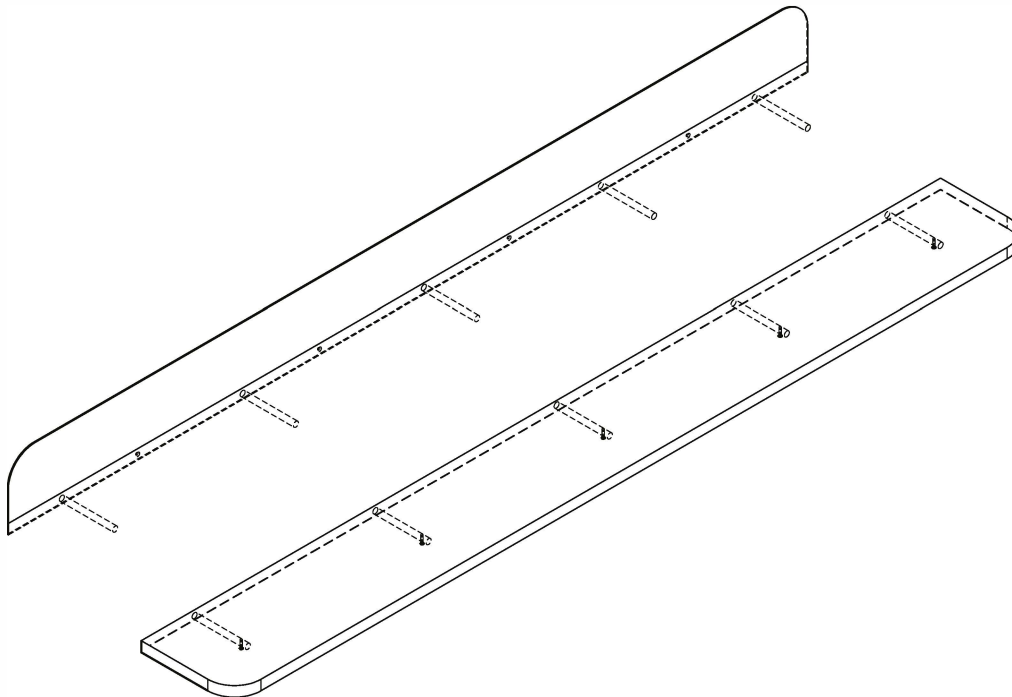


# JOANNA PRESSED METAL WALL SHELF **URBAN OUTFITTERS**

## Assembly Instructions


### STEP 3

Contact your local hardware store to purchase the correct anchors for your wall type. Mark the location of the 3 screw holes on the wall and insert anchors. Align metal wall mount and insert screws. Tighten with screwdriver (not Included).

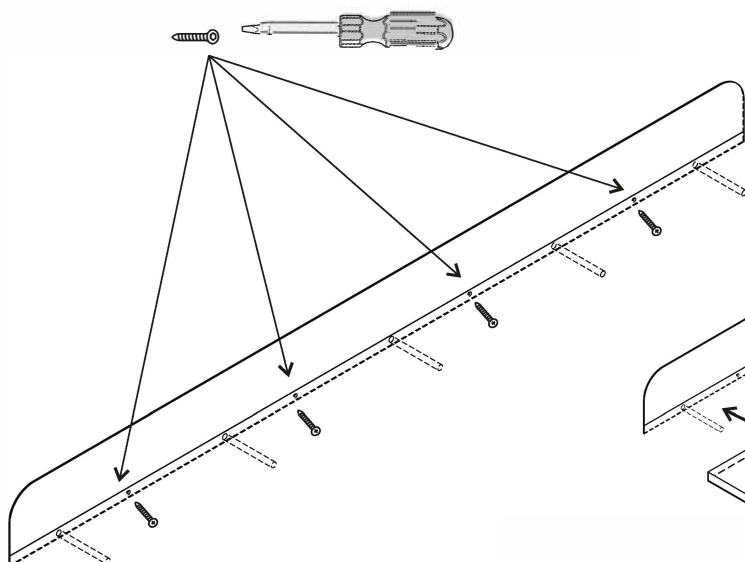

### STEP 4

Align wooden shelf onto metal bars. Press firmly into place making sure all holes are aligned. Insert screws into the bottom and tighten with screwdriver.

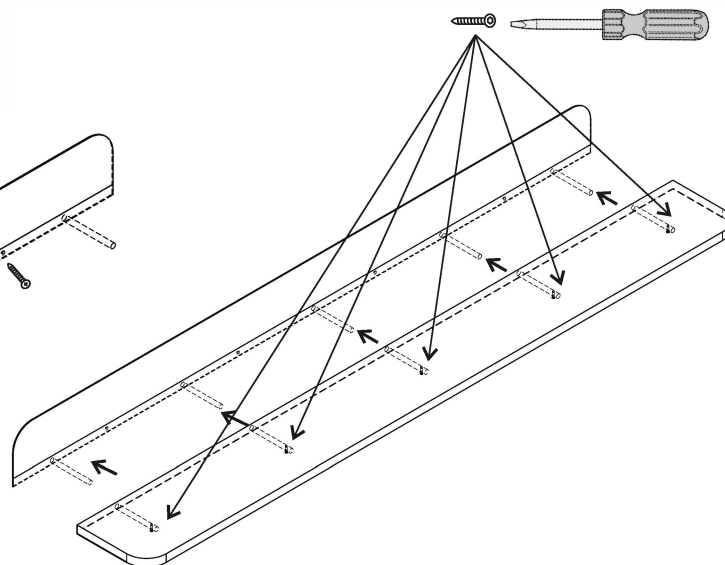

### STEP 5

### Complete Product

