

KODHI STICK-ON SCONCE

URBAN OUTFITTERS

Assembly Instructions

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Use only MAX DC / 3.7V 1W LED Type G4 bulb.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Do not place over heat or air conditioning vents.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

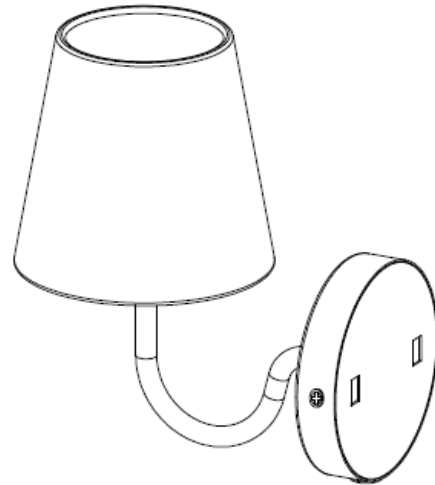

PARTS INCLUDED:

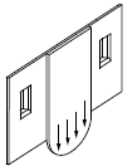

(A) Hanging Panel

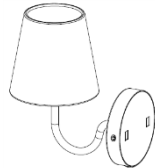

(B) Lamp



(C) G4 bulb

KODHI STICK-ON SCONCE

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Insert the specified light bulb into the socket. DO NOT EXCEED THE SPECIFIED WATTAGE.

STEP 2

Turn on switch and enjoy your new lamp.

STEP 3

Charging: Red light (ON)

Fully charged: Green light (ON)

Battery: 18650 Li-ion rechargeable battery, 3350mAh.

Light source (Included): LED 0.5W (35lm), 3000K color temperature.

Use only MAX DC / 3.7V 1W LED Type G4 bulb. Do not use bulb that exceeds recommended wattage.

