

Butterfly Headboard

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:


Drill, Phillips head screwdriver driver, Pencil, Level

WARNINGS:


Do not throw away packing materials and carton until after assembly. Ensure all parts are present prior to assembly. Contact customer service immediately if parts are missing. Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.

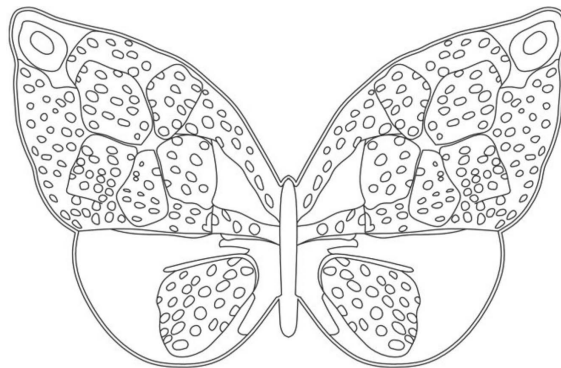

PARTS INCLUDED:

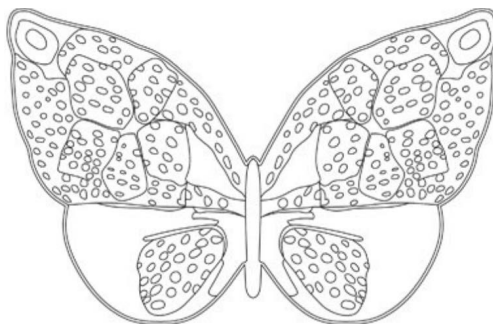

(A) Headboard



(B) Machine Screw
[D0.16"x1 .25"]x2



(C) Plastic Anchor
[D0.16"x1 .25"]x2


Butterfly Headboard

URBAN OUTFITTERS

Assembly Instructions


STEP1

Place the screw (B) on the wall in a chosen location and ensure it is level. Mark the location of the mounting holes in on the wall with a pencil, then remove it from the wall.

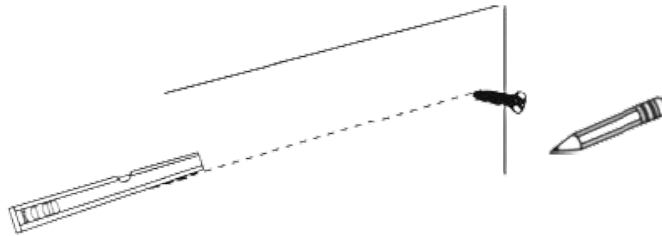


Stud installation:

Drill a 1/8" or 3mm hole in the wall at the marked locations, with the pre-drilled holes in the wall. Fasten the anchors (C) directly to the wall with screws (B) using a Phillips head screwdriver or drill.

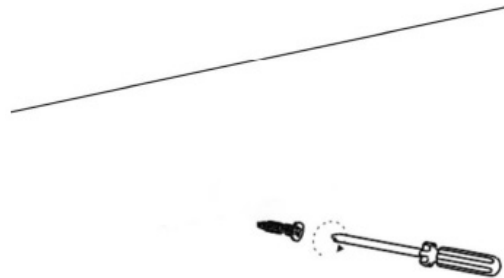

Drywall installation:


Drill a 5/16" or 8mm hole in the wall in the marked location. Insert the plastic anchors (C) into the wall at the marked location using a drill and a hammer. Align the screw (B) with the anchors (C) in the wall. Fasten them using a Phillips head screwdriver or drill.

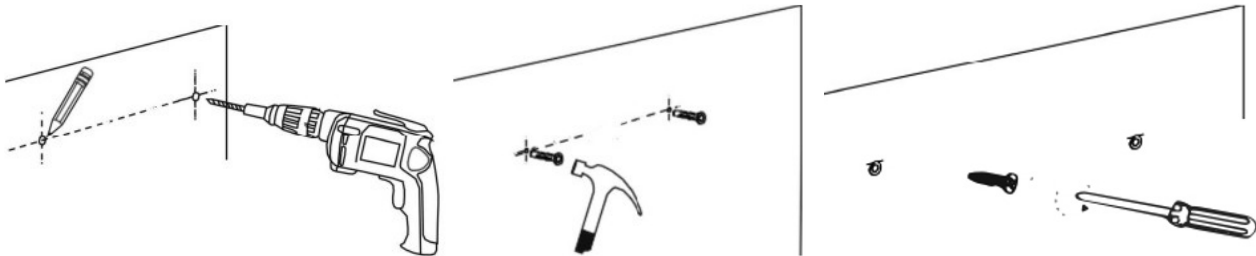

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

STEP2

With help hang, the headboard (A) onto screw (B) to complete assembly.

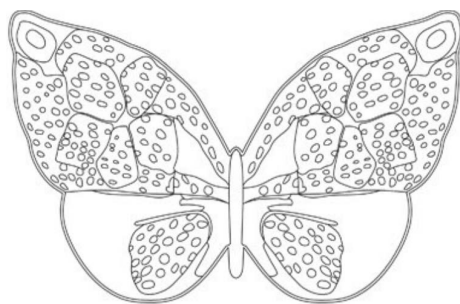

(A)

