

PETRA STOOL - WALNUT

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

N/A

WARNINGS:

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

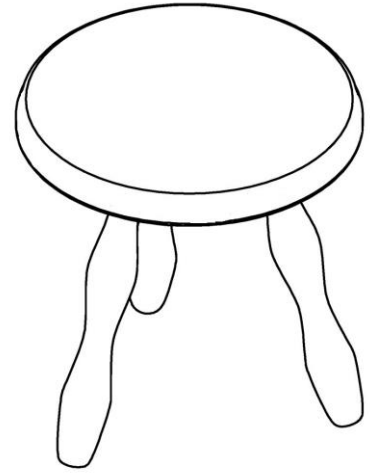


PARTS INCLUDED:

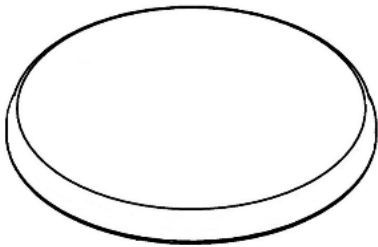


A) TOP X1

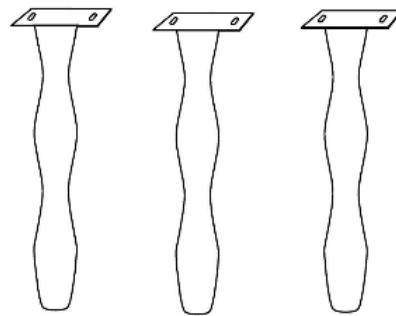

B) LEGS X3

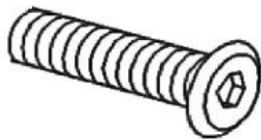

C) ALLEN BOLT
[M8 x 20mm] X6

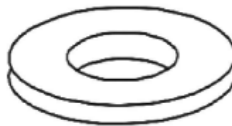

D) WASHER
[20mm] X6



E) ALLEN KEY
[5mm] X1


PETRA STOOL - WALNUT

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Lay the Top (A) over onto a clean smooth surface such as carpet or cardboard.

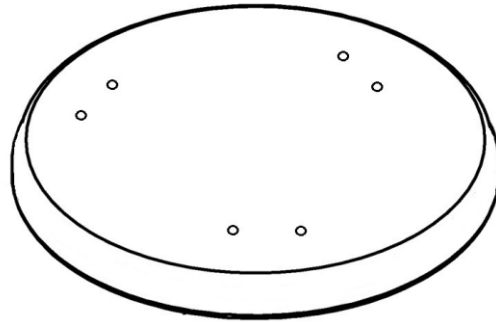

STEP 2

Align the holes in Legs (B) with the holes in Top (A). Insert the Allen bolts (C) with washer (D) and use Allen key (E) to tighten the Allen bolts (C). Flip the stool over onto its legs to finish assembly.

