

CHAIN LINK TIE BACK

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screw driver / drill, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

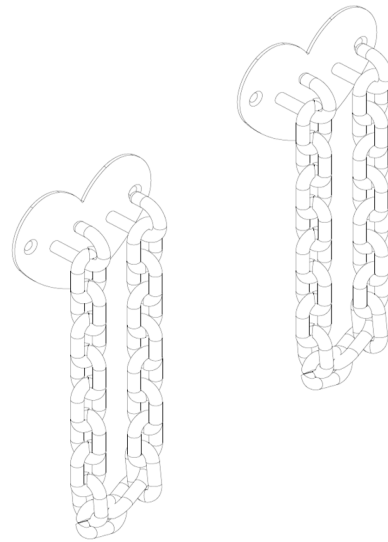

PARTS INCLUDED:




(A) Anchor x4



(B) Tieback x2



(C) Screw x4

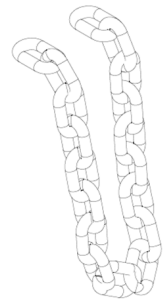

(D) Chainlink x2

CHAIN LINK TIE BACK

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Carefully unpack and place all the parts on a flat surface. Position the Tieback (B) on the wall in a preferred position besides an existing curtain. Mark the location of the Tieback (B) on the wall through its holes. If attaching the Tieback (B) to drywall, pre-drill holes at the marked screw locations, then insert the Anchors (A) into the pre-drilled holes. Insert the Screws (C) through the Tieback (B) into the Anchors (A) and tighten with a screwdriver or drill (not included). Do not overtighten the screws. If mounting the Tieback (B) directly into wall studs, screw the Tieback (B) directly to the wall. Wrap the chain D around your curtain and hang it on the hooks attached to the Tieback (B) to complete assembly.

