


TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

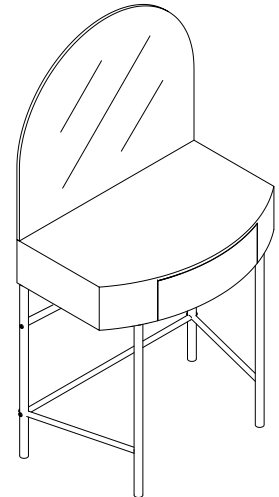


PARTS INCLUDED:

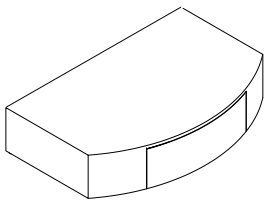


A) Top Frame x1




B) Left Leg Frame x1




C) Right Leg Frame x1

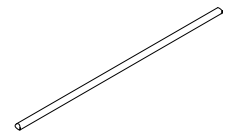


D) Back Rail x2

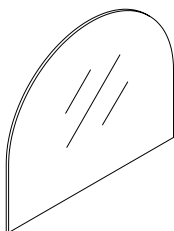


E) Mirror x1




F) Connect Bar x2



G) Bolt
[M6x10mm] x14




H) Bolt
[M6x35mm] x4




I) Bolt
[M6x20mm] 4x




J) Flat Washer x18



K) Metal Bracket x1



L) Bolt
[M4x8mm] x1



M) Hex Key 1x



N) Screw
[M4x35mm] x1




O) Anchor 1x

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be


STEP 1

Assemble Left Leg Frame (B) to Right Leg Frame (C) with Back Rails (D) and Bolt (H) as shown in the drawing below. Tighten with supplied Hex Key (M).

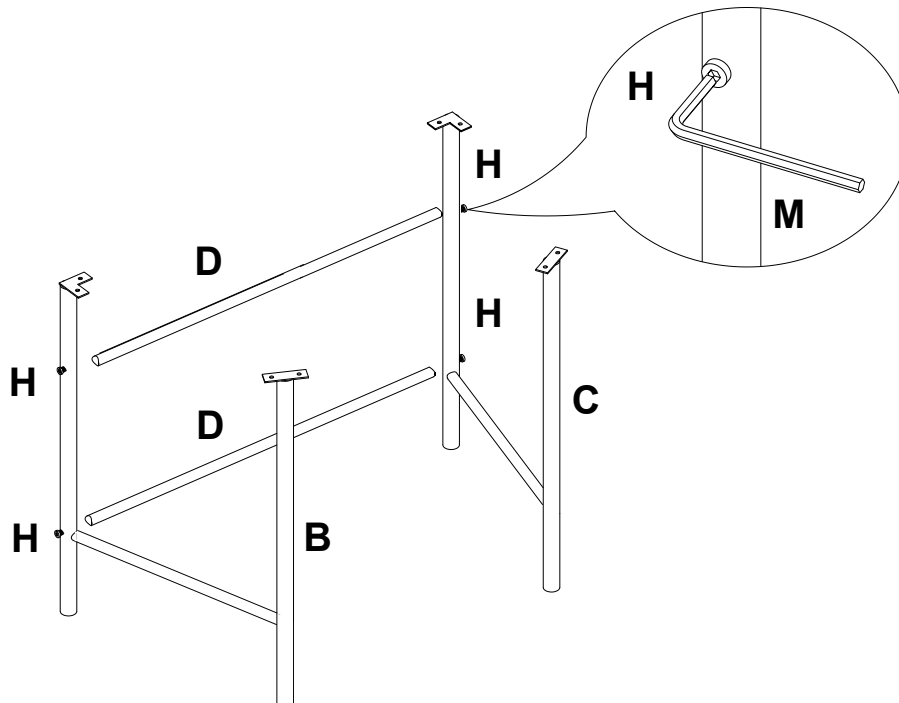

STEP 2

Assemble Legs Frames (B&C) to Top Frame (A) with Bolts (G) and Flat Washers (J) as shown in the drawing below. Tighten with supplied Hex Key (M).

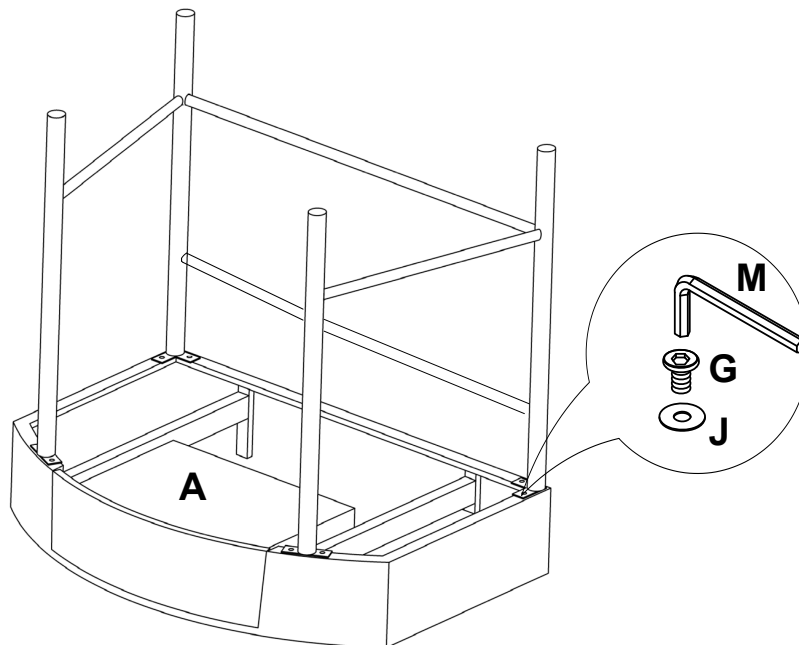


EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be


STEP 3

Assemble Mirror (E) to Top Frame (A) with Connect Bar (F) using Bolt (G&I) and Flat Washer (J) as shown in the drawing below. Tighten with supplied Hex Key(M).

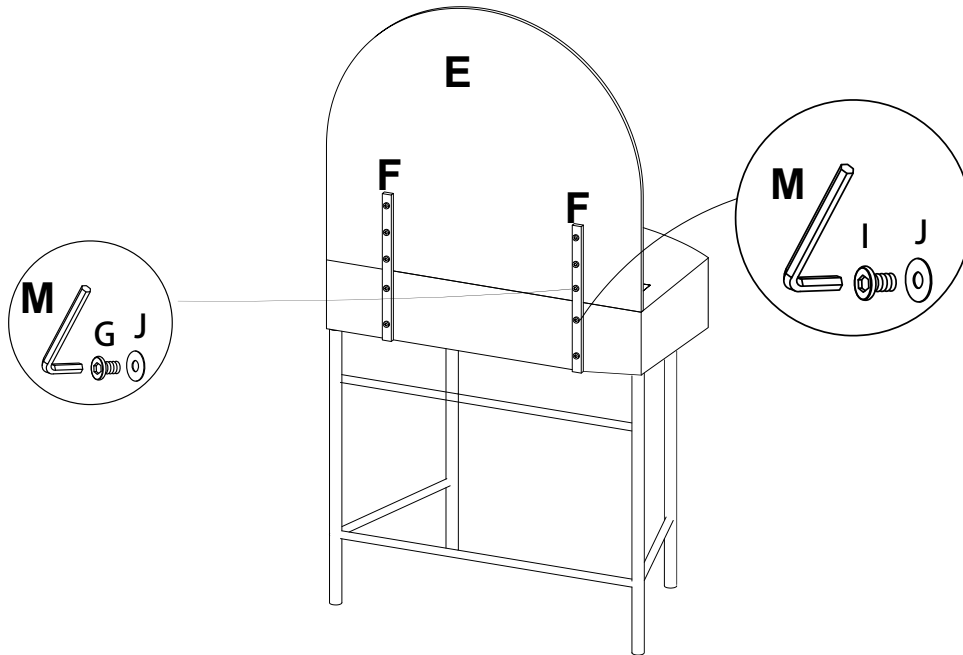

STEP 4

Assemble Metal Bracket (K) to bottom of Top Frame (A) with Bolt (L) as shown in the drawing below. Tighten with Phillips head Screw Driver (not included). Place vanity against wall and mark position through the hole in Bracket (M). Drill hole for Anchor (O) at marked position and screw it into wall. Place vanity back against wall and attach to wall with Screws (N) as shown in the drawing below. Tighten with Phillips Screw Driver (not included).

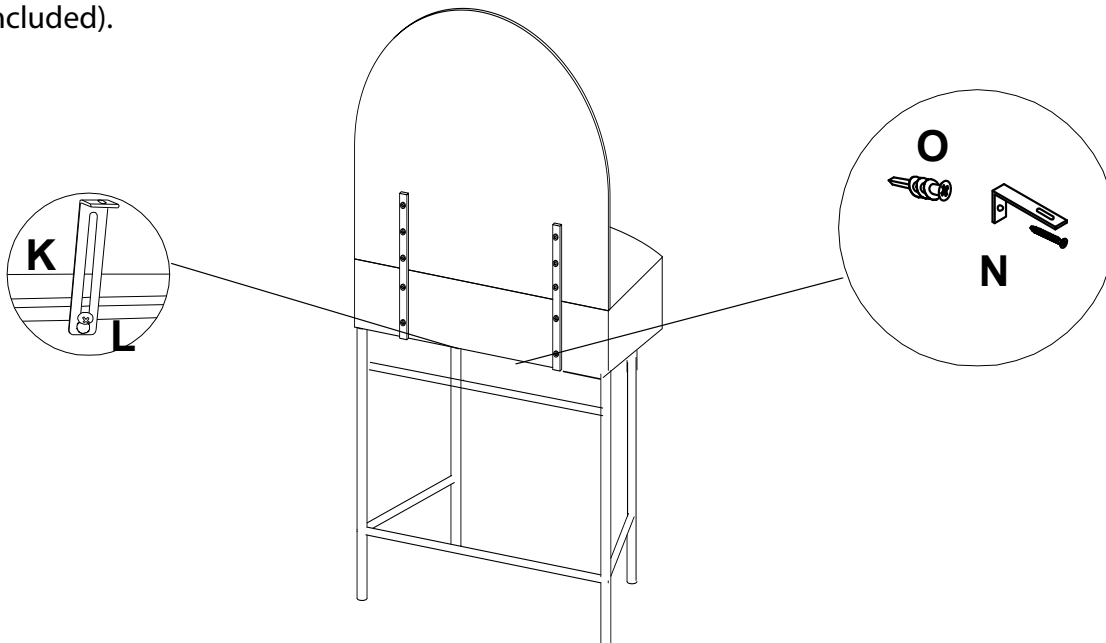

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.

© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be