

# Roma Daybed

## Assembly Instructions

URBAN OUTFITTERS

### TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

### WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

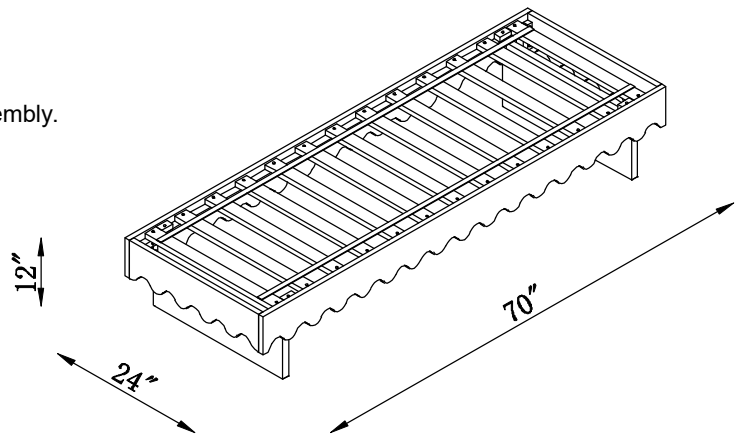


### PARTS INCLUDED:

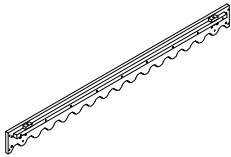


(A) Side rail  
x2

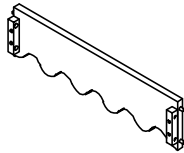

(B) Panel  
x2

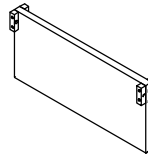


(C) Panel  
x2



(D) Slat  
x1



(E) Hex key  
x1



(F) Bolt  
[1/4" x 1"] x16



(G) Spring washer  
[1/4"] x16




(H) Flat washer  
[1/4"] x16



(I) Screw  
[4 x 30mm] x26

### STEP 1

With help lay the parts out onto a clean smooth surface such as carpet or cardboard. Align the panels (B & C) to the side rail (A). Insert flat washer (H), spring washer (G) and bolt (F). Tighten with supplied hex key (E). Do not over tighten.

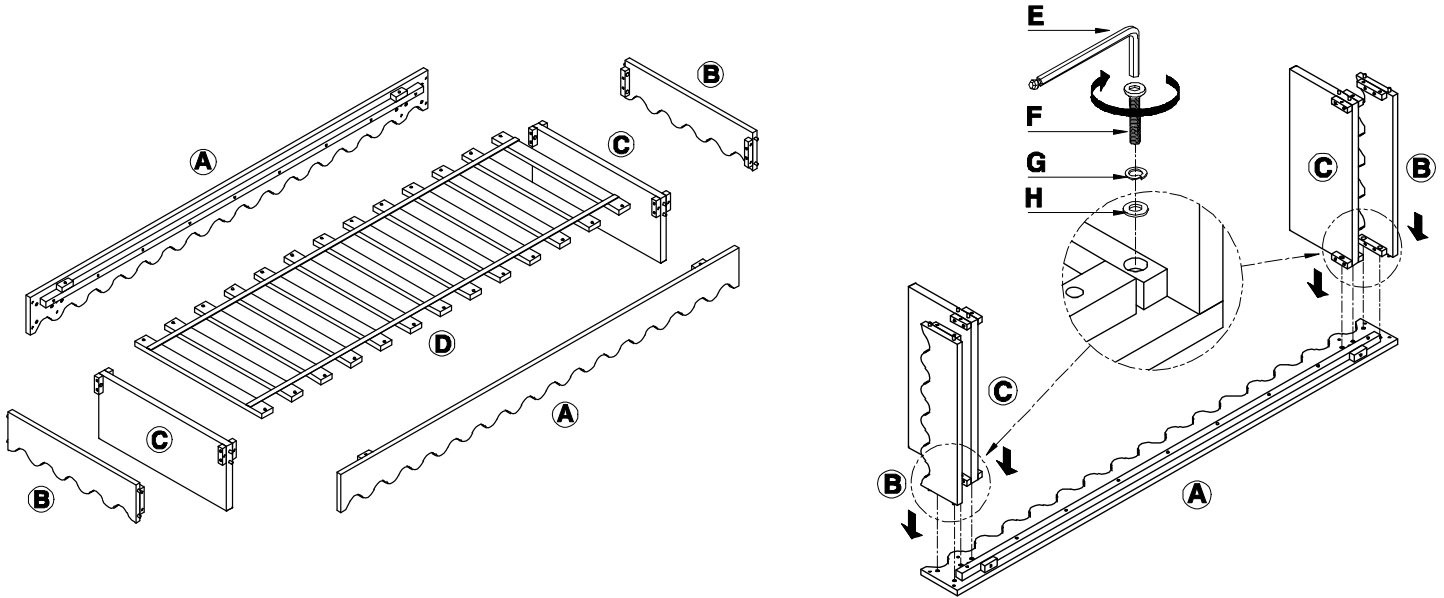

### STEP 2

Align the side rail (A) to the partially assembled case as shown. Insert flat washer (H), spring washer (G) and bolt (F). Tighten with supplied hex key (E). Do not over tighten. Install roll slats (D) as shown. Make sure the last slat locks over the blocks on the side rails and they are in the center of each section and screw down with screws (I) with a Phillips head screwdriver (not included). Do not overtighten!

