


BLOB WALL MIRROR

URBAN OUTFITTERS

Assembly Instructions


PARTS REQUIRED BUT NOT INCLUDED



Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean, smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Blot spills, do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

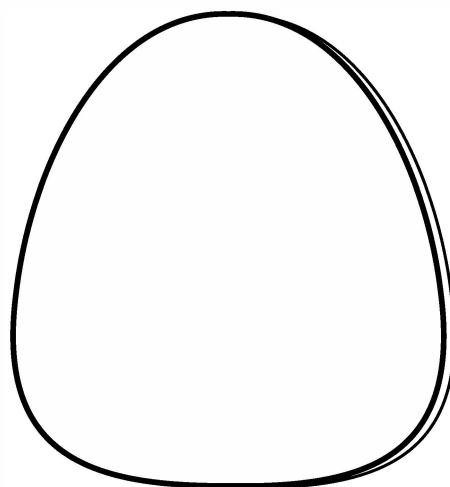


PARTS INCLUDED

(A) Blob Mirror


Front View

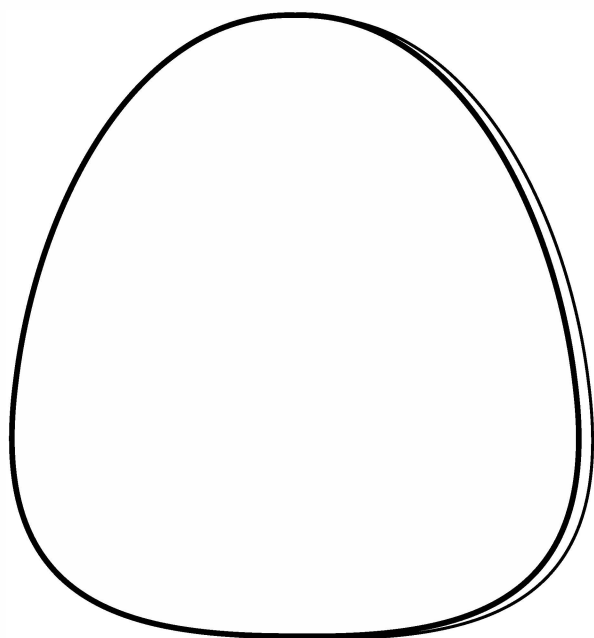

(B) Wall Mount Bracket



Back View

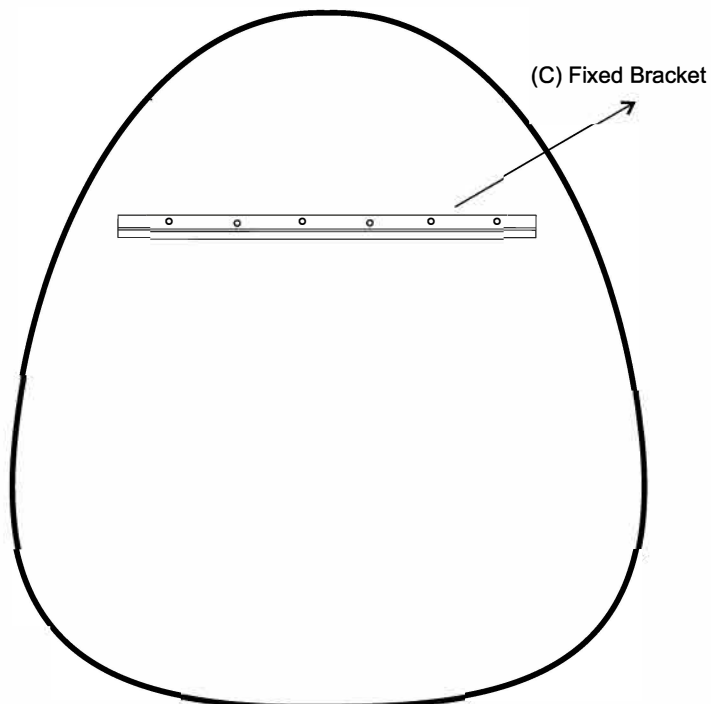

(C) Fixed Bracket


BLOB WALL MIRROR

URBAN OUTFITTERS


Assembly Instructions

STEP 1

Contact your local hardware store to purchase the correct anchors for your wall type. Mark the location of the 6 screw holes on the wall and insert anchors. Align metal wall mount and insert screws. Tighten with screwdriver (not Included).



STEP 2

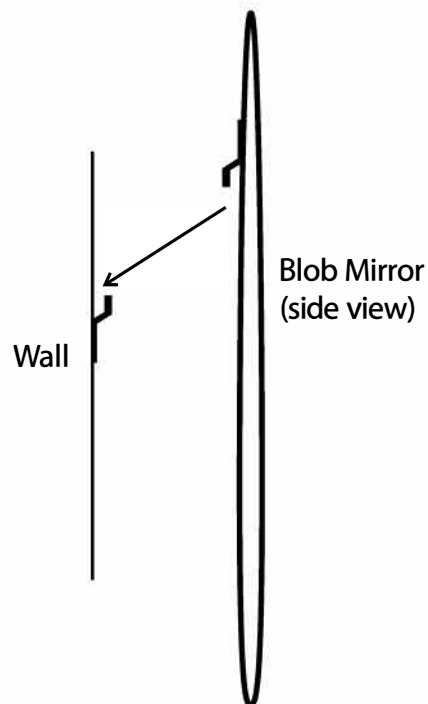

STEP 3

Hang the mirror at the wall bracket.

