


Juliette Queen Bed

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED: Phillips Head Screwdriver

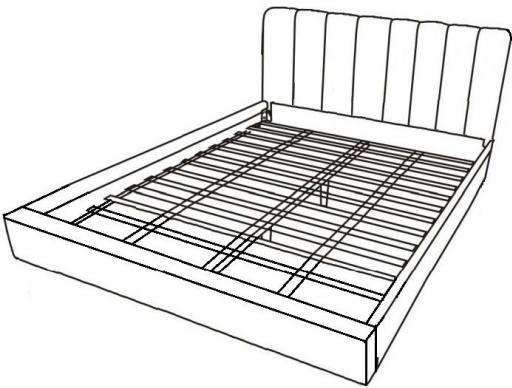


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levels so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.


PARTS INCLUDED

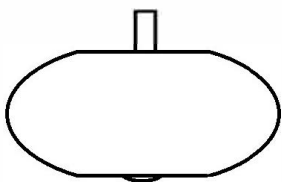


(A) Wooden Legs 4x



(B) screw 42x

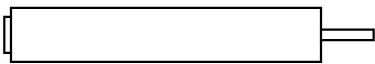


(C) Middle Legs 2x

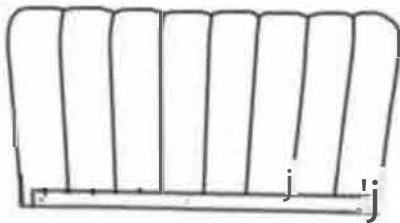

(D) Headboard 1x



(E) Side rail 2x

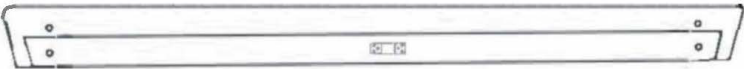

(F) Footboard 1x




(G) Center rail 1x



(H) Roll Slats 1x



(I) Wrench 1x

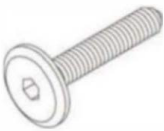


(J) Bolt Bx
Bmmx35mm



(K) Flat washer Bx




(L) Hex Key 1x

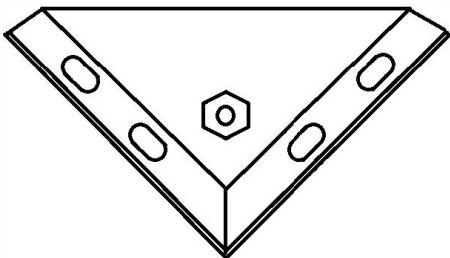

(M) Corner Bracket 2x


Step 1:

With help align the side rails (E) with the headboard (D). Hang and align the iron corner bracket on the bolts as shown. Tighten with wrench (I). Align the footboard (F) with the side rail (E). Hang and align the iron corner bracket on the bolts as shown. Tighten with wrench (I).

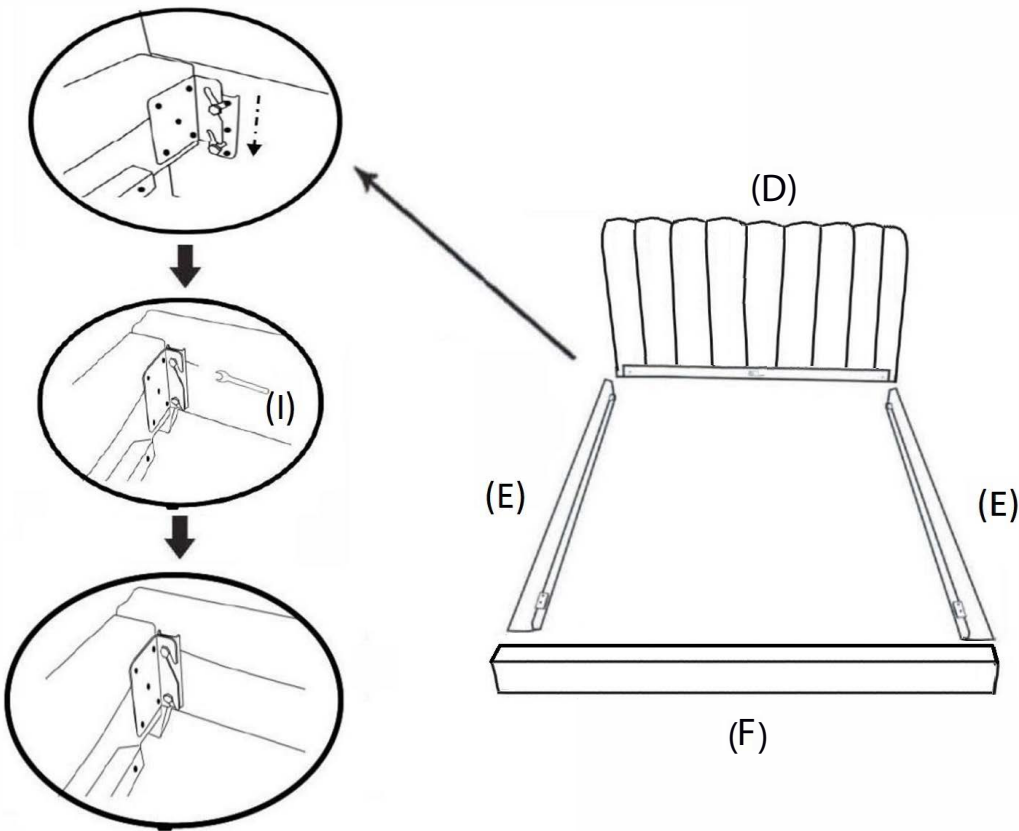


Step 2:

Flip bed over onto a clean smooth surface and align the wooden legs (A) with the Headboard (D). Screw in tight. The Footboard will require the Corner Brackets (M). Align the Corner Bracket and insert Bolts (J) and Flat Washers (K). Tighten with supplied Hex Key (L). Align legs (A) and screw onto Corner Bracket (M). Carefully lay the bed down onto the floor with help.

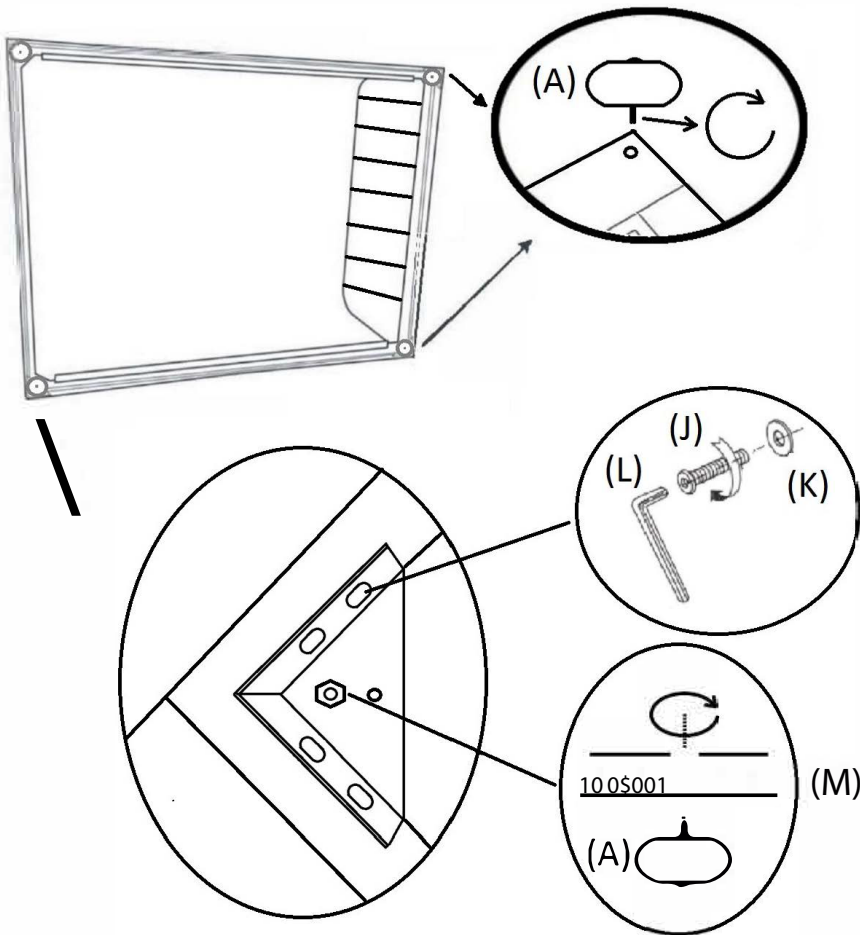

Step 3:

Align center rail (G) with the Headboard and Footboard brackets as shown below. Press firmly into place. Screw in middle legs (C) into the Center Rail as shown. Adjust the Levelers until they touch the floor.

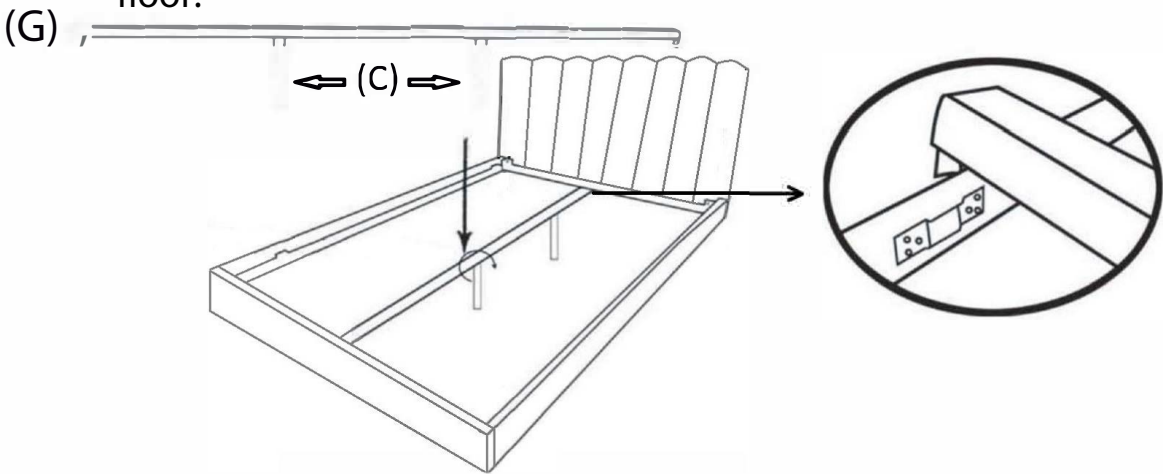


Juliette Queen Bed

Assembly instructions

URBAN OUTFITTERS

Step 4:

1. Make sure your bed is fully assembled and all bolts are tight.
2. With help unroll the slats onto a clean smooth surface.
3. With help carefully lay the roll slats into the bed frame.
4. Locate the "Slat Blocks" mounted on the side rails.
5. The last slat roll will lock the Slat blocks as shown below.

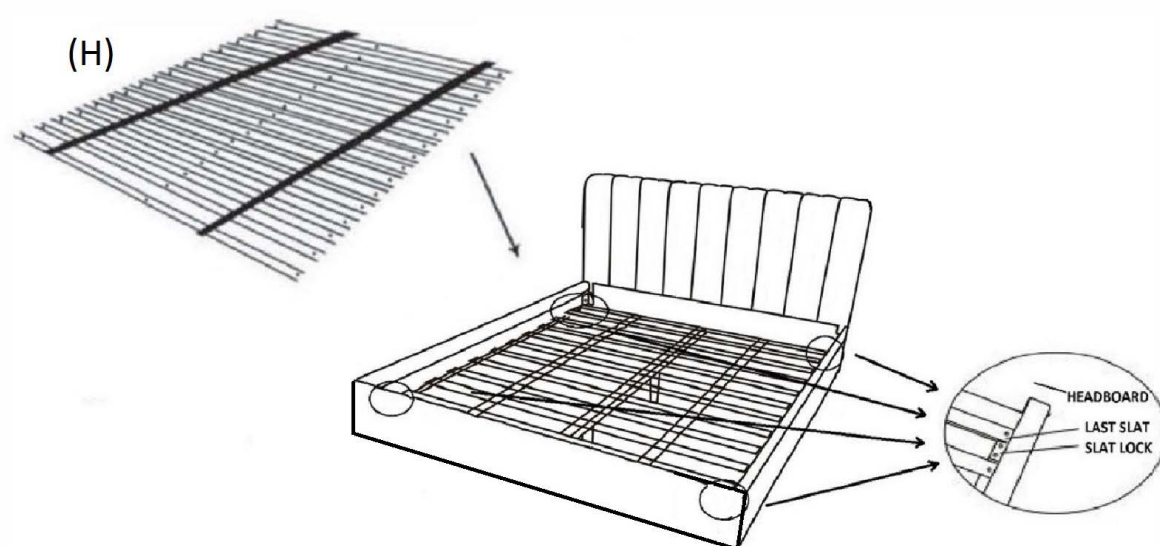

6. Screw in each rail with Screws (B). You may need to re-tighten all bolts after use.

