

# Stacie Tall Cabinet

## Assembly Instructions

URBAN OUTFITTERS

### TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver, Pencil

### WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Anti-Tip Hardware must be in place to ensure safety from tipping.

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

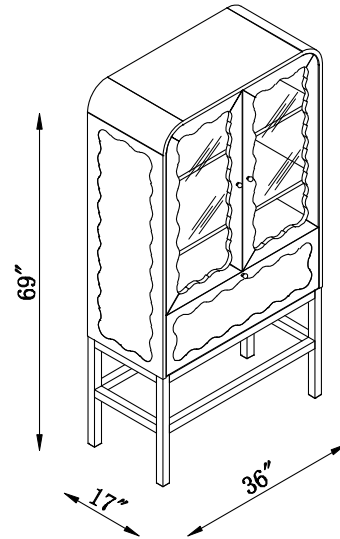


### PARTS INCLUDED:

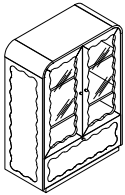


(A) Cabinet  
x1

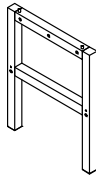


(B) Leg  
x2




(C) Stretcher  
x2



(D) Hex key  
x1



(E) Bolt  
[1/4" x 2-1/6"] x4



(F) Bolt  
[1/4" x 1-3/5"] x6



(G) Half moon washer  
x4




(H) Spring washer  
[1/4"] x10




(I) Flat washer  
[1/4"] x10




(F) Nylon strip  
x1



(K) Bracket  
x2



(L) Screw  
[M3 x 32mm] x2



(M) Screw  
[M3 x 19mm] x2


# Stacie Tall Cabinet

## Assembly Instructions

URBAN OUTFITTERS


### STEP 1

With help, lay the parts out onto a clean smooth surface such as carpet or cardboard. Align the stretchers (C) with the legs (B) and press firmly into place. Locate the holes in the stretcher and insert half moon washer (G), flat washer (I), spring washer (H) and bolt (E). Tighten with supplied hex key (D). Do not over tighten.

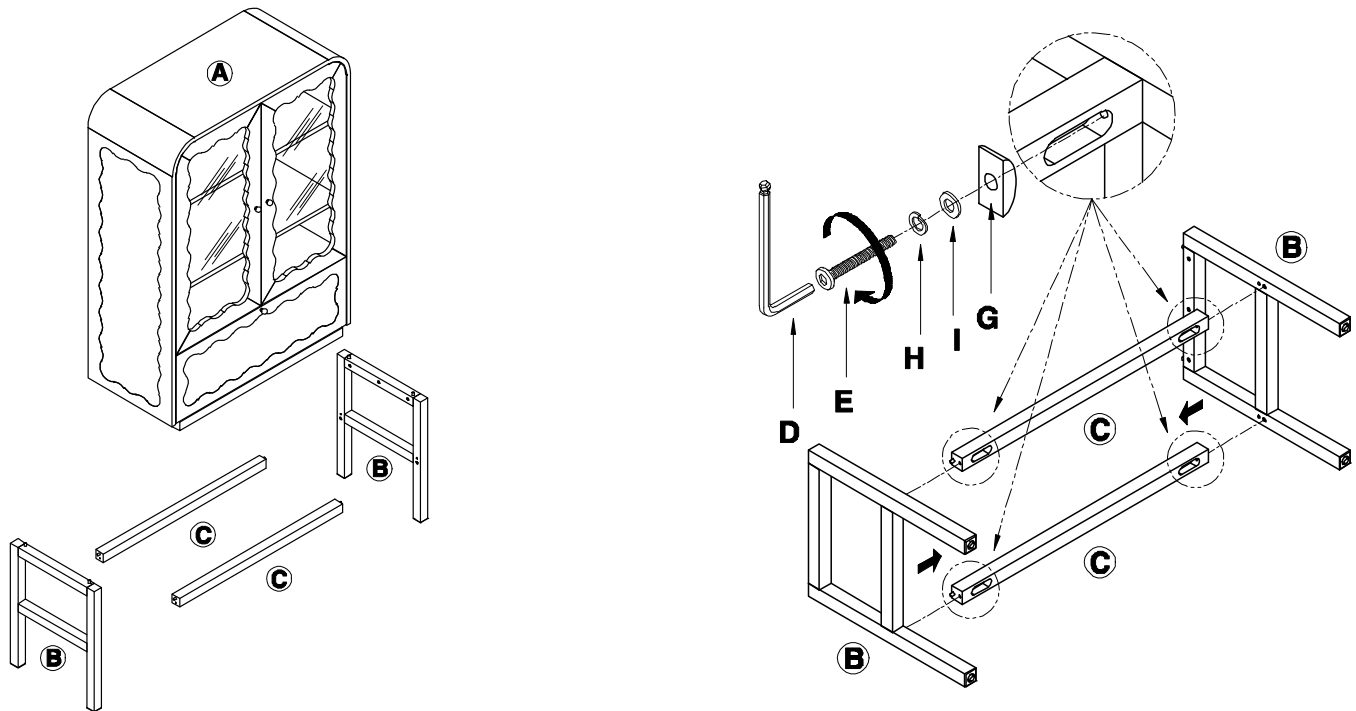

### STEP 2

Align the leg to the cabinet (A) and press firmly into place as shown below. Insert the flat washer (I), spring washer (H) and bolt (F). Tighten with supplied hex key (D) then, with help, flip the cabinet upright making sure you do not lean it on its legs. Adjust the levelers as shown below to accommodate uneven floors.

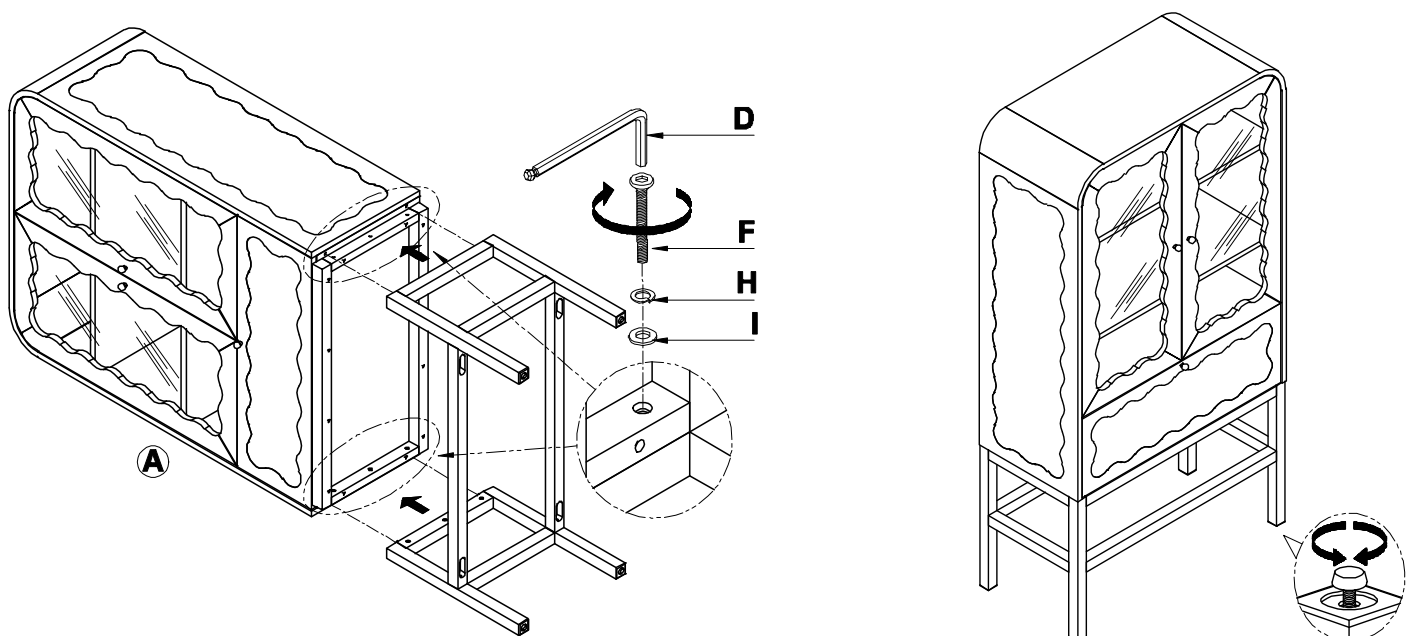


### STEP 3


Use a Phillips head screwdriver and the diagrams below to align the doors if necessary. Perfectly aligned doors are unachievable on highly uneven floors.

#### **DO NOT FULLY LOOSEN THE SCREWS!**


- Left & Right: Loosen / Tighten screw to adjust.

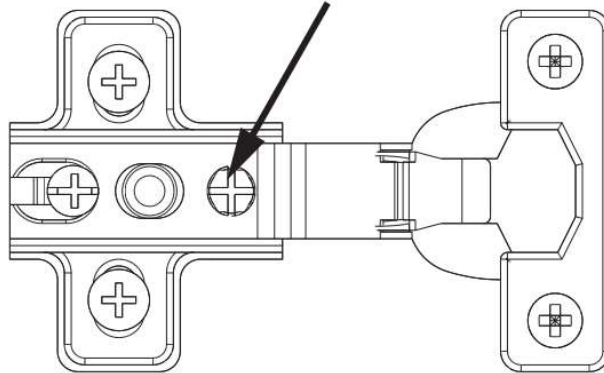

- Front to Back (depth): Loosen screw to adjust.

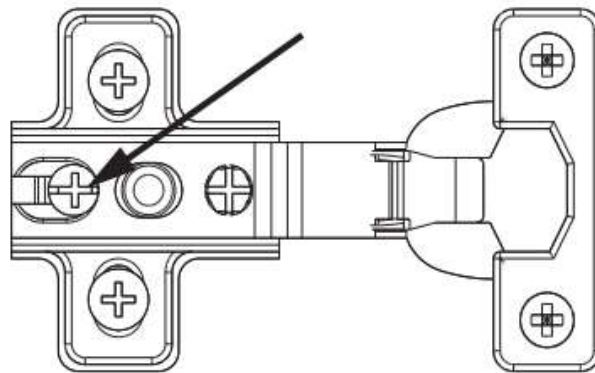

- Up & Down: Loosen screw to adjust.

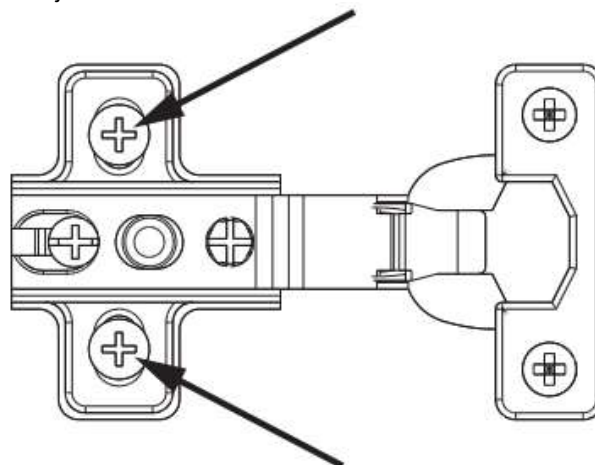

### STEP 4

- A) Align the bracket (K) to the top back of the cabinet as shown. Insert screws (M) and tighten with a Phillips head screwdriver (not included). Place the second bracket (K) against the wall directly behind the cabinet and mark the location.
- B) Wood or Stud installation:  
Insert the screw (L) through the second bracket (K). Then, use a Phillips head screwdriver to fasten the screws (L) directly into the wall at the marked location.
- Drywall installation:  
**Contact your local hardware store to source the correct anchors for your wall type, use any screws included with wall anchor kits to attach anti-tip kit brackets to the wall.** Insert the wall anchors into the wall at the marked locations. Insert the screws (L) through the second bracket (K) and into the anchors, then tighten with a Phillips head screwdriver (not included).
- C) Place the cabinet against the wall aligning the brackets (K), then run the Strap (J) through both brackets (K) and pull it tight to secure the cabinet.

