

ORBIT HEADBOARD QUEEN

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

#2 Phillips head screwdriver, Drill, Pencil, Level

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

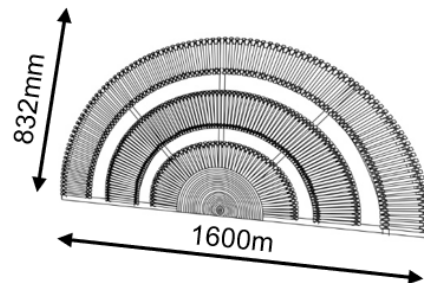


PARTS INCLUDED:



(A) Screw JP
(#8 x 50mm) x2



(B) Plastic Anchor
(#8) x2

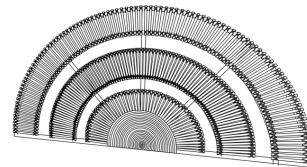

(C) Headboard x1

ORBIT HEADBOARD QUEEN

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Use the measurements in the graphic below to mark the location of the headboard mounting hardware on your wall. If drilling into a stud, drill screws (A) directly into the wall at the marked location, leaving about 1/4" of extending out from the wall surface. If you are hanging the headboard on drywall, pre-drill for the wall anchors (B) at the marked locations and then insert them into the wall. Insert screws (A) into the wall anchors (B) and tighten, leaving about 1/4" of screw extending out from the wall surface. Once screws (A) are secured on the wall, hang the headboard (C) onto the screws.

