

# PETRA COFFEE TABLE

## Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:  
(Not Applicable)

### WARNINGS

Do not throw away packing materials and carton until after assembly.  
Assemble all parts on a clean smooth surface.

### CARE INSTRUCTION:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Do not rub blot spills. Clean with a dry white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

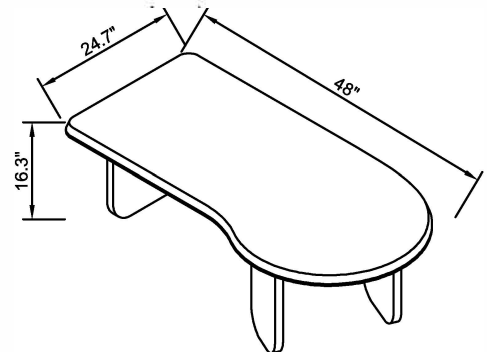


## PARTS INCLUDED

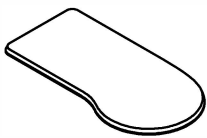

(1) TOP x1



(2) LEG x1



(3) LEG x1



(4) LEG x1



(5) ALLEN BOLT ROUND HEAD  
[M6 X 16mm] x18



(6) WASHER  
[20mm] x18



(7) ALLEN KEY  
[4MM] x1


# PETRA COFFEE TABLE

Assembly Instructions

URBAN OUTFITTERS

## STEP 1

Lay the Top (1) up side down onto a clean smooth surface. Align Legs (2), (3) & (4) as shown (match corresponding part labels). Insert Allen bolts (5) and Washers (6) then, tighten with supplied alien Key (7).

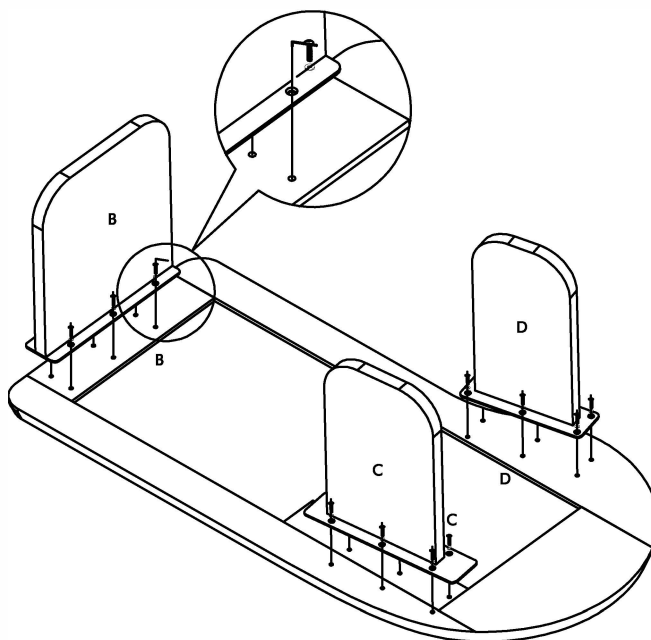

## STEP 2

With help, flip the table upright and adjust the levelers as needed to accommodate uneven flooring.

