

METAL SIDE TABLE

URBAN OUTFITTERS

Assembly Instructions


NO ADDITIONAL TOOLS REQUIRED.

WARNINGS:

Do not discard packing materials and the carton until assembly is complete. Ensure all parts are present prior to assembly. Contact customer service immediately if any parts are missing. Assemble all parts on a clean, smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Blot spills with a clean, white cloth; do not rub.
Do not use harsh chemicals.
Before cleaning any part, test a small spot in a hidden area.
Do not place over heat or air conditioning vents.
Do not over-tighten the parts.
The parts may loosen after initial use; re-tighten as necessary.

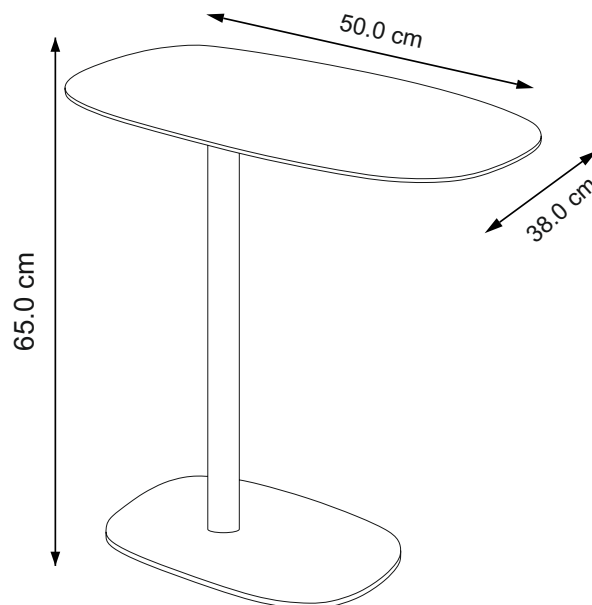

PARTS INCLUDED:



(A) Top

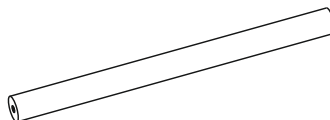

(B) Post



(C) Base



(D) Bolts
[0.75" x 1" D] x1
or
[19mm X 25 mm] x1



(E) Allen Key


METAL SIDE TABLE

URBAN OUTFITTERS

Assembly Instructions

STEP 1

Lay down all the parts on a clean carpet or cardboard for assembly. Screw the post (B) clockwise onto the bottom of the top (A) .
Do not over-tighten the post (B).

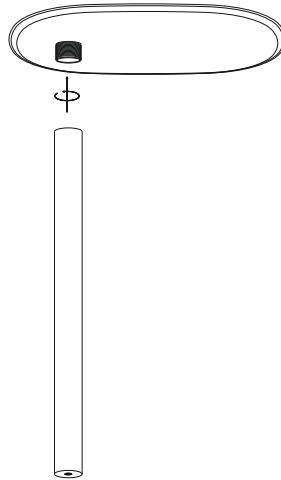

STEP 2

Align the base (C) and post (B) then, insert the bolt (D) through the base (C) into the bottom of the post (B). Use the allen key (E) to screw the bolt (D) clockwise into the bottom of the post (B). Do not over-tighten the bolt (E).

