

CAMILLA BED

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.

Adjust levelers so that the furniture sits flat on uneven floors.


Blot spills do not rub, with a clean white cloth.

Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

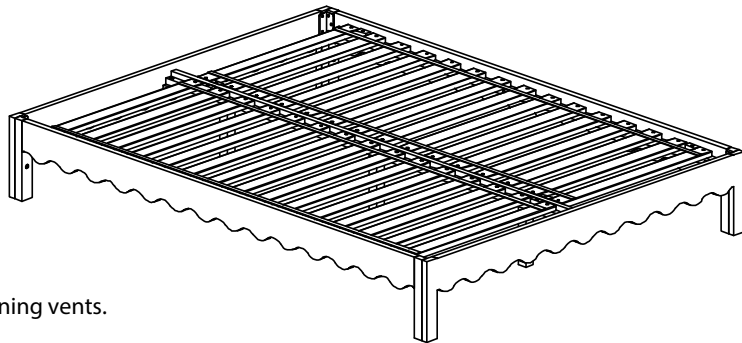


PARTS INCLUDED




(F) Hex key
x1



(G) Bolt
[1/4 x 1-3/4"] x4




(H) Bolt
[1/4 x 1-1/6"] x4



(I) Bolt
[1/4 x 3/4"] x8



(J) Spring washer
[1/4"] x16



(K) Flat washer
[1/4"] x16



(L) Screw
[M4 x 30mm] x60


CAMILLA BED

Assembly Instructions

URBAN OUTFITTERS

STEP 1

Stand the Headboard (A) and align the Side Rails (B) to the Headboard. Insert Flat Washer (K), Spring Washer (J), and Bolt (I) into Metal Brackets. Tighten with supplied Hex Key (F). Locate the holes in the Legs, insert Flat Washer (K), Spring Washer (J), and Bolt (G). Tighten with supplied Hex Key (F). Do not over tighten. Repeat step to attach the Footboard (A). Locate the Center Rail (C) and insert the Center Legs (D). Screw in clockwise to tighten.

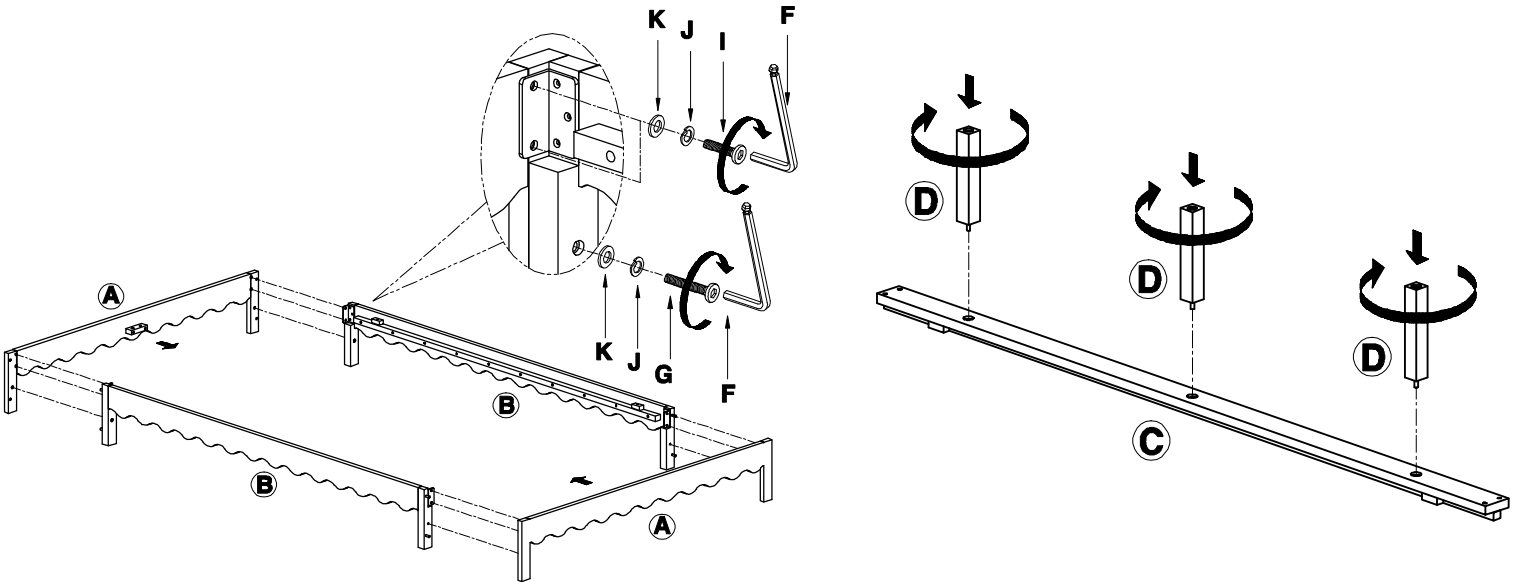

STEP 2

Align Center Rail as shown. Insert Flat Washer (K), Spring Washer (J), and Bolt (H). Tighten with supplied Hex Key (F). Adjust Center Leg Levelers to touch the floor. Install Roll Slats (E) as shown. Make sure the last Slat locks over the blocks on the Side Rails and they are in the center of each section and screw down with Screws (L) with a Phillips head screwdriver (not included).

