

OLLIE DESK

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Drill, Phillips head screwdriver, Hammer, Pencil

WARNINGS:

Two people recommended for assembly

Do not discard packing materials and the carton until assembly is complete.

Ensure all parts are present prior to assembly.

Contact customer service immediately if any parts are missing.

Assemble all parts on a clean, smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Blot spills with a clean, white cloth; do not rub.


Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.


Do not place over heat or air conditioning vents.

Do not over-tighten the parts.


The parts may loosen after initial use; re-tighten as necessary.

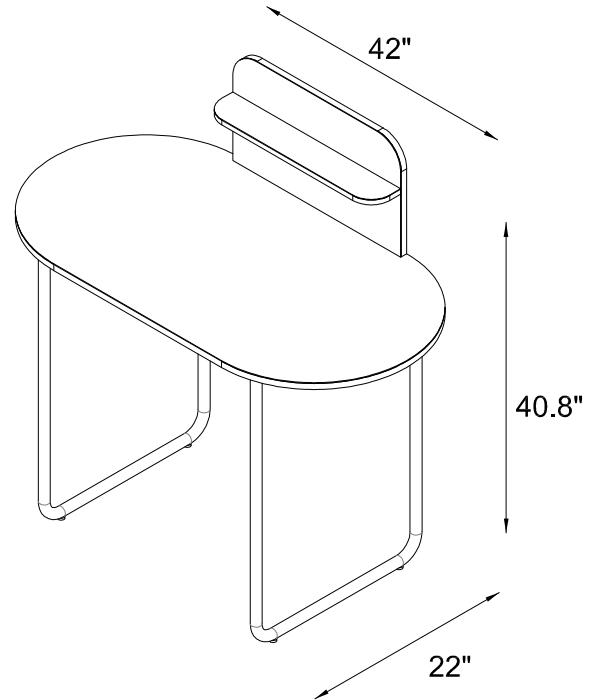


PARTS INCLUDED:

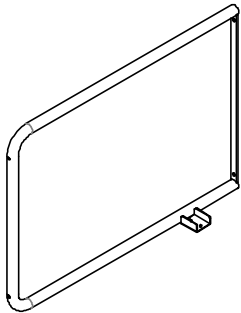


A-L) Left Frame

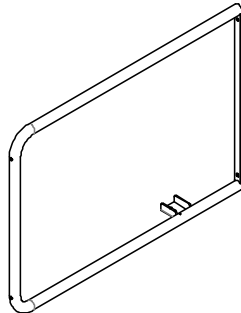


A-R) Right Frame

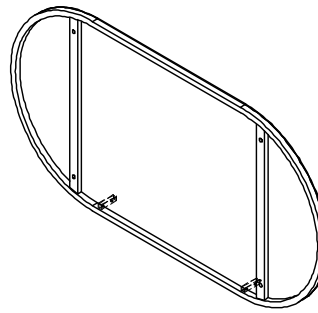


B) Table top

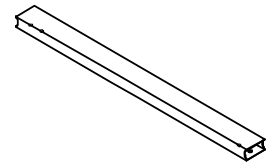

D) Cross Rail

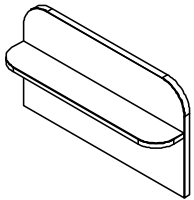

D) Shelf




E) Adjustable Leveler x 4



F) Bolt [M6xL12mm] x 8




G) Bolt [M5xL10mm]
x4



H) Wall Screw [4x32]
x2



I) Drywall Anchor x2



J) Anti-tip Kit



K) Nylon Strap



L) Allen Key (3mm)



M) Allen Key (4mm)


OLLIE DESK

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Lay down all the parts on a clean carpet or cardboard for assembly. Insert Left and Right frame (A-L) (A-R) into cross rail (D). Insert bolts (F), and fully tighten with allen key (L). Screw adjustable levelers (F) into both frames.

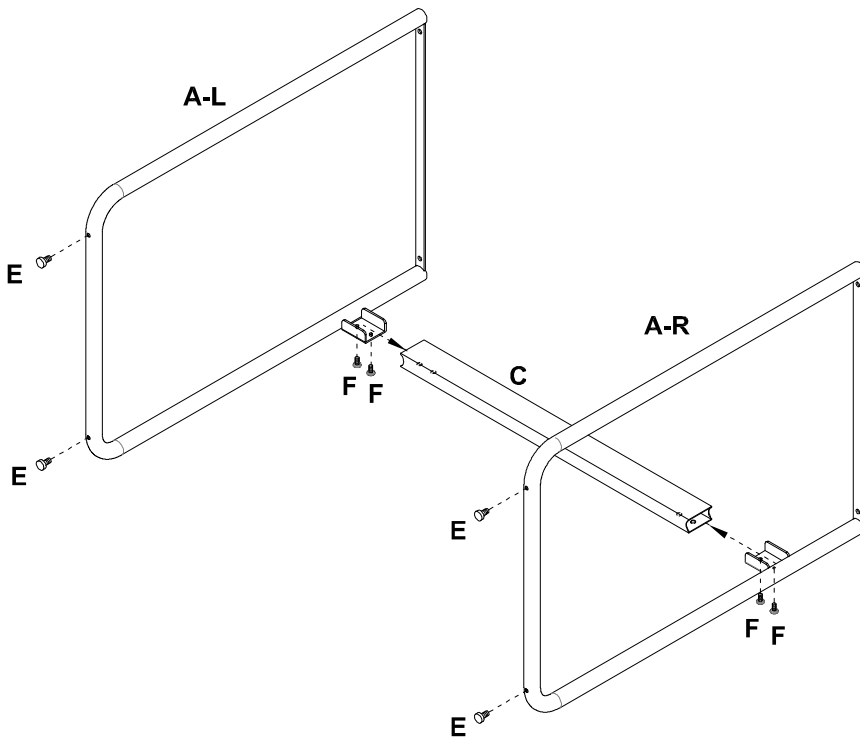

STEP 2

Align table top (B) with the desk base as shown. Insert bolts (F), and partially tighten with allen key (L). Once the bolts are inserted and partially tightened, fully tighten the bolts. With help, flip the desk upright.

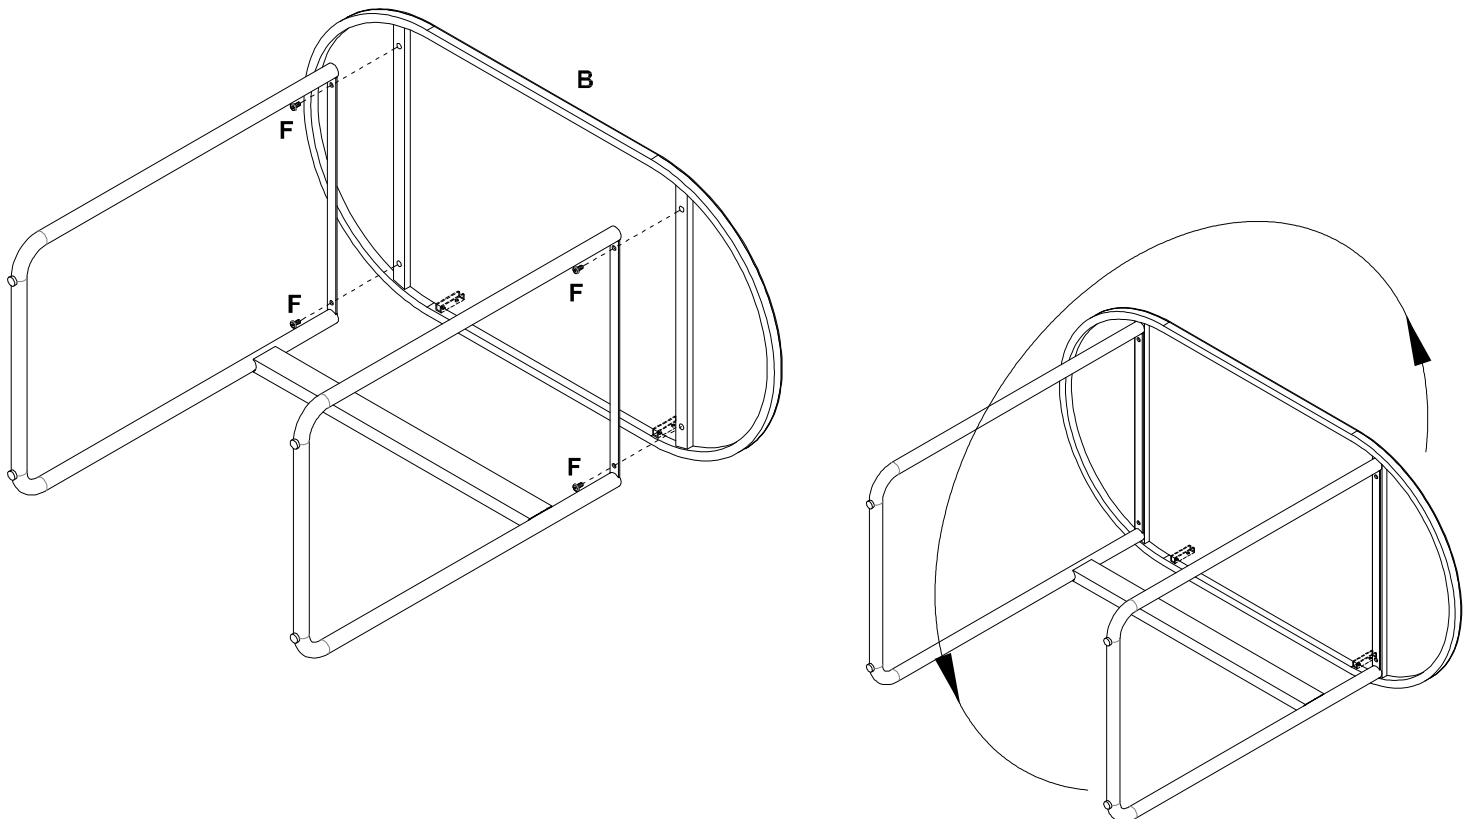


OLLIE DESK

Assembly Instructions

URBAN OUTFITTERS

STEP 3

Align the table top (B) with shelf (D), as shown. Insert bolts (G), and partially tighten with allen key (M). Once all bolts are inserted and partially tightened, fully tighten the bolts.

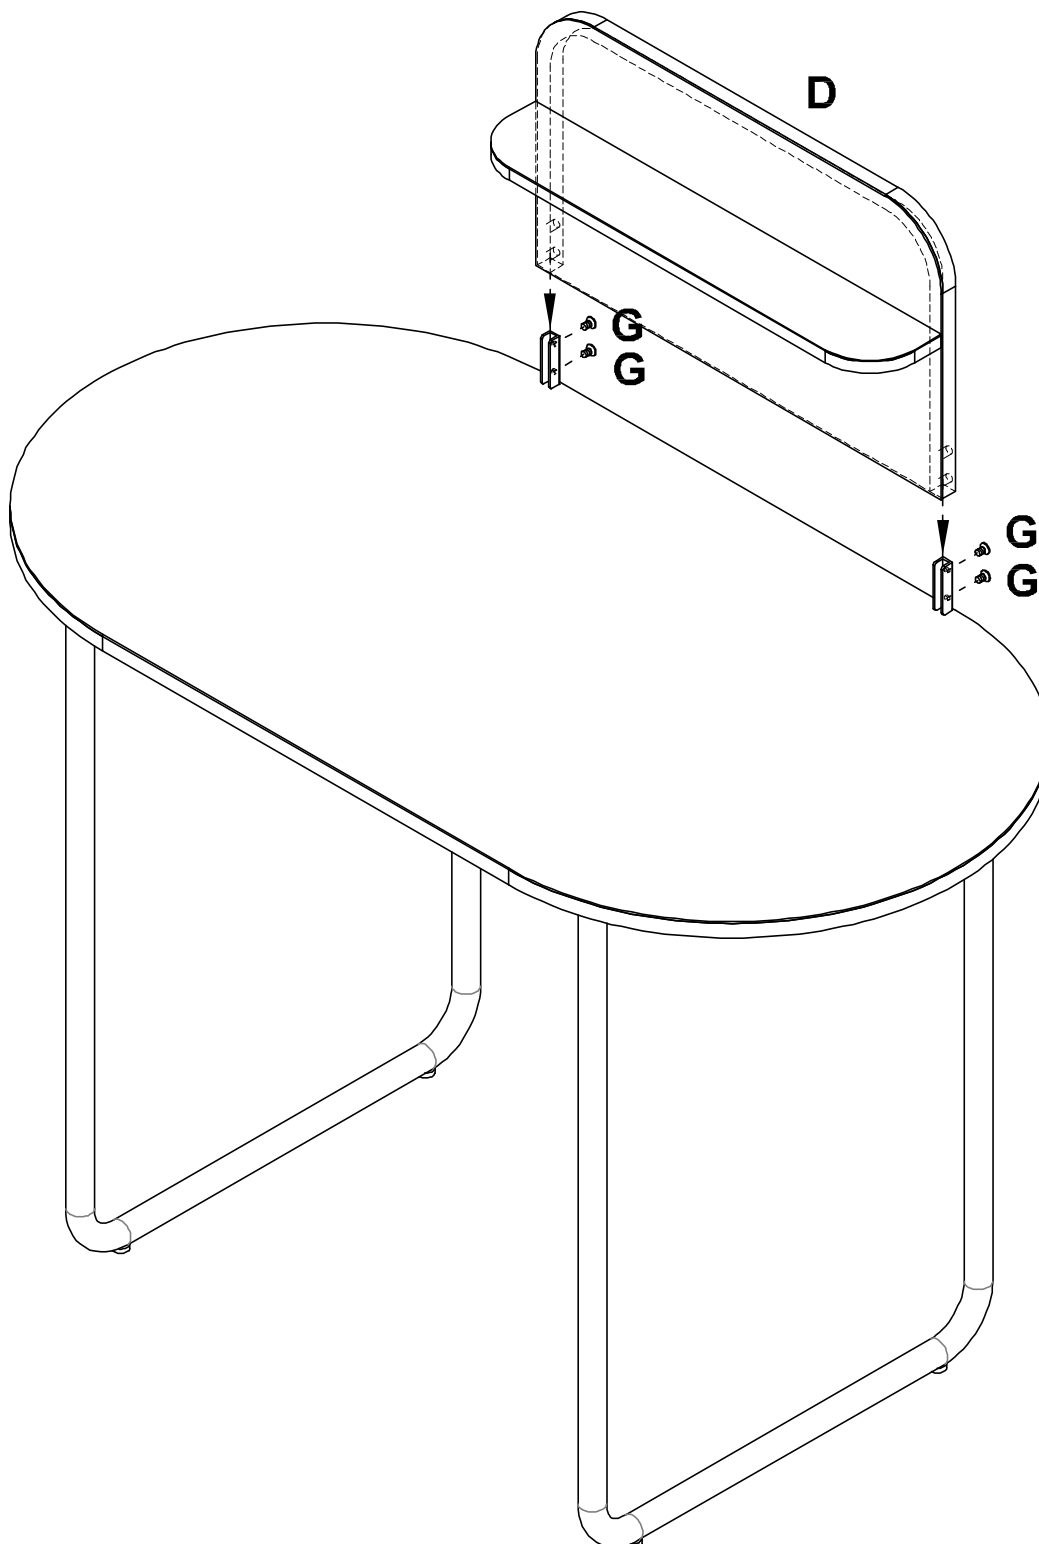

Assembly Instructions

STEP 4 - Anti-tip Kit (optional)

Place the desk against the wall in its desired location then, place the tip kit on the wall below the top shelf, as shown, and mark the location of the holes in the anti tip kit (J) on the wall.

Wood or Stud Installation:


Insert screws (H) through the anti-tip kit (J) into the wall and tighten with a Phillips head screwdriver.

Drywall Installation:

Attach the drywall anchor (I) to the wall at the marked location using a drill and hammer. Insert screw (H) through the anti-tip kit (J) into the drywall anchor (I) and tighten with a Phillips head screwdriver.

STEP 5

Feed the Nylon strap (K) through the anti-tip kit (J) and around the desk then, pull the nylon strap tight.

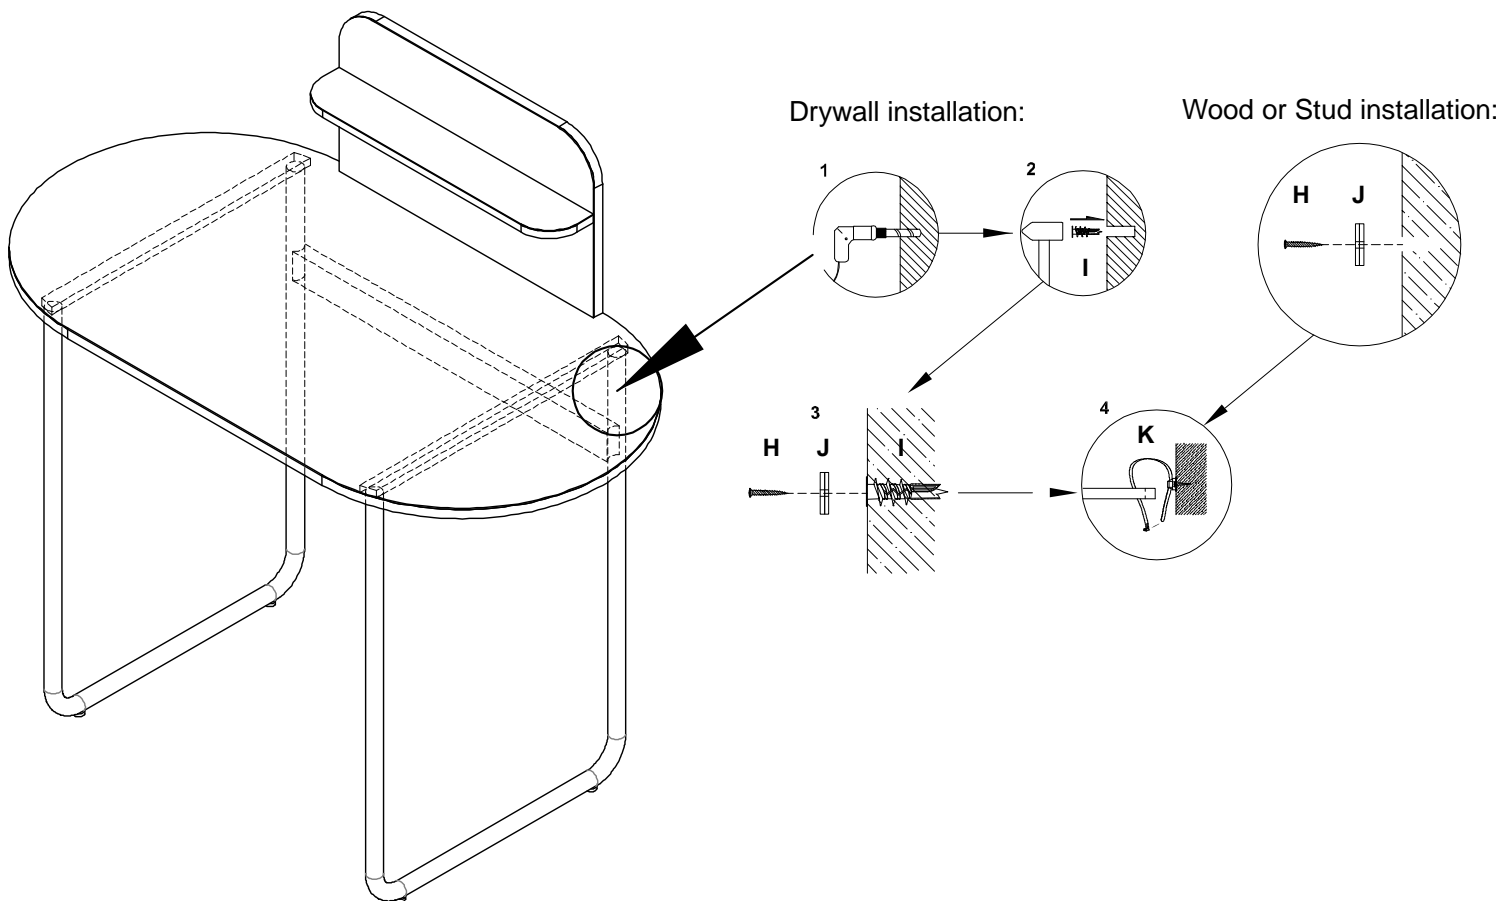

Warning: Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. The tipping restraint is only a deterrent it is not a substitute for proper adult supervision.