

CELESTE WARDROBE

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED


Drill, Phillips head screwdriver, Hammer, Pencil

WARNINGS:


Two people recommended for assembly
Do not throw away packing materials and carton until after assembly is complete.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals
Before cleaning any part test a small spot in a hidden area.
Do not place overheat or air conditioning vents.
Do not over-tighten the parts.
The parts may loosen after initial use; re-tighten as necessary

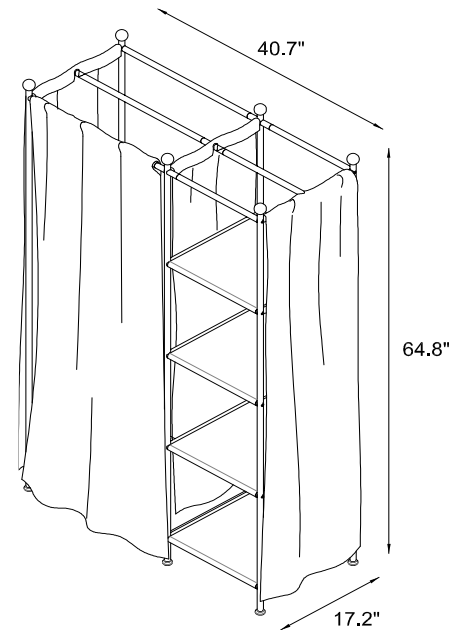


PARTS INCLUDED

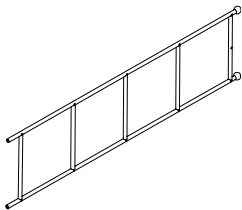


A) Right Frame

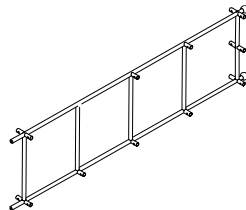


B) Middle Frame

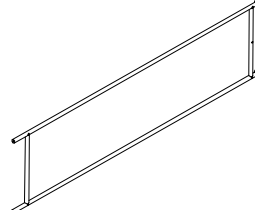


C) Left Frame

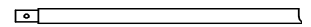

D-R) Back Short Cross Rail x5

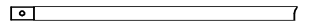


D-L) Front Short Cross Rail x 5

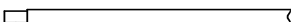


E) Center Short Cross Rail




F-R) Back Long Cross Rail x 2

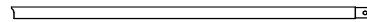


F-L) Front Long Cross Rail x 2

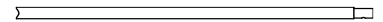

G) Center Long Cross Rail

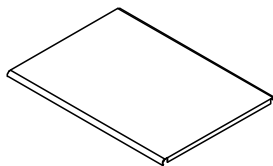


H) Long Sheet Metal

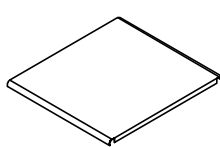


I) Short Sheet Metal x4



J) Small Curtain

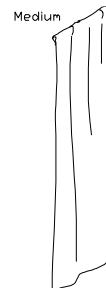

K) Medium Curtain x2

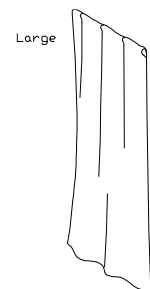

L) Large Curtain



M) Adjustable Levelers x 6




N) Bolt [M6xL38mm] x 16



O) Allen Key (4mm)




P) Bolt [M6xL12mm] x14

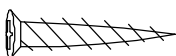

Q) Wall Screw [4x32] x 2



R) Drywall Anchor x2

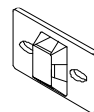


S) Anti-tip Bracket



T) Nylon Strap


STEP 1

Lay down all the parts on a clean carpet or cardboard for assembly. Insert back, front, and center short cross rail (D-R) (D-L) (E) into the right frame (A) and middle frame (B). Ensure the cross rails are aligned correctly as shown. Insert bolts (N) & (P) as shown, and partially tighten with allen key (O). Once all bolts are inserted and partially tightened, fully tighten the bolts. Screw adjustable levelers (M) into bottom of the frame as shown.

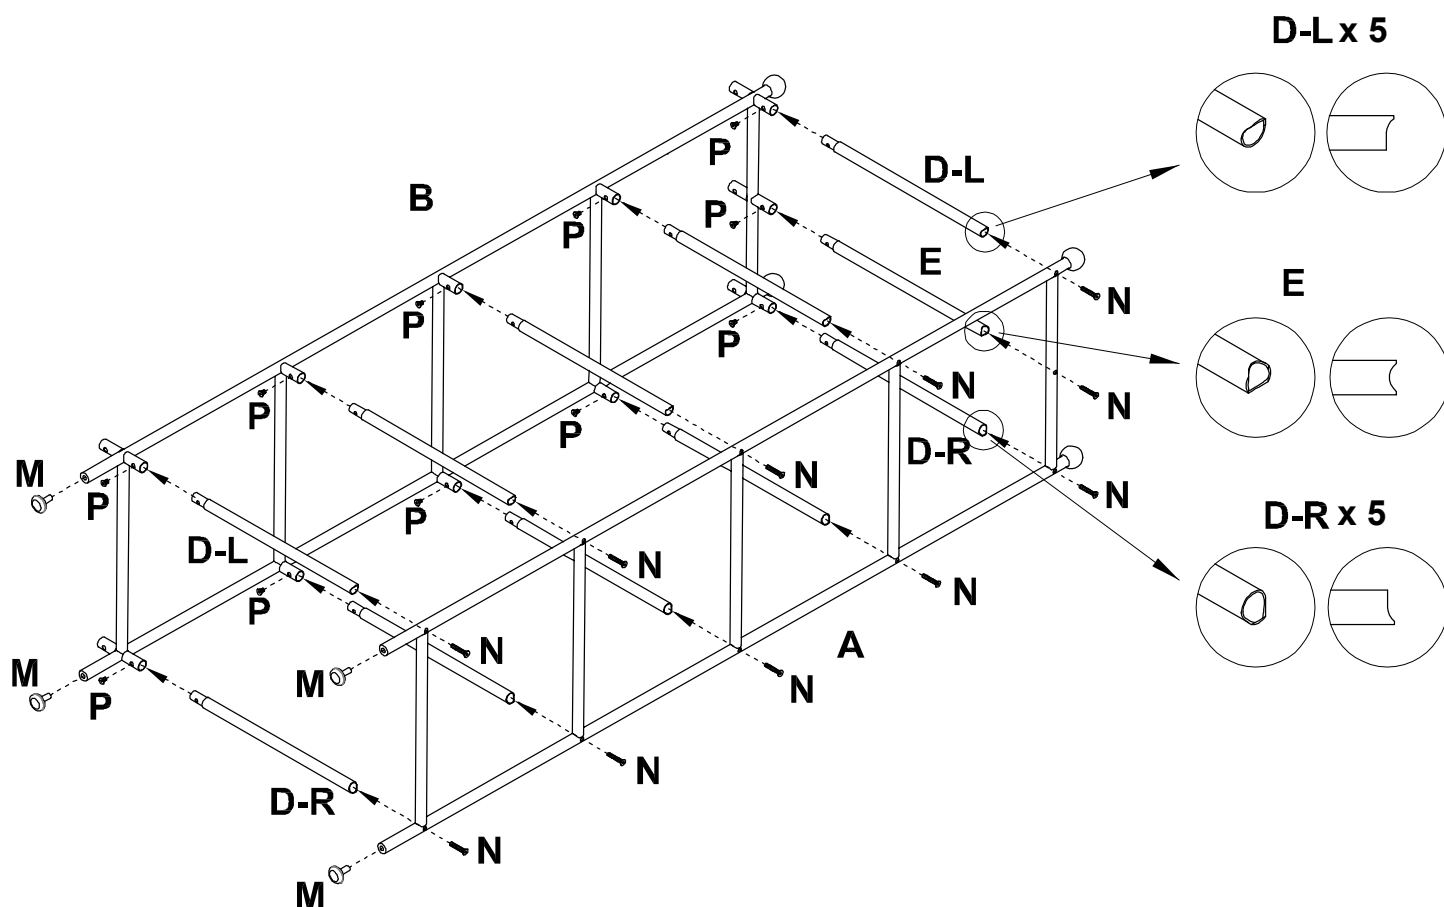


STEP 2

Insert right, left, and center long cross rails (F-R) (F-L) (G) into the middle frame (B). Ensure the cross rails are aligned correctly as shown. Insert bolts (P), and partially tighten with allen key (O).

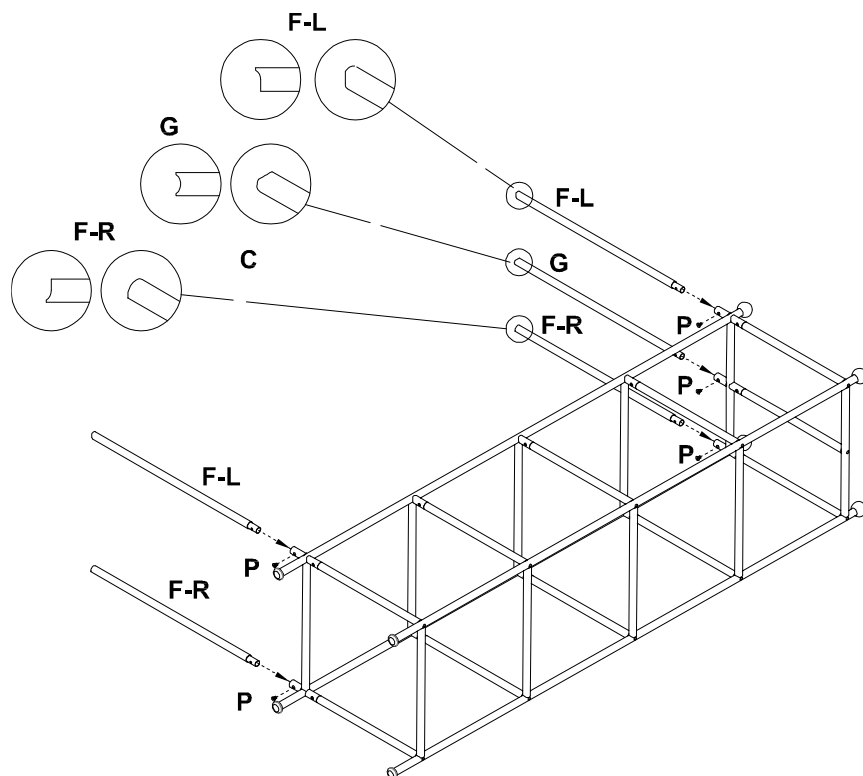



STEP 3

Place the large Curtain (L) around the front Long Cross Rail (F-L) at the top of the partially assembled wardrobe, as shown.

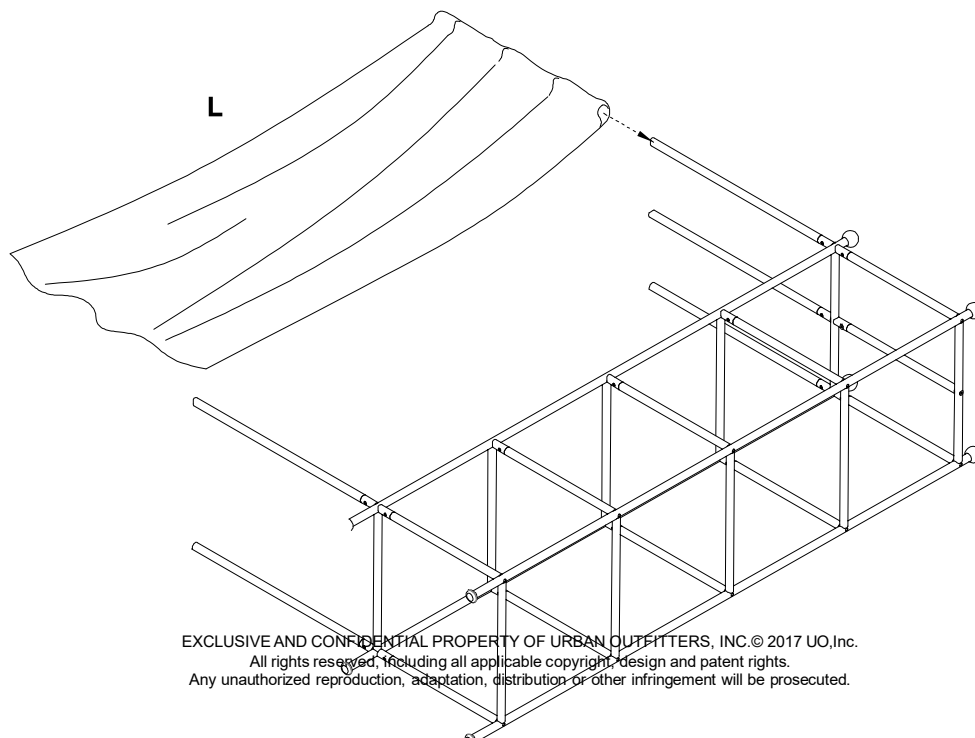



STEP 4

Align Left frame (C) with the partially assembled wardrobe, as shown. Insert bolts (N) and partially tighten with allen key (O). Once all bolts are partially tightened, fully tighten the bolts, including those from STEP 2. With help, flip the wardrobe upright.

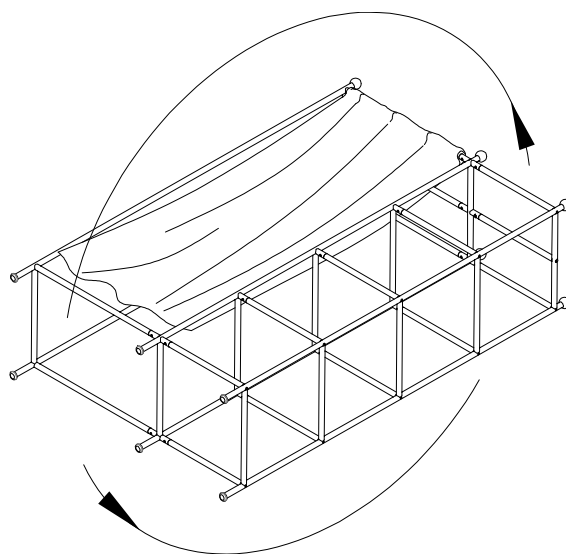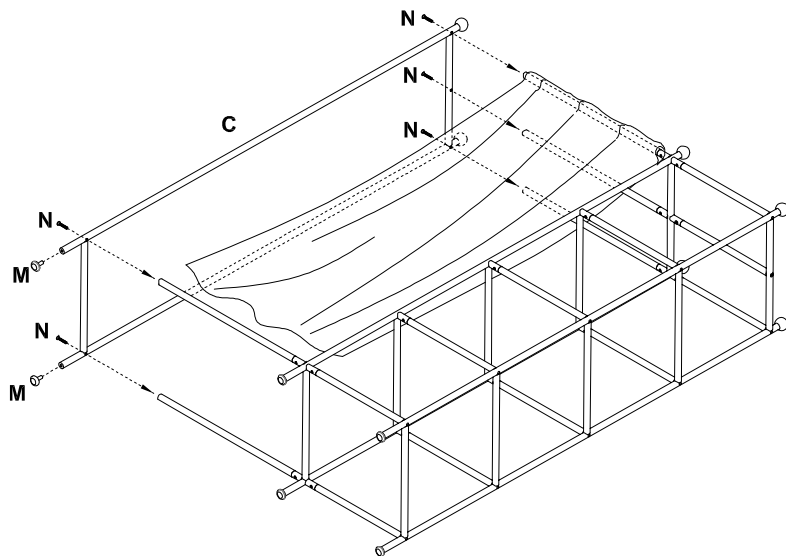

STEP 5

Place the long and short sheet metal shelves (H) (I) onto the cross rails as shown. Hang the medium and large curtains (K) & (J) on the cross rails as shown.

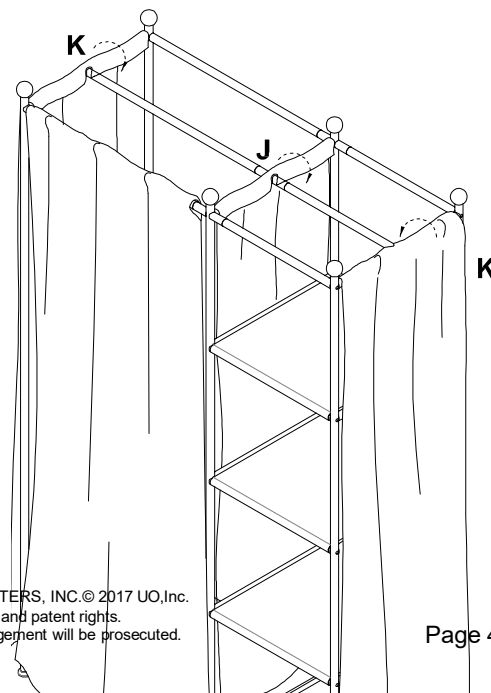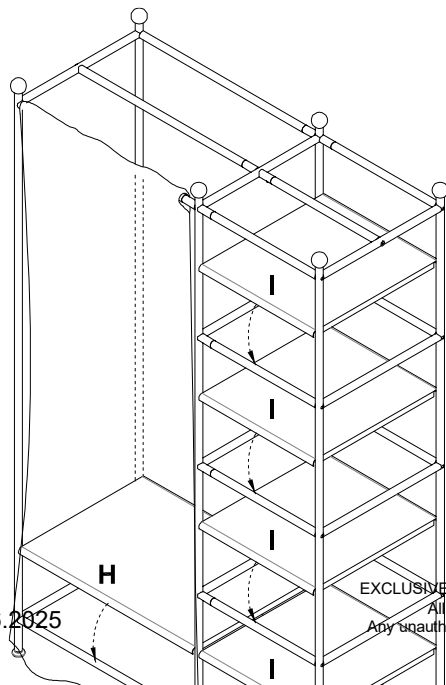

STEP 6 – Anti-tip Kit (optional)

Place the wardrobe against the wall in its desired location then, place the anti-tip brackets (S) on the wall below the top frame on both sides, as shown, and mark the location of the hole in the anti-tip brackets (S) on the wall.

Wood or Stud Installation:


Insert screws (Q) through the anti-tip brackets (S) into the wall and tighten with a Phillips head screwdriver.

Drywall Installation:

Attach the drywall anchors (R) to the wall at the marked location using a drill and hammer. Insert screws (Q) through the anti-tip brackets (S) into the drywall anchors (R) and tighten with a Phillips head screwdriver.

STEP 7

Feed the nylon straps (T) through the anti-tip brackets (S) and around the wardrobe then pull the nylon strap tight.

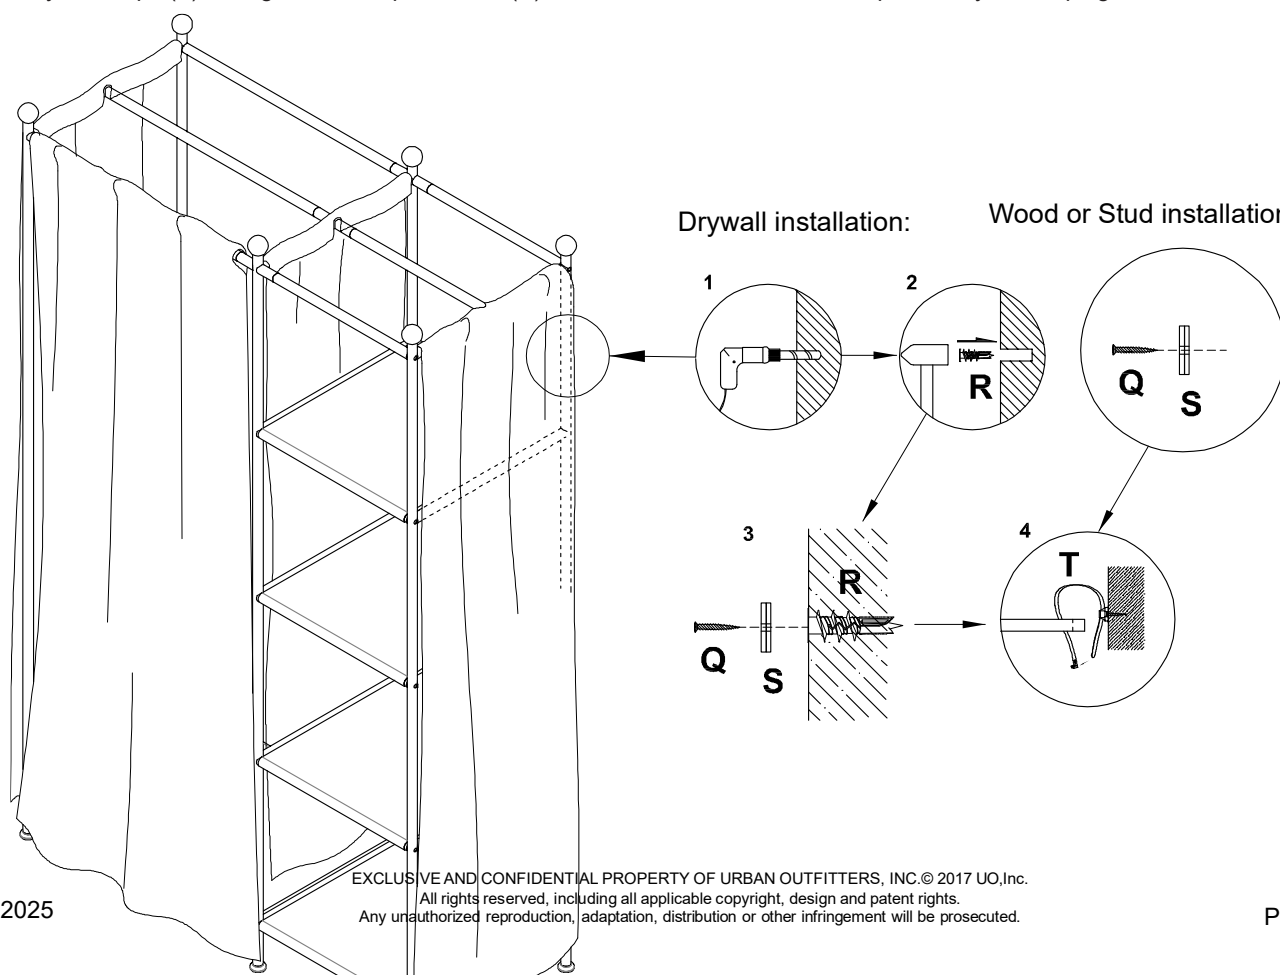

Warning: Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.
The tipping restraint is only a deterrent it is not a substitute for proper adult supervision.