

Amelia 6 Drawer Dresser

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver, Drill, Hammer, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Anti-tip hardware must be in place to ensure safety from tipping.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.

Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.



PARTS INCLUDED:




(A) Dresser x1



(B) Leg x5



(C) Screw JP
(#8 x 3/4") x2




(D) Screw JP
(#8 x 2") x2



(E) Plastic Anchor
(S6) x2



(F) Strap x2

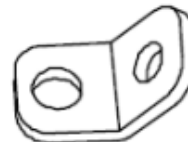

(G) Bracket x4

Amelia 6 Drawer Dresser


Assembly Instructions

URBAN OUTFITTERS

STEP 1

With help flip the dresser (A) over onto a clean smooth surface such as carpet or cardboard. Screw the legs (B) clockwise into the holes in the bottom of the dresser until firm. Do not over-tighten the legs. With help, flip the dresser upright. Adjust the levelers in the bottom of the legs (B) to ensure the dresser sits flat.

Do not tilt the dresser in a way that places its weight onto 2 or fewer legs. To move the dresser, lift it with help. Do not slide the dresser.

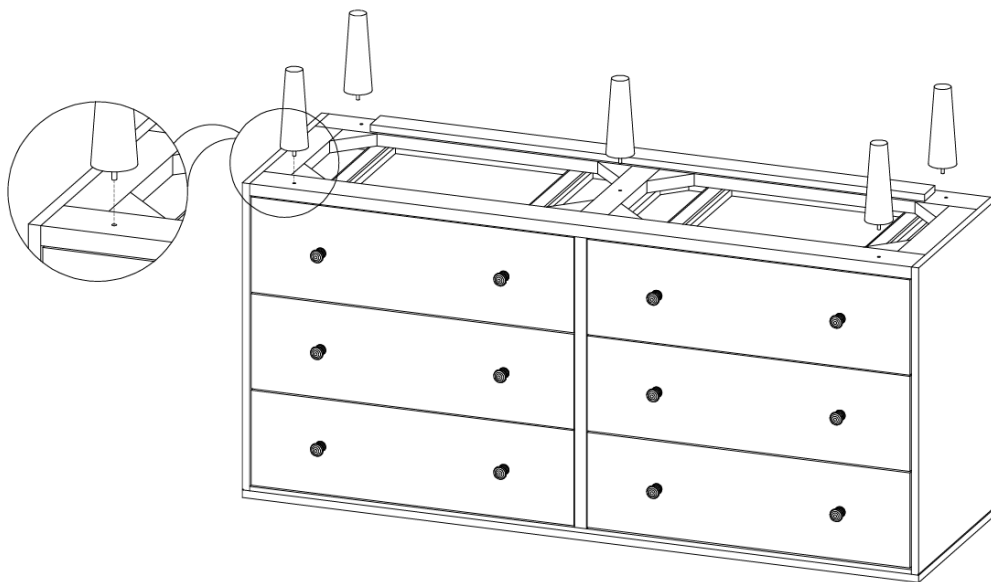

Amelia 6 Drawer Dresser

Assembly Instructions

URBAN OUTFITTERS

STEP 2

- A) Align the brackets (G) to the top back of the dresser (A), as shown. Insert the screws (C) and tighten with a Phillips head screwdriver (not included). Place the second brackets (G) against the wall directly behind the dresser (A) and mark the location.
- B) Wood or Stud installation:
Insert screws (D) through the second brackets (G). Then, use a Phillips head screwdriver to fasten the screws (G) directly into the wall at the marked location.
- Drywall installation:
Insert the plastic anchors (E) into the wall at the marked location using a drill and a hammer (not included). Insert screws (D) through the second brackets (G) and into the anchors (E), then tighten with a Phillips head screwdriver (not included)
- C) With help, move the dresser (A) against the wall aligning the brackets (G), then run the Strap (F) through both brackets (E) and pull it tight to secure the dresser (A).

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

