

ARIA HEADBOARD

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

Level

Pencil

Straight edge


Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area. You may need to re-tighten all bolts after initial use.

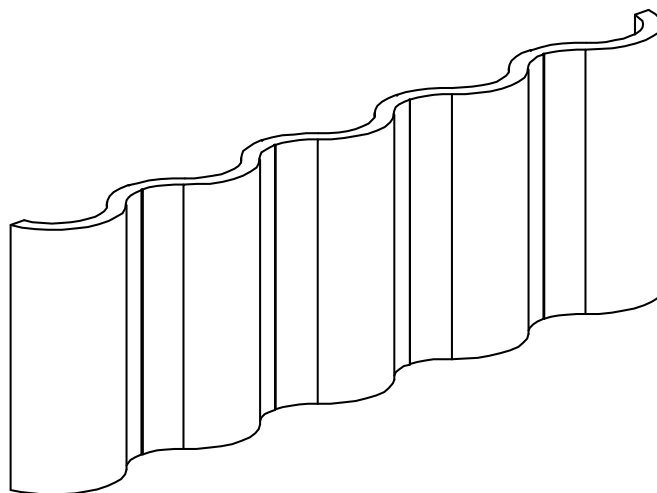


PARTS INCLUDED

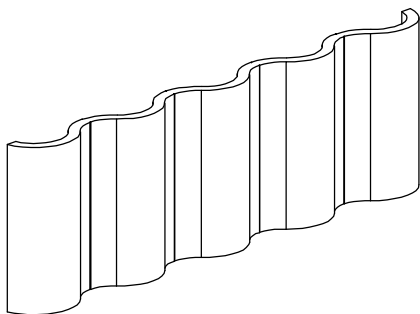


A) Headboard
x1

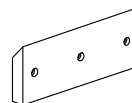

B) Cleat
x2

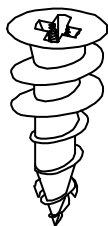

(C) Metal Anchor
[M15 x 28mm] x6





(D) Machine Screw
[M8 x 35mm] x6

Assembly Instructions

STEP 1

- With help, determine the desired location of the headboard (A) (recommended min. height shown below). Ensure headboard (A) is level and mark a line across the top, and down the sides with a pencil. Mark the center of the headboard (A) with a pencil on the top line.
- Locate the vertical position of the cleat (B) holes by measuring 390 mm or 15.35" straight down from the top line at its center. Mark the position with a pencil.
- Locate the horizontal position of the first cleat (B) holes by measuring 301 mm or 11.85" to the left and right of the center. Ensure level and mark the location with a pencil.
- Center the first holes of the cleat (B) on the marked locations of holes on the wall, ensure level, then mark the locations of the additional two holes. Remove the cleat and screw the metal anchors (C) into wall at the marked locations.
- Attach cleats (B) by screwing machine screws (D) through the cleats into the metal anchors (C).

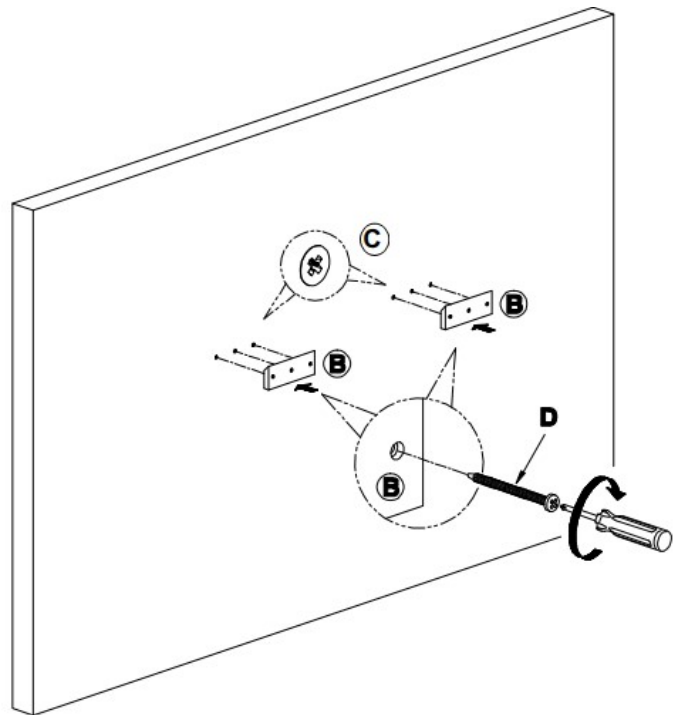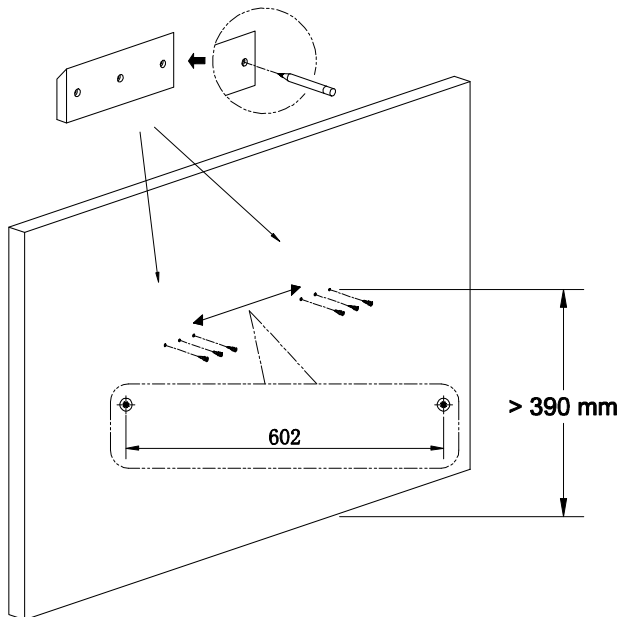

STEP 2

With help hang the Headboard (A) onto the French Cleat (B).

