

Beatrice Vanity

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

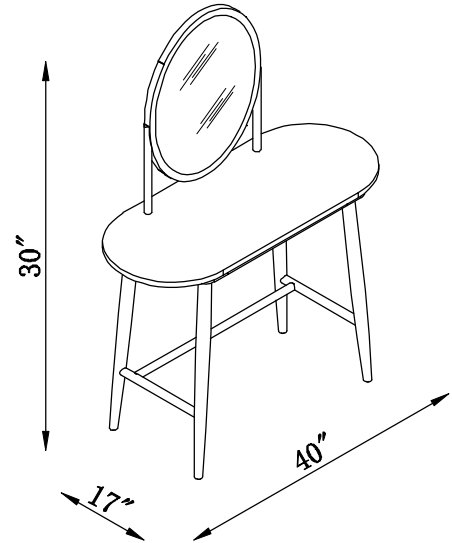


PARTS INCLUDED:




(A) Mirror
x1

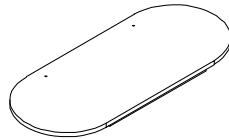


(B) Top Panel
x1



(C) Leg
x1




(D) Leg
x1




(E) Stretcher bar
x1



(F) Hex key
x1



(G) Bolt
[1/4" x 1-3/4"] x2



(H) Bolt
[1/4" x 1-1/8"] x10



(I) Spring washer
[1/4"] x12



(J) Flat washer
[1/4"] x12



(K) Cam bolt
[M6 x 51mm] x2




(L) Cam Bolt
[ø14 x 13mm] x2



(M) Grub screw
x2


STEP 1

With help lay the legs (C) & (D) over onto a clean smooth surface such as carpet or cardboard. Insert cam bolts (K) and screw into the legs with a Phillips head screwdriver. Do not over tighten.

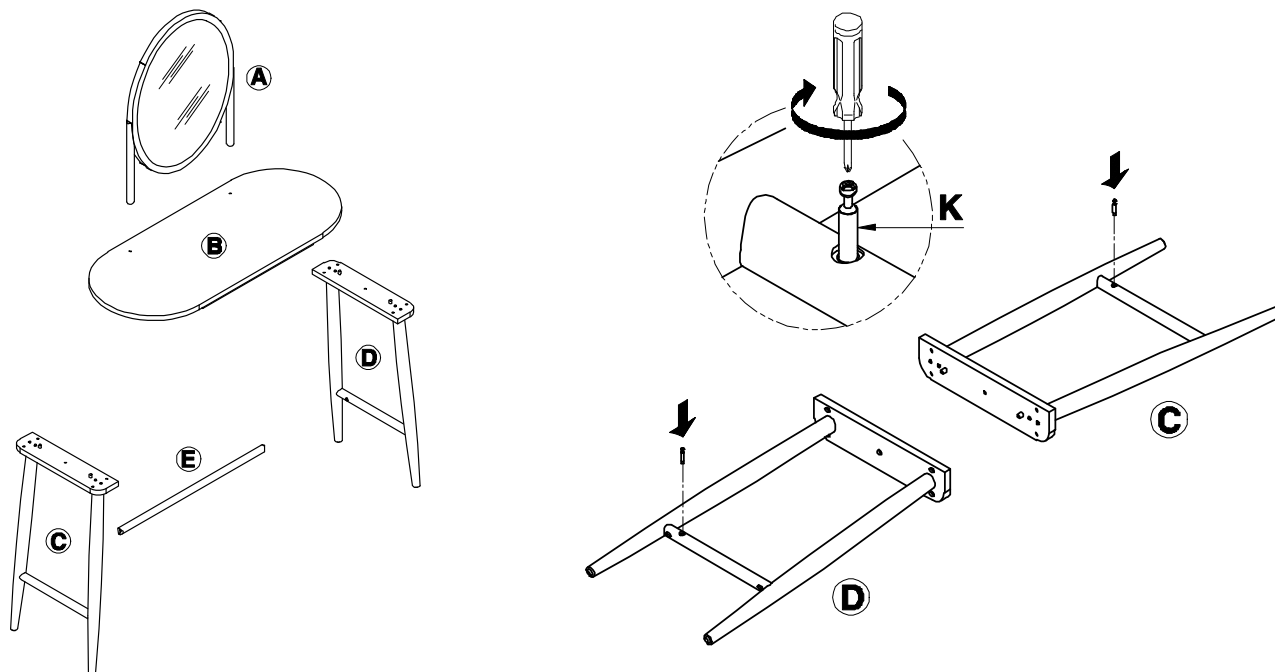


STEP 2

Insert cam locks (L) into the pre-drilled holes in the stretcher bar (E). Loosen the grub screws (M) installed within the cam locks (L) with hex-key (F). Leave about 2mm between the top of the grub screw head and cam lock. Align the legs (C & D) to the stretcher bar (E) and press firmly together. Tighten the grub screw (M) with the supplied hex key (F).

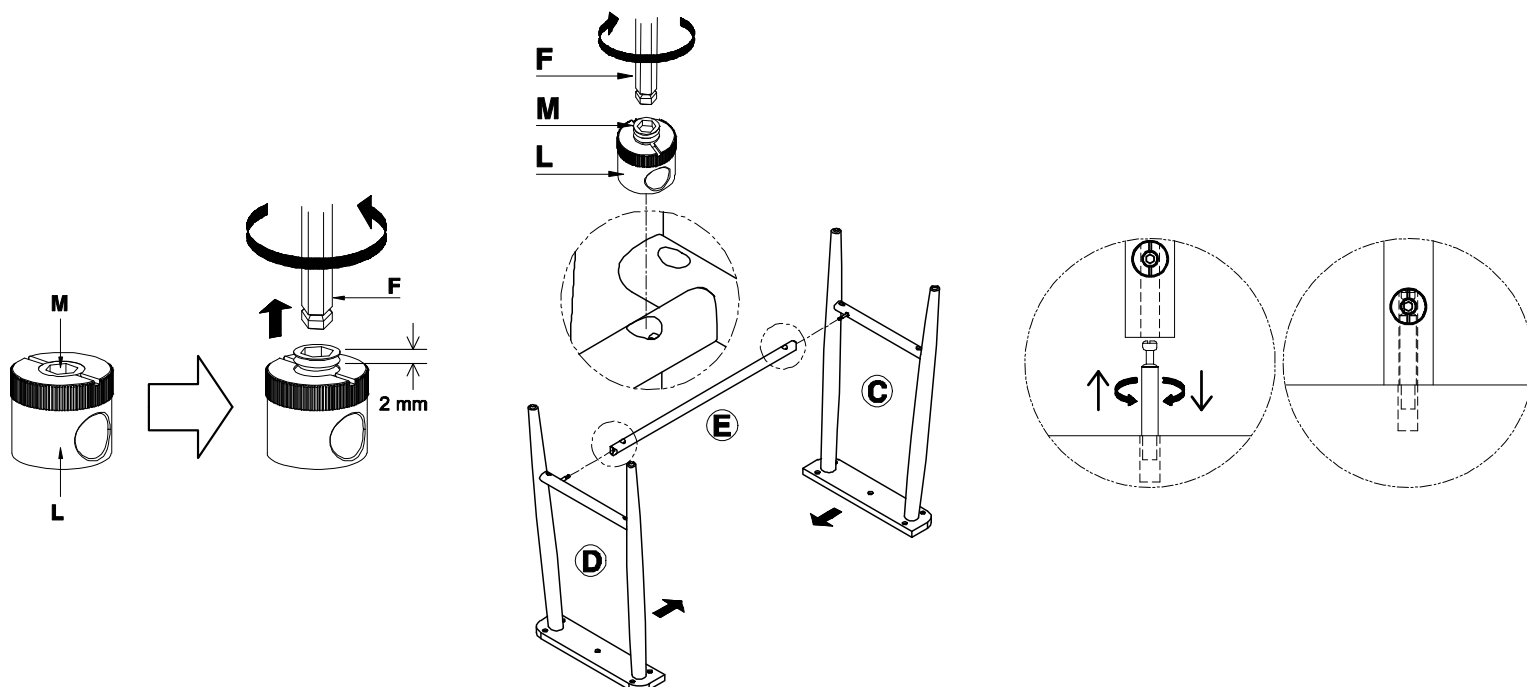

STEP 3

Align the partially assembled leg to top panel (B) and press firmly into place. Insert flat washer (J), spring washer (I), and bolt (H). Tighten with supplied hex key (F). Do not over tighten!

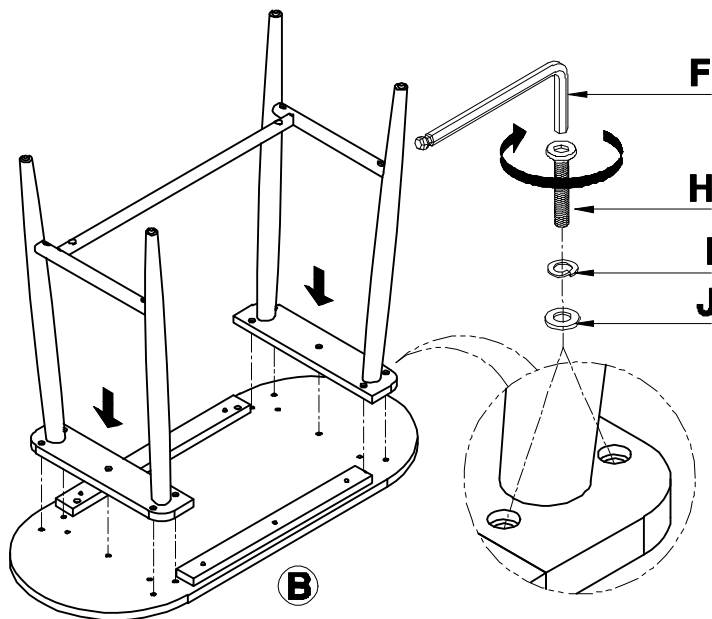

STEP 4

With help, place the mirror (A) onto the partially assembled vanity as shown. Insert flat washer (J), spring washer (I), and bolt (G). Tighten with supplied hex key (F). Do not over tighten! Adjust the levelers as shown below to accommodate uneven floors.

