

BRADLEY FLOOR LAMP

URBAN OUTFITTERS

Assembly Instructions

WARNINGS:

Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents. Blot spills do not rub, with a clean white cloth.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.



PARTS INCLUDED



(A) Upper-Metal Shade



(B) Nether Metal Shade




(C) Socket Ring x2



(D) Screw
[5/32-32Tx3mm] x3




(E) Allen key

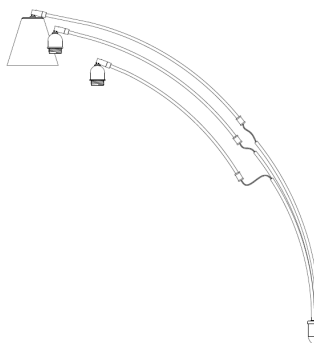

(F) Arms



(G) Knob
[Φ30*20mm M6*P 1.0] x1

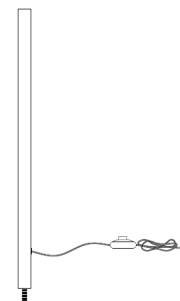

(H) Body



(I) Base



(J) Metal Washer
[Φ32xT1.5mm]



(K) Nut
[1/4-18T*15mm] x1



(L) Wrench

BRADLEY FLOOR LAMP

URBAN OUTFITTERS

Assembly Instructions

STEP 1: As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.

STEP 2: Insert the Body (H) onto the Base (I). Attach with Metal washer (J) and Nut (K), tighten using Wrench (L).

STEP 3: Connect Arm (F1) together with Screw (D) by using Allen key (E). Repeat the same step for F2 and F3 as F1.
Put Arm (F) into Body (H) then tighten with Knob (G).

STEP 4: Screw the Upper-Metal Shade (A) and Nether Metal Shade (B) onto the sockets with Socket Rings (C) rotating in a

STEP 5: Plug into outlet, turn on switch, and enjoy your new lamp

Use 6W LED bulbs . Do not use bulb that exceeds recommended wattage.

