

LUCIE BEDFRAME - QUEEN

URBAN OUTFITTERS

Assembly Instructions


NO ADDITIONAL TOOLS REQUIRED

WARNINGS:


At least two people recommended for assembly
Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place overheat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

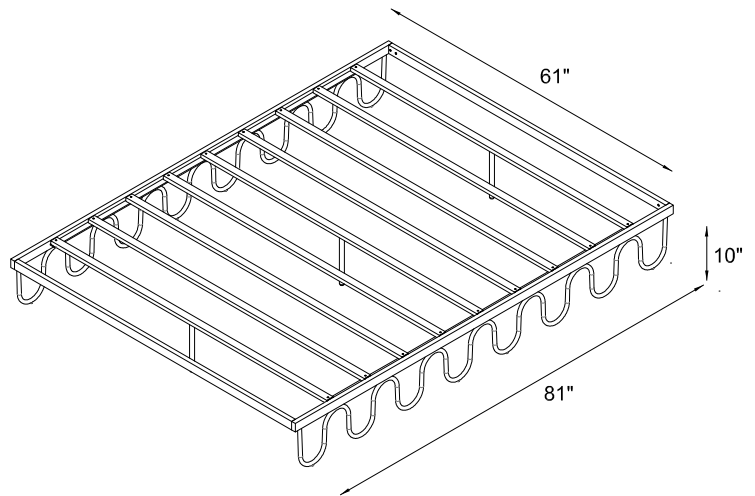


PARTS INCLUDED



A) Squiggle Side Rails
x2

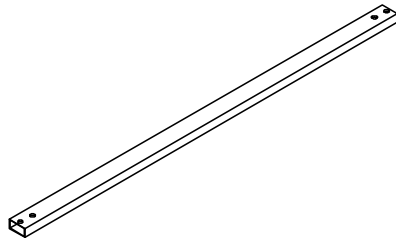


B) End Rails
x2




C) Post Slats
x3




D) Slats
x6



E) Bolt
[M6x10mm] x8



F) Bolt
[M6x15mm] x18



G) Adjustable feet
x3




H) Allen Key

Assembly Instructions

STEP 1

Lay down all the parts on the clean carpet or cardboard for assembly. With help, align squiggle side rails (A) with end rails (B). Insert Bolts (E) and partially tighten with Allen key (H). Once all bolts are inserted and partially tightened, fully tighten the bolts.

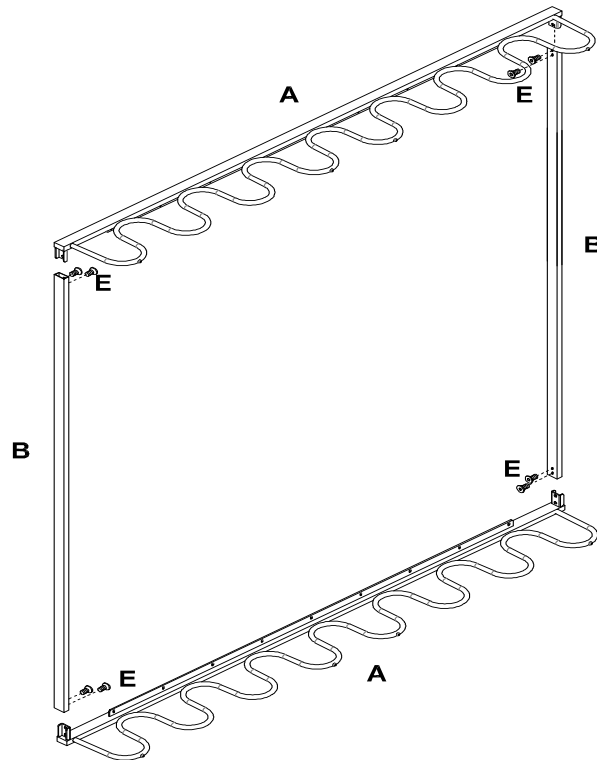

STEP 2

Locate post slats (C) and screw levelers (G) into the bottom of the post. One at a time, align post slats (C) to the ends and center of end rails (B) and insert bolts (F). Partially tighten bolts (F) with Allen key (H). Align slats (D) with the rest of the holes in end rails (B), as shown. Insert bolts (F) and partially tighten with Allen key (H). Once all bolts are inserted and partially tightened, fully tighten the bolts. With help, flip the bed upright.

