

SANNA NIGHTSTAND

URBAN OUTFITTERS

Assembly Instructions


TOOLS REQUIRED BUT NOT INCLUDED:

Phillips Head Screw Driver


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

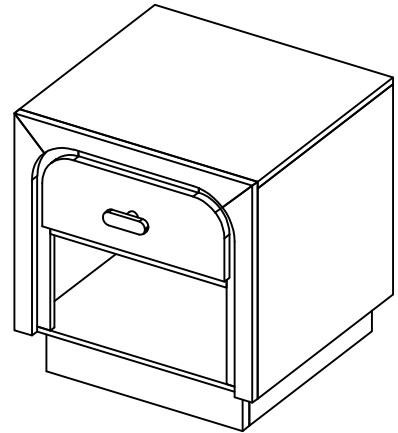


PARTS INCLUDED



(A) Drawer Pulls
Quantity: 1pc

HARDWARE LIST




(1) Bolt
M4 x 25mm
Quantity: 1pcs

SANNA NIGHTSTAND

Assembly Instructions

URBAN OUTFITTERS

STEP 1. Unscrew the Drawer Pull (A) from the inside of the drawer.

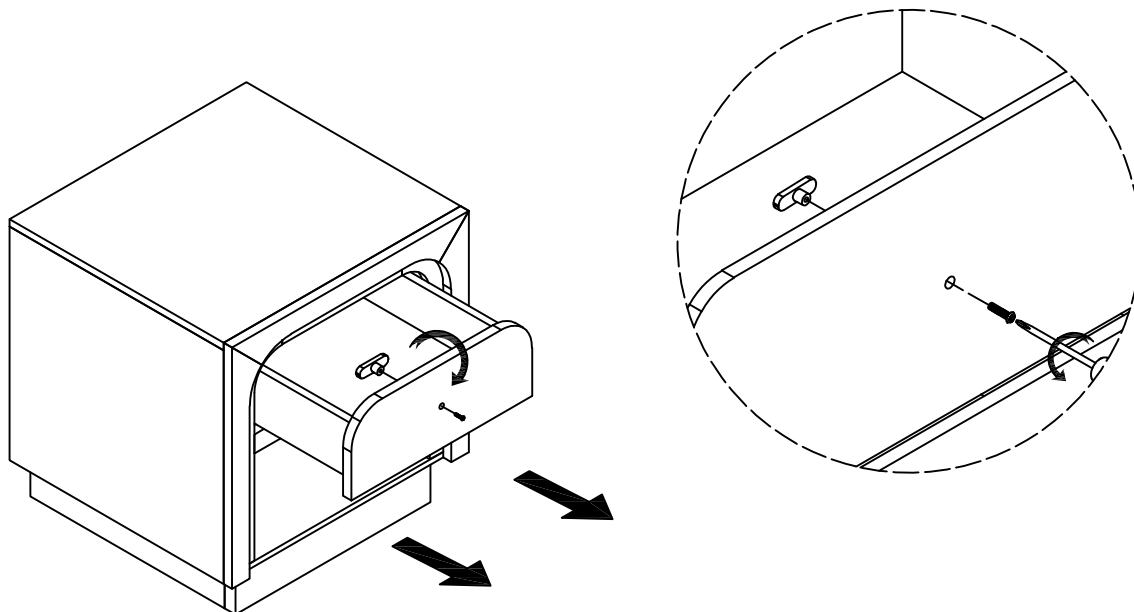

STEP 2. Align the Drawer Pull (A) as shown. Insert the screws (1) from the back and tighten with screwdriver. Turn the adjustable feet so it sits flat on the ground.

