

Open Face Two Tier Shelf

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips head screwdriver

WARNINGS:

Do not discard packing materials and the carton until assembly is complete.

Ensure all parts are present prior to assembly.

Contact customer service immediately if any parts are missing.

Assemble all parts on a clean, smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Blot spills with a clean, white cloth; do not rub.


Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.

Do not place over heat or air conditioning vents.

Do not over-tighten the parts.

The parts may loosen after initial use; re-tighten as necessary.

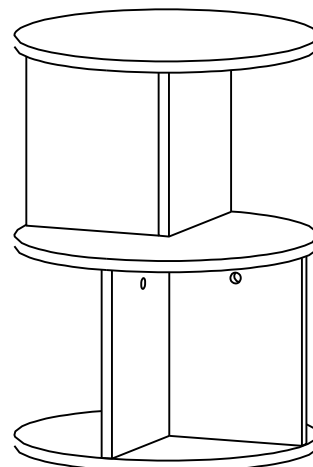


15 3/4"Dia x 21 5/8"H


PARTS INCLUDED:




(A) Top panel x1

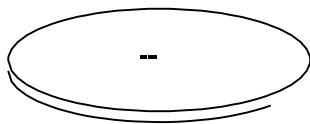


(B) Middle panel x1

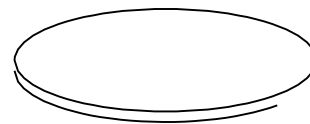

(C) Bottom panel x1



(D) Side panel x2




(E) Side panel x2



(F) Cam bolt
[07 x 44mm] x4



(G) Cam lock
[D15 x 13mm] x4



(H) Allen head screw
[M6 x 40mm] x4



(I) Allen key x1



(J) Dowel
[D8 x 30mm] x20



(K) Plastic cap x4

Open Face Two Tier Shelf


URBAN OUTFITTERS

Assembly Instructions

STEP 1


Insert the dowels (J) into the predrilled holes in the faces of side panels (D) and edges of side panels (E). **Repeat this step to assemble all side panels (D)&(E).**

X2

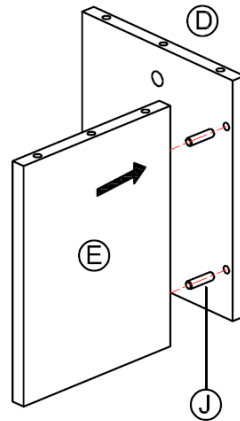


STEP 2

Screw the cam bolts (F) into smaller holes in the bottom of top panel (A) and middle panel (B), tighten the cam bolts (B) with a Phillips head screwdriver. Insert dowels (J) into the larger holes in the bottom top panel (A).

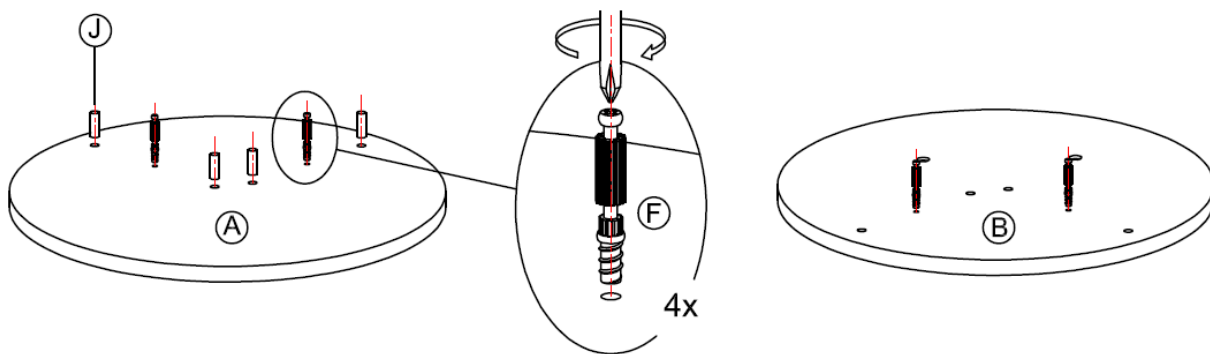

STEP 3

Insert the dowels (J) and cam bolts (F) in the top panel (A) into the edge of assembled side panels (D)&(E). Insert the cam locks (G) into the side panels (D)&(E) then, lock the cam locks (G) by screwing them clockwise with a Phillips head screwdriver.

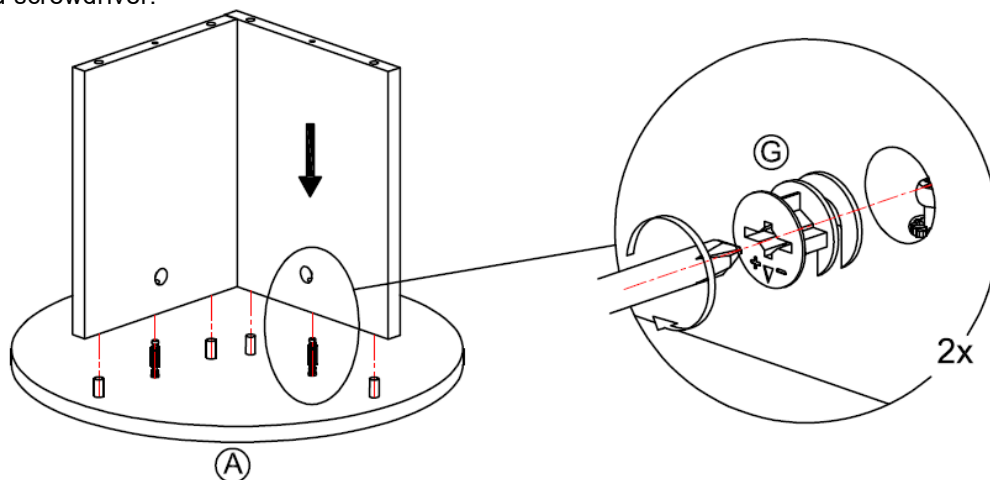


Open Face Two Tier Shelf

Assembly Instructions

URBAN OUTFITTERS


STEP 4

Insert dowels (J) into the holes in the edge of the side panels (D)&(E). Insert the dowels (J) in the side panels (D)&(E) into the holes in the top of middle panel (B). Insert Allen head screws (H) through the middle panel (B) into the side panels (D)&(E). Use the Allen key (I) to tighten the Allen head screws (H).

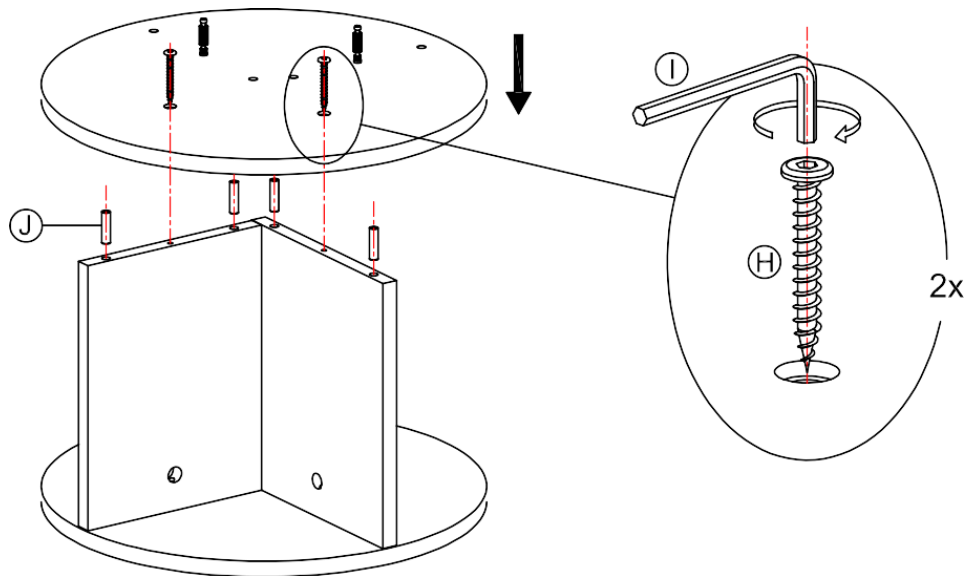

STEP 6

Insert the dowels (J) and cam bolts (F) in the middle panel (B) into the edge of assembled side panels (D)&(E). Insert the cam locks (G) into the side panels (D)&(E) then, lock the cam locks (G) by screwing them clockwise with a Phillips head screwdriver.

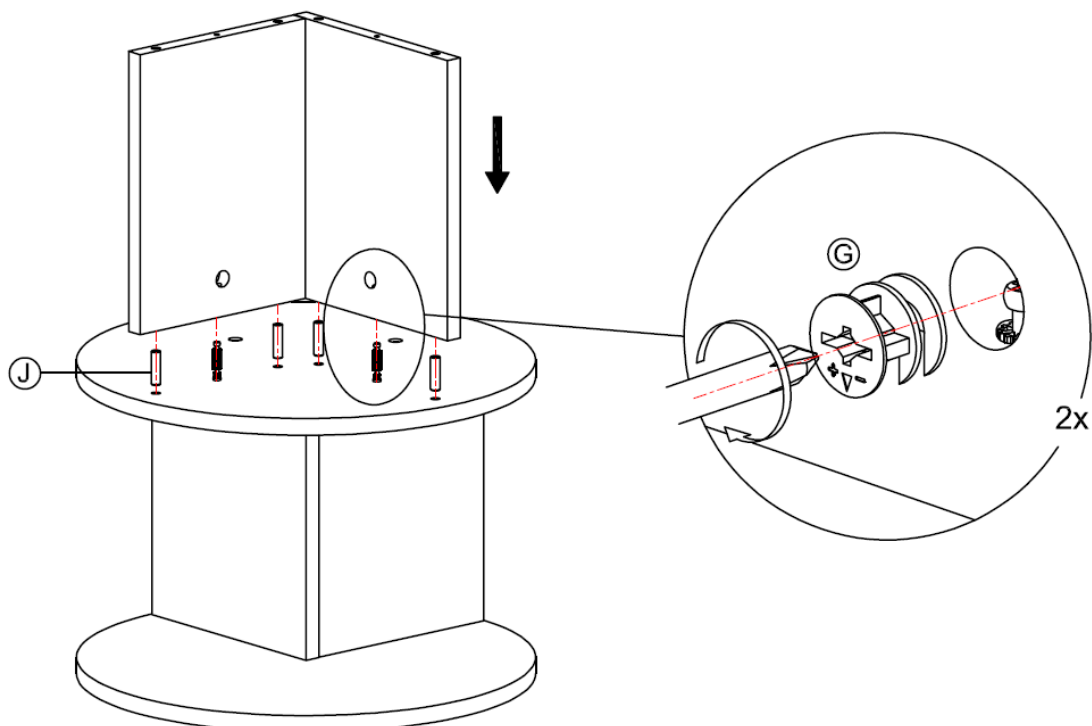


Open Face Two Tier Shelf

Assembly Instructions

URBAN OUTFITTERS

STEP 7

Insert dowels (J) into the holes in the edge of the side panels (D)&(E). Insert the dowels (J) in the side panels (D)&(E) into the holes in the top of bottom panel (C). Insert Allen head screws (H) through the bottom panel (C) into the side panels (D)&(E). Use the Allen key (I) to tighten the Allen head screws (H).

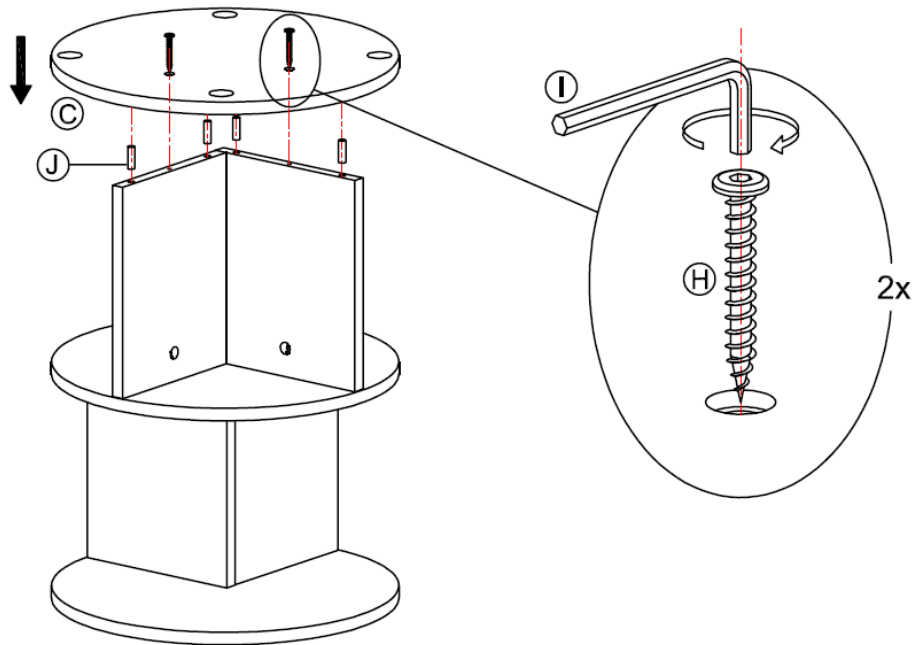

STEP 8

Flip the product upright. Insert the plastic caps (K) into the cam lock heads to complete the assembly.

