

Ebba Vanity

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:

Phillips Head Screwdriver

WARNINGS:

Do not throw away packing materials and carton until after assembly. Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills do not rub, with a clean white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

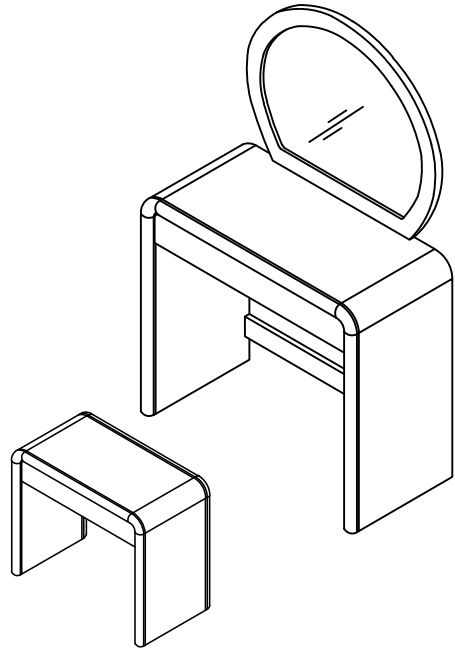


PARTS INCLUDED

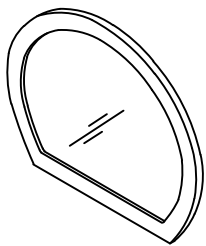


A) Mirror
x 1

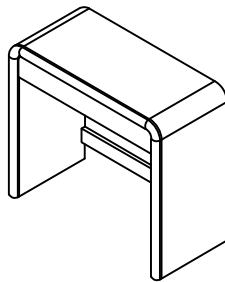

B) Table
x 1

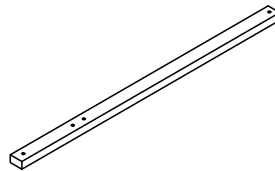

C) Mirror Support
x 2

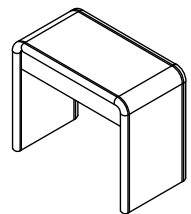

D) Vanity Stool
x 1

HARDWARE INCLUDED



1) Screw
(M4 x 32mm) x 8


Ebba Vanity

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Remove the bracing on the bottom of the vanity table and stool with a Phillips head screwdriver as shown.

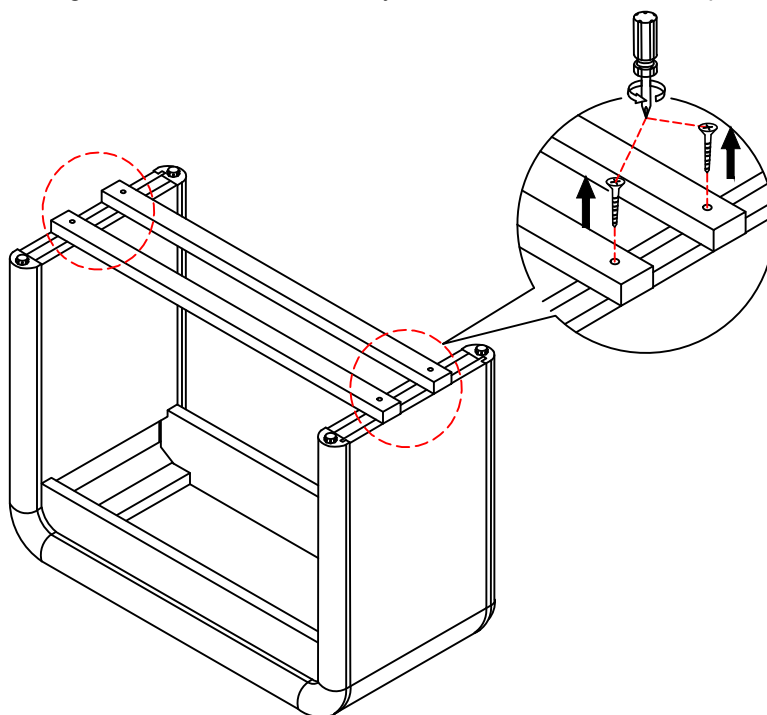

STEP 2

Align and fasten mirror support (C) to mirror (A) and table (B) using screws (1) and tighten with a phillips head screw driver (not included) .

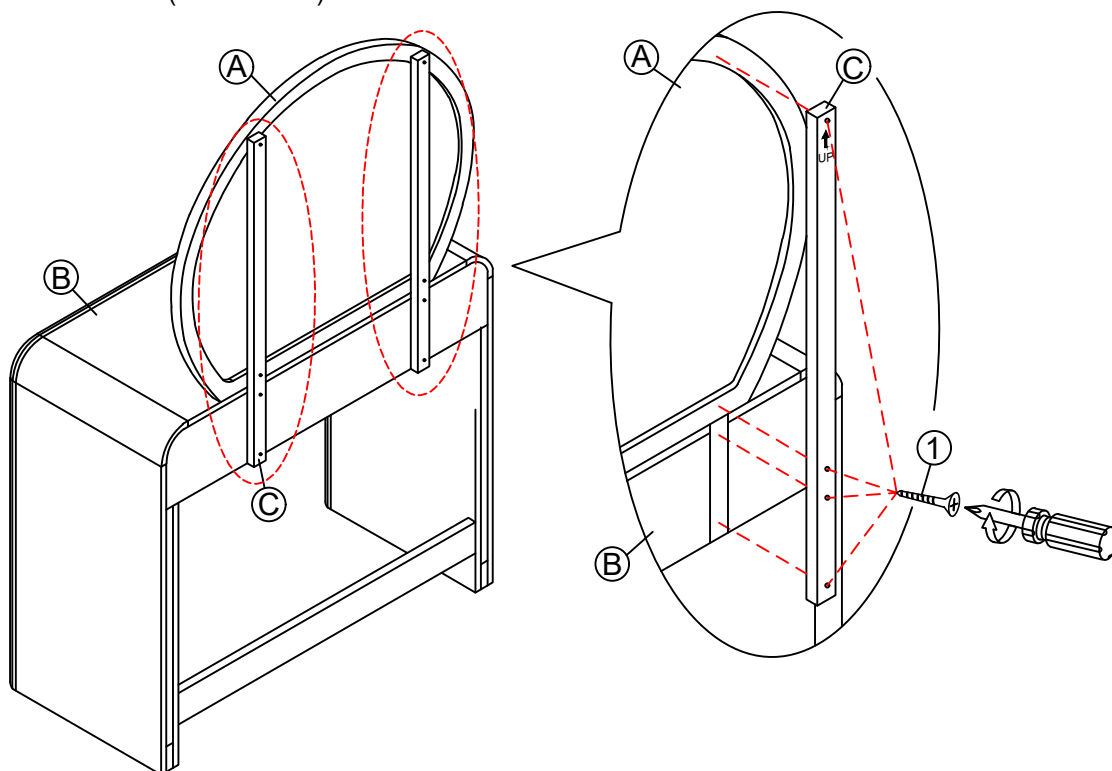

Ebba Vanity

Assembly Instructions

URBAN OUTFITTERS

