

# Mushroom Wall Hook

URBAN OUTFITTERS

## Assembly Instructions

### TOOLS REQUIRED BUT NOT INCLUDED:


Hammer, Drill

### WARNINGS:


Do not throw away packing materials and carton until after assembly.  
Ensure all parts are present prior to assembly.  
Contact customer service immediately if parts are missing.  
Assemble all parts on a clean smooth surface.

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.  
Blot spills do not rub, with a clean white cloth.  
Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.

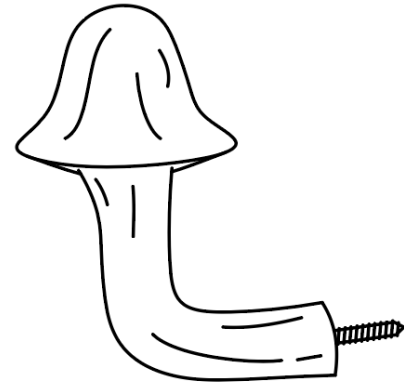

### PARTS INCLUDED:

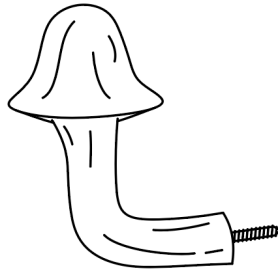

(A) Hook x1

### STEP 1

If you are attaching directly to a stud, screw the hook (B) directly into the wall in your desired location. If attaching to drywall or a different type of wall surface, source an appropriate wall anchor and follow the manufacturers directions to install it in the wall, then, carefully screw the hook (B) into the wall anchor (A), **do not overtighten!**

