

Willow Wall Mounted Entry Table

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED

Drill, Hammer, Phillips head screwdriver, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Blot spills with a clean, white cloth; do not rub.


Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.

Do not place over heat or air conditioning vents.

Do not over-tighten the parts.

The parts may loosen after initial use; re-tighten as necessary.

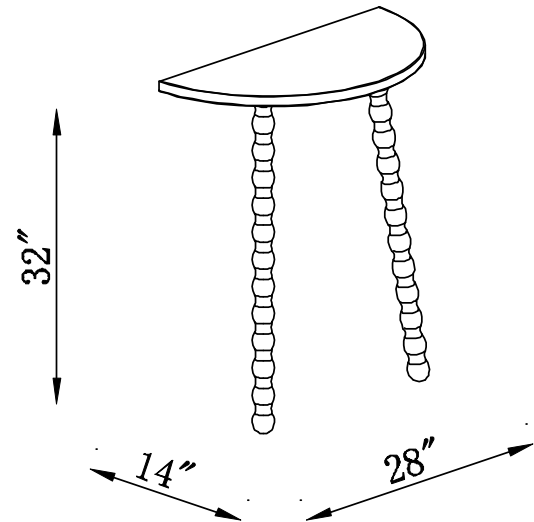

PARTS INCLUDED:



(A) Table top
x1




(B) Leg
x1



(C) Leg
x1



(D) Hex key
x1



(E) Bolt
[1/4" x 3/4"] x6



(F) Spring washer
[1/4"] x6



(G) Flat washer
[1/4"] x6



(H) Wall anchor
x2



(I) Machine screw
x2


Willow Wall Mounted Entry Table

URBAN OUTFITTERS

Assembly Instructions


STEP 1

Place the table top (A) upside down. Align the legs (B & C) with the holes in the bottom of table top (A). Ensure the legs (B & C) are pointed out, as shown below. Insert flat washers (G), spring washers (F) and bolts (E). Tighten with supplied hex key (D). Do not over tighten.

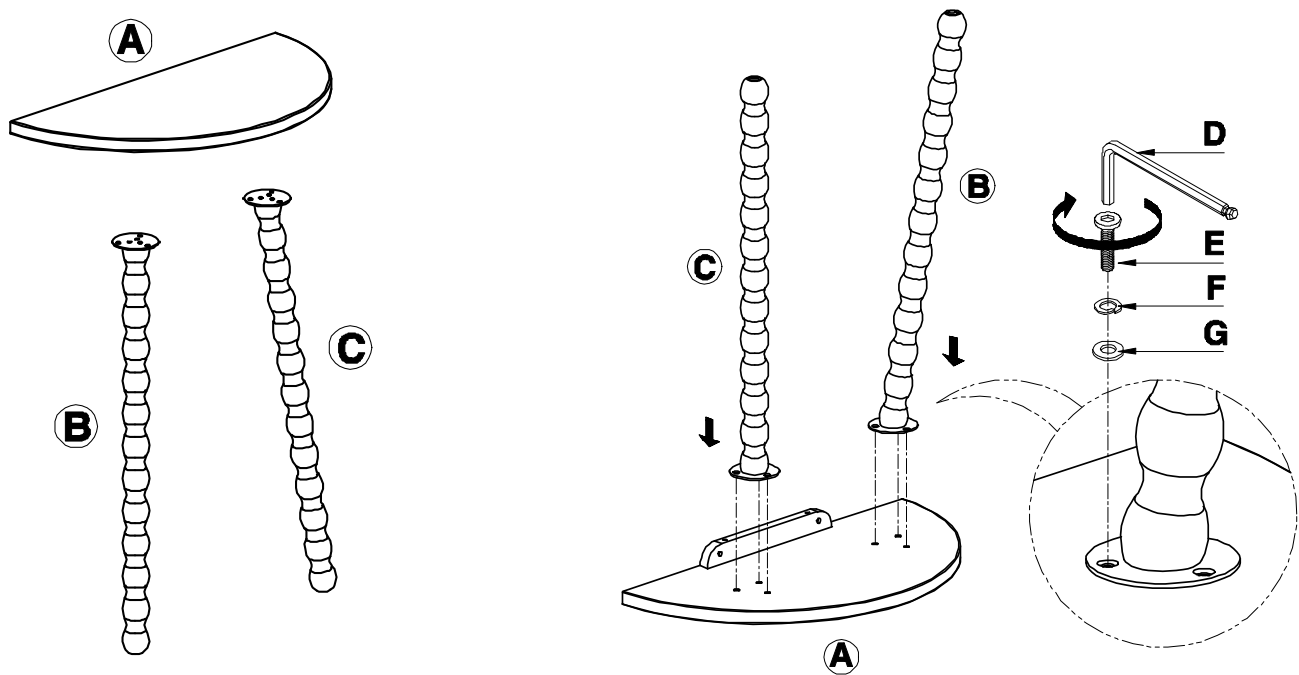

STEP 2

Adjust the levelers as shown below to accommodate uneven floors.

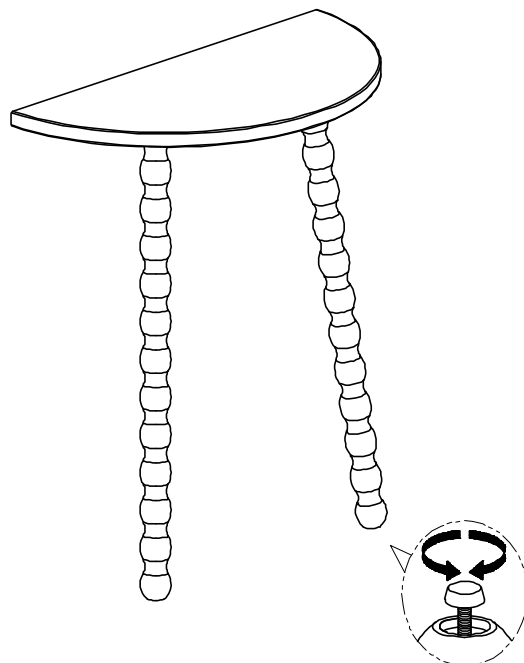

Willow Wall Mounted Entry Table

Assembly Instructions

URBAN OUTFITTERS

STEP 3

Determine the position of the table on the wall. Use the below diagram to place the table on the wall accordingly. Ensure the table is level and use a pencil to mark the location of the screw holes on the wall. Adjust the levelers as shown below to accommodate uneven floors.

Wood or Stud installation:

Insert the screws (I) through the cleat of table top into the wall while the table is leveled. Tighten the screws (I) with a Phillips head screwdriver, one at a time. Do not over-tighten.

Drywall installation:

Use a drill and a hammer to insert anchors (H) into the wall at the marked locations. Place table on the wall aligning the holes in the cleat with the anchors (H) in the wall. Insert screws (I) through cleat of table top and into the anchors (H), then tighten with a Phillips head screwdriver. Do not over-tighten.

The included hardware is intended for attachment to drywall or wooden studs within walls, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.

