

DOILY HEART HOOK

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Drill, Phillips head screwdriver driver, Hammer, Pencil, Level

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

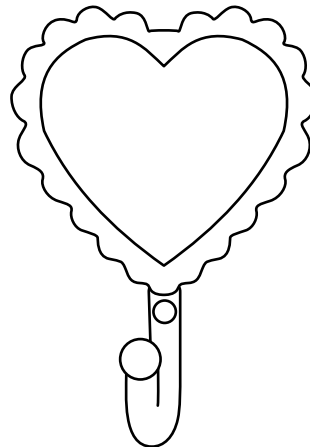

PARTS INCLUDED:

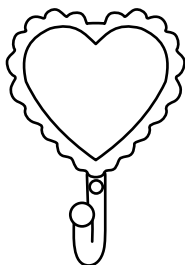

(A) Hook x 1

[2.90" x 1.40" x 4.52"]
or
[76 x 36 x 115 mm]



(B) Plastic Anchor x 1

[D0.35" x 1.38"] x1
or
[D9 x 35 mm] x1



(C) Screw x 1

[D0.30" x 1.38"] x1
or
[D8 x 35 mm] x1

DOILY HEART HOOK


URBAN OUTFITTERS

Assembly Instructions

STEP 1

Wood or Stud installation:

Insert the screw (C) through the hook (A) into the wall and fasten it with a Phillips head screwdriver or drill.

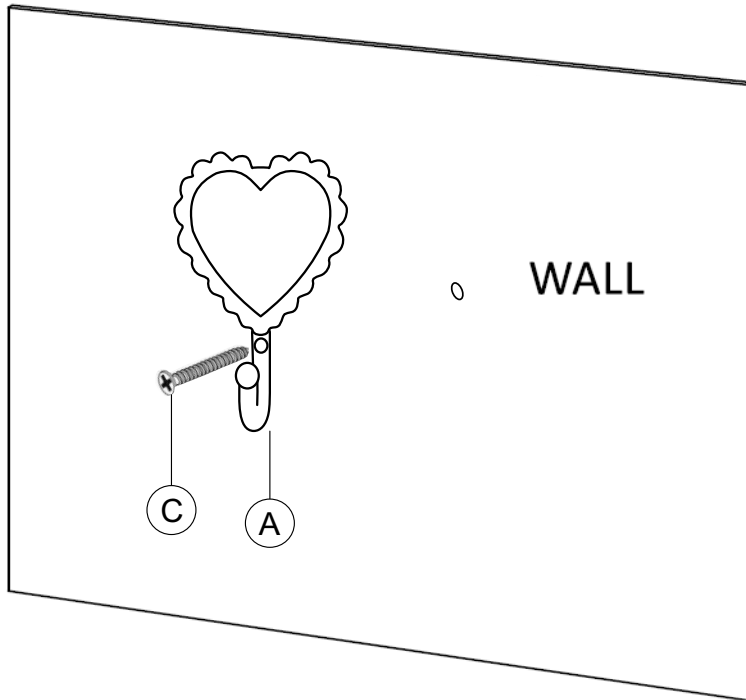

Drywall installation:

Mark the location of the screw hole in the hook (A) on the wall. Insert anchor (B) into the wall at the marked locations using a drill and a hammer. Insert screw (C) through the hook (A) into the anchor, then tighten with a Phillips head screwdriver or drill.

