

ADURA PRO 1 TIER SMARTRAX DISPLAY
ASSEMBLY INSTRUCTIONS
JANUARY 2026

21.1" W x 23.8" D x 80.1" H

CARTON CONTENTS

SAP 592044 - Display Shell

74.4" x 26.2" x 2.1" WGT:28lbs QTY REQ= 1

Description	Part QTY
M3669-10 Left Leg	1
M3669-11 Right Leg	1
M3669-15 Bottom Plank Holder	1
SA3669-A Top Plank Holder HW3669	1
Hardware Bag	1
INST3669 Instruction Sheet	1

SAP 592046 - AduraPRO 1-Tier Rail Set

20" x 10" x 14" WGT:11lbs QTY REQ= 1


Description	Part QTY
P85496-01 Left Triple Rail	4
P85496-02 Right Triple Rail	4
P85496-03 Left Double Rail	1
P85496-04 Left Double Rail	1

SAP 592045 - Flat Panels

25.8" x 23.2" x 2.1" WGT:15lbs QTY REQ= 1

Description	Part QTY
W3669-20 Brace	1
W3669-21 Base	1
W3669-22 Header w/channels	1
G3669-01 Header Graphic	1

RECOMMENDED TOOLS

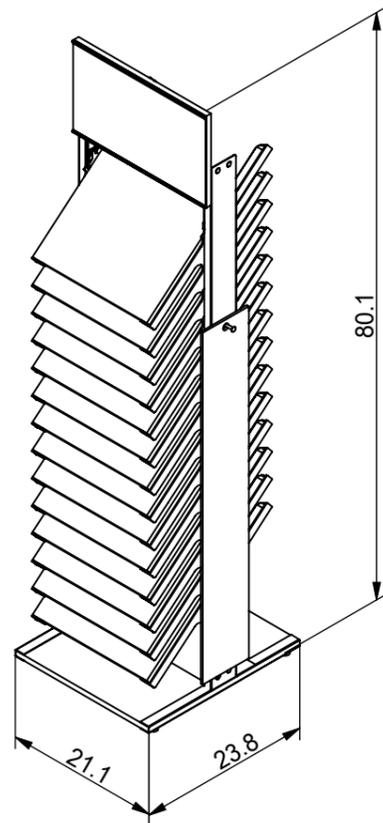

Be sure to provide a minimum of 21.1" to install this display.
Display Foot Print: 21.1" x 23.8" x 80.1"



HAND TIGHTEN ALL FASTENERS DURING ASSEMBLY.

WHEN ASSEMBLY IS COMPLETED USE APPROPRIATE TOOLS TO SECURE ALL FASTENERS PERMANENTLY.

SAFETY GUIDELINES

Failure to follow the assembly instructions could result in damage or injury.

Install in a level and stable location. If not on a level surface please level before installation.

Assemble display in the area it will occupy. Never attempt to move display after loading.

When using any power tools, always use eye protection.




Do not work on this display with product in it. Unload display before relocating unit. Failure to do this may result in damage or injury.




For proper installation and safety follow all steps in sequential order.

Two people required to set up this display.


PARTS

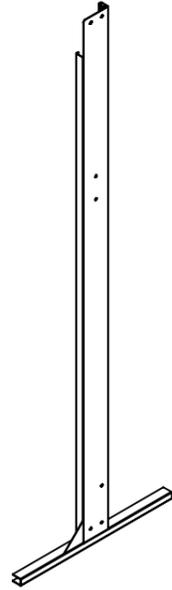


M3669-10
Left Leg
1x

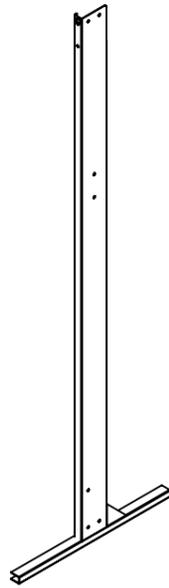


M3669-11
Right Leg
1X

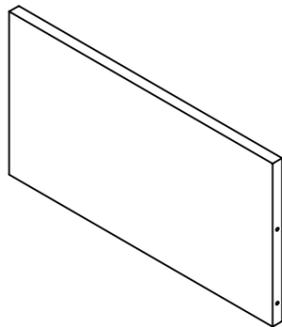


W3669-20
BRACK
1X

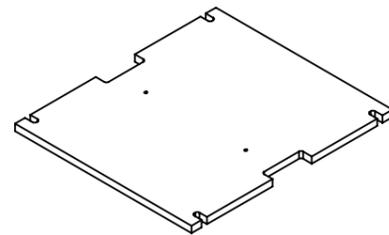

W3669-21
BASE
1X

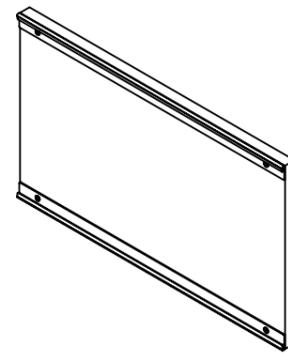

W3669-22
HEADER
1X

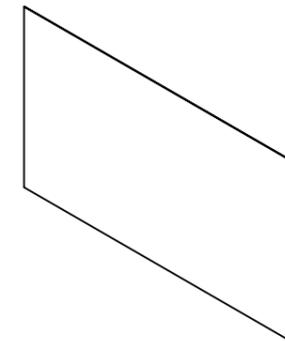


G3669-01
HEADER GRAPHIC
1X


PARTS




P85496-01
LEFT 3 RAIL
4X

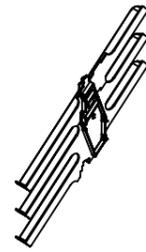


P85496-02
RIGHT 3 RAIL
4X

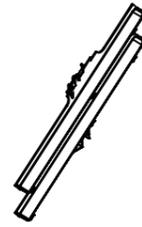

P85496-03
LEFT 2 RAIL
1X

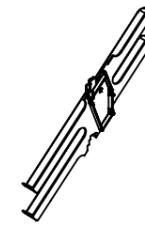

P85496-04
RIGHT 2 RAIL
1X

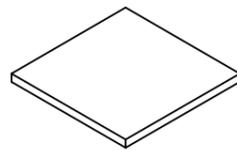


Adura Max Sample
(supplied by customer)
14X



ADURA PRO PLANK
SAMPLE - 5FT
(supplied by customer)
1X

HARDWARE

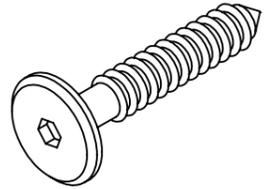

40mm DECO WOOD
SCREW - CW ZINC
4x




.5in BOLT
4x




CONFRAMAT SCREW
2x




DECO BOLT BC 13mm
2x

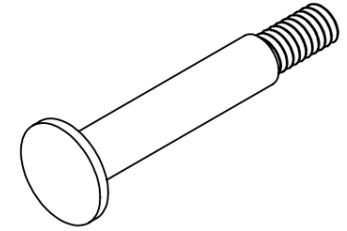


M85809-26 STAND OFF
HOOK
1x

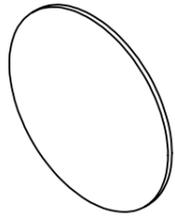

COVER DOT
7x



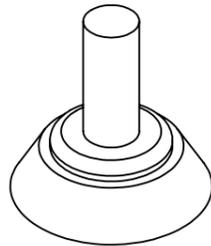


LEVELER
4x


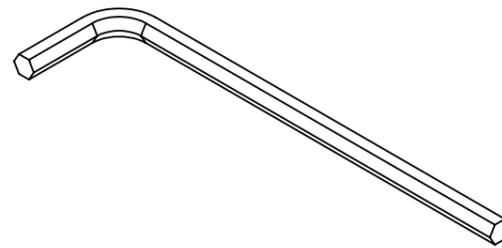


4mm Hex Key
1x


Step 1

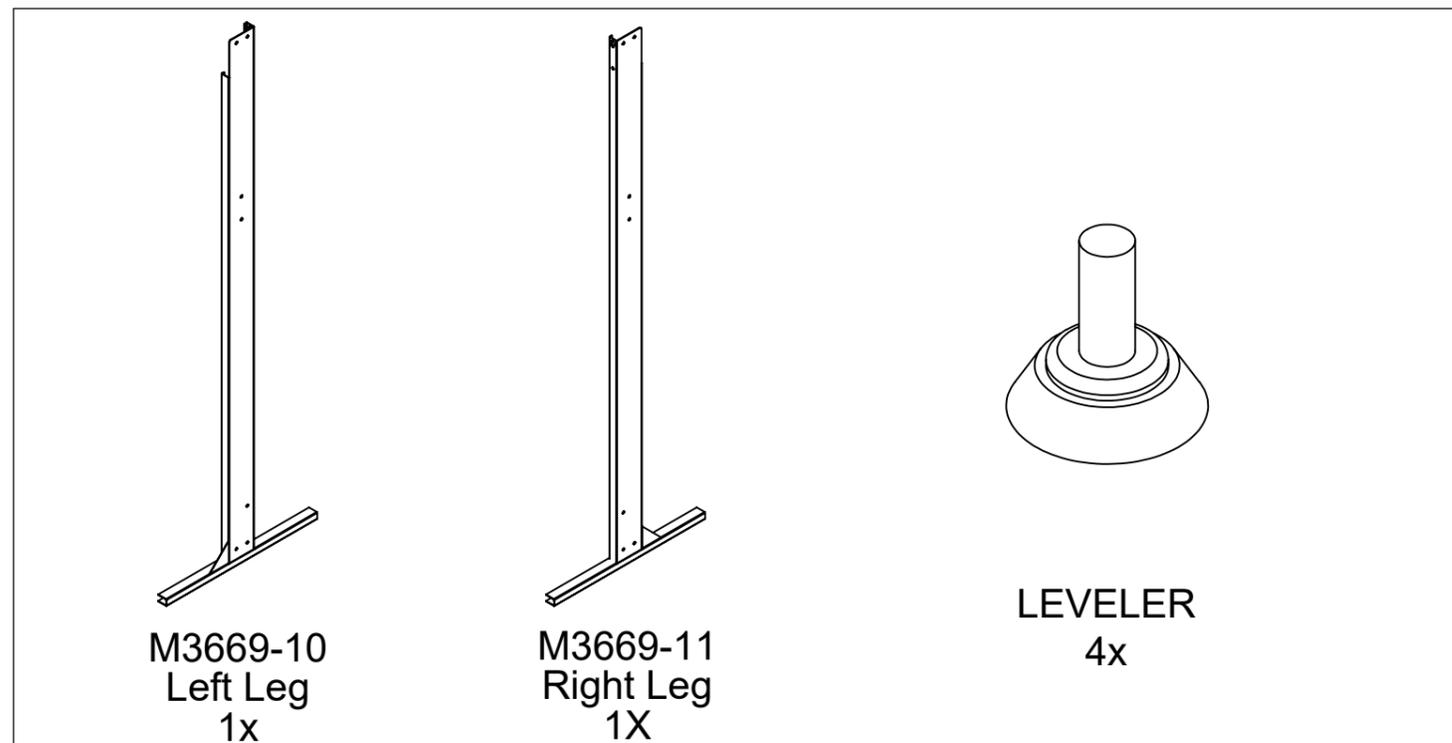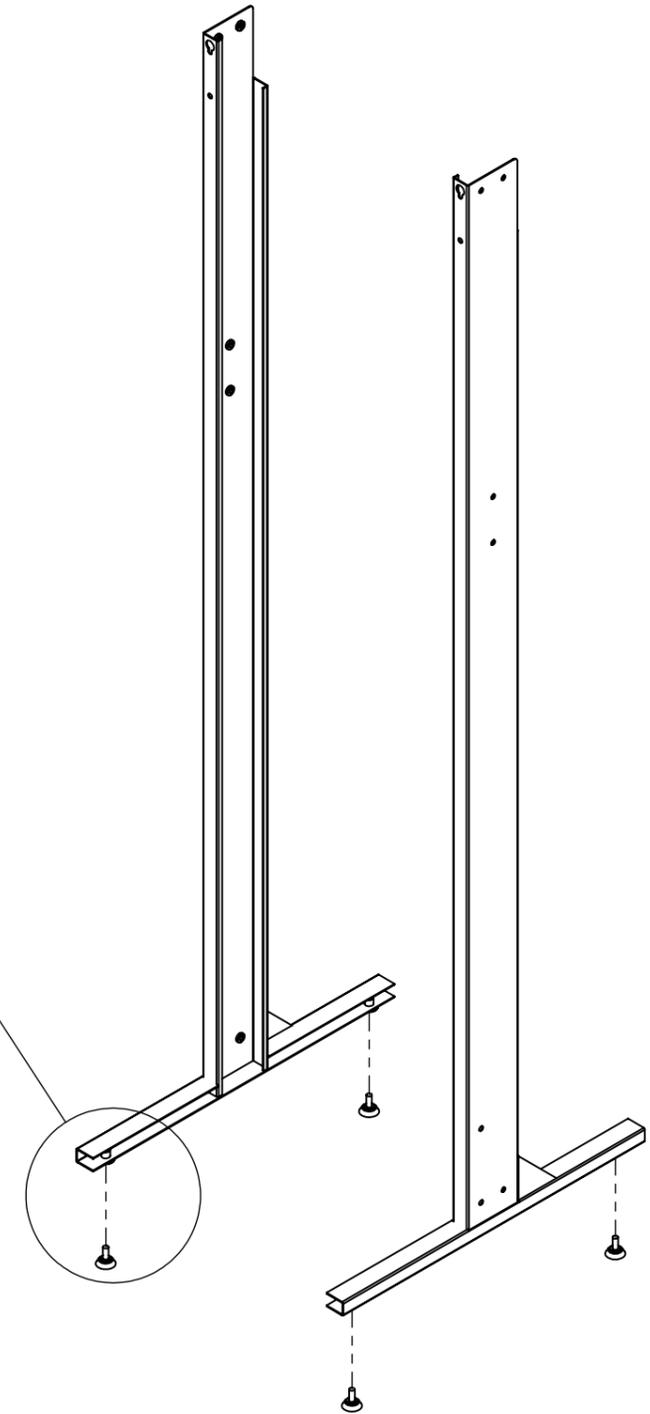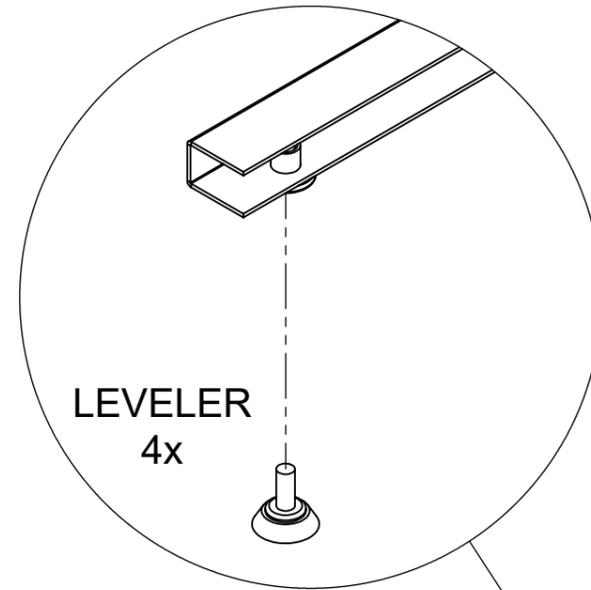

Step 2

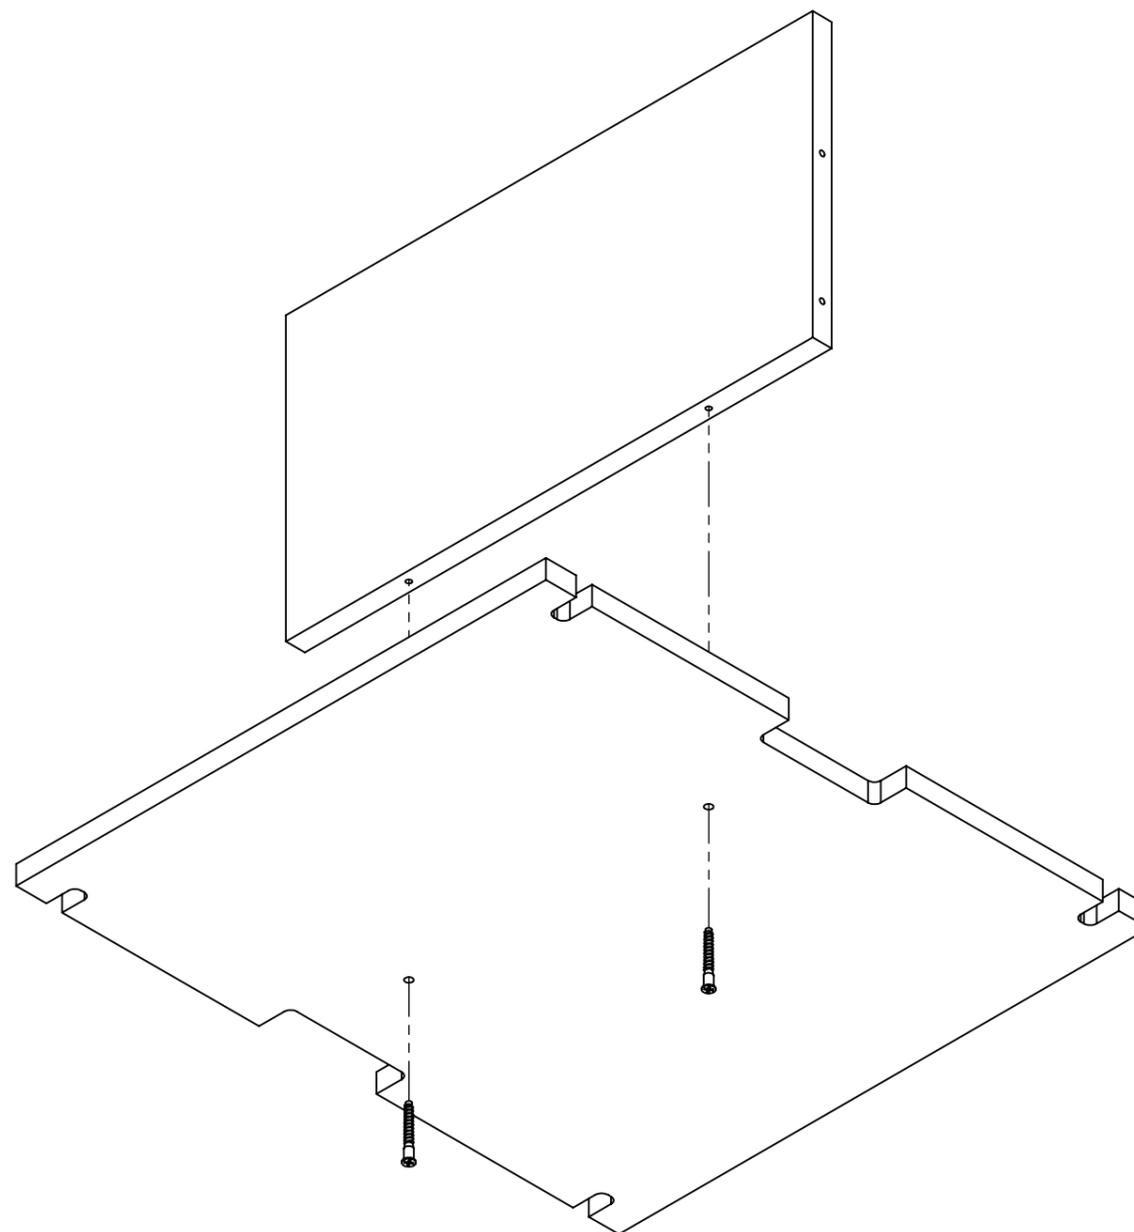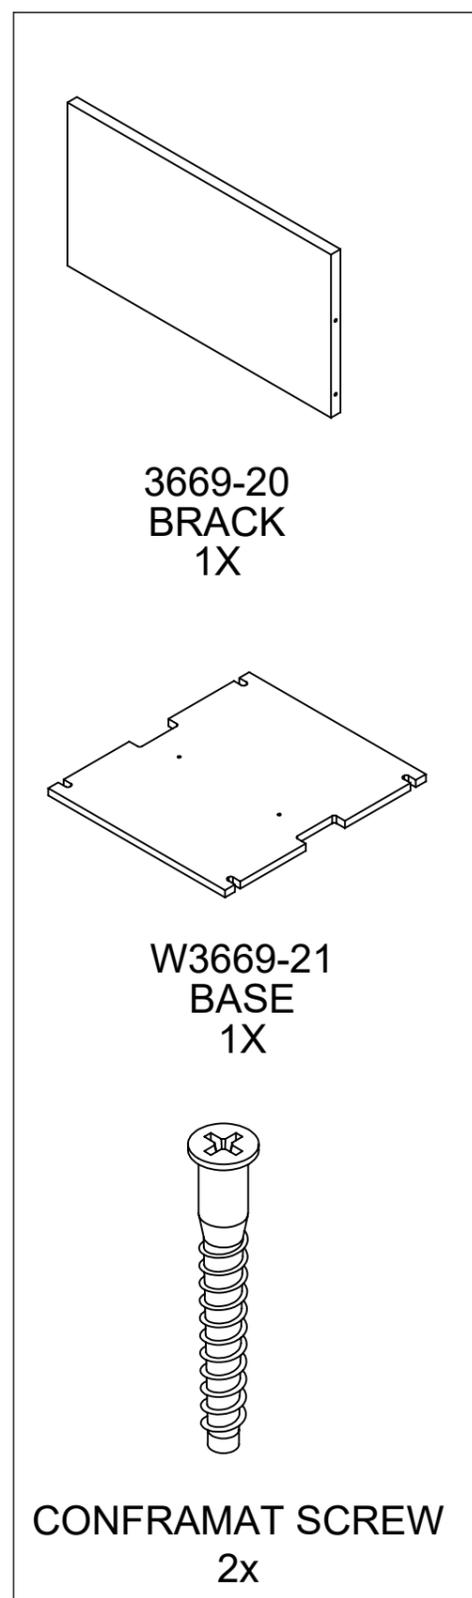

Step 3

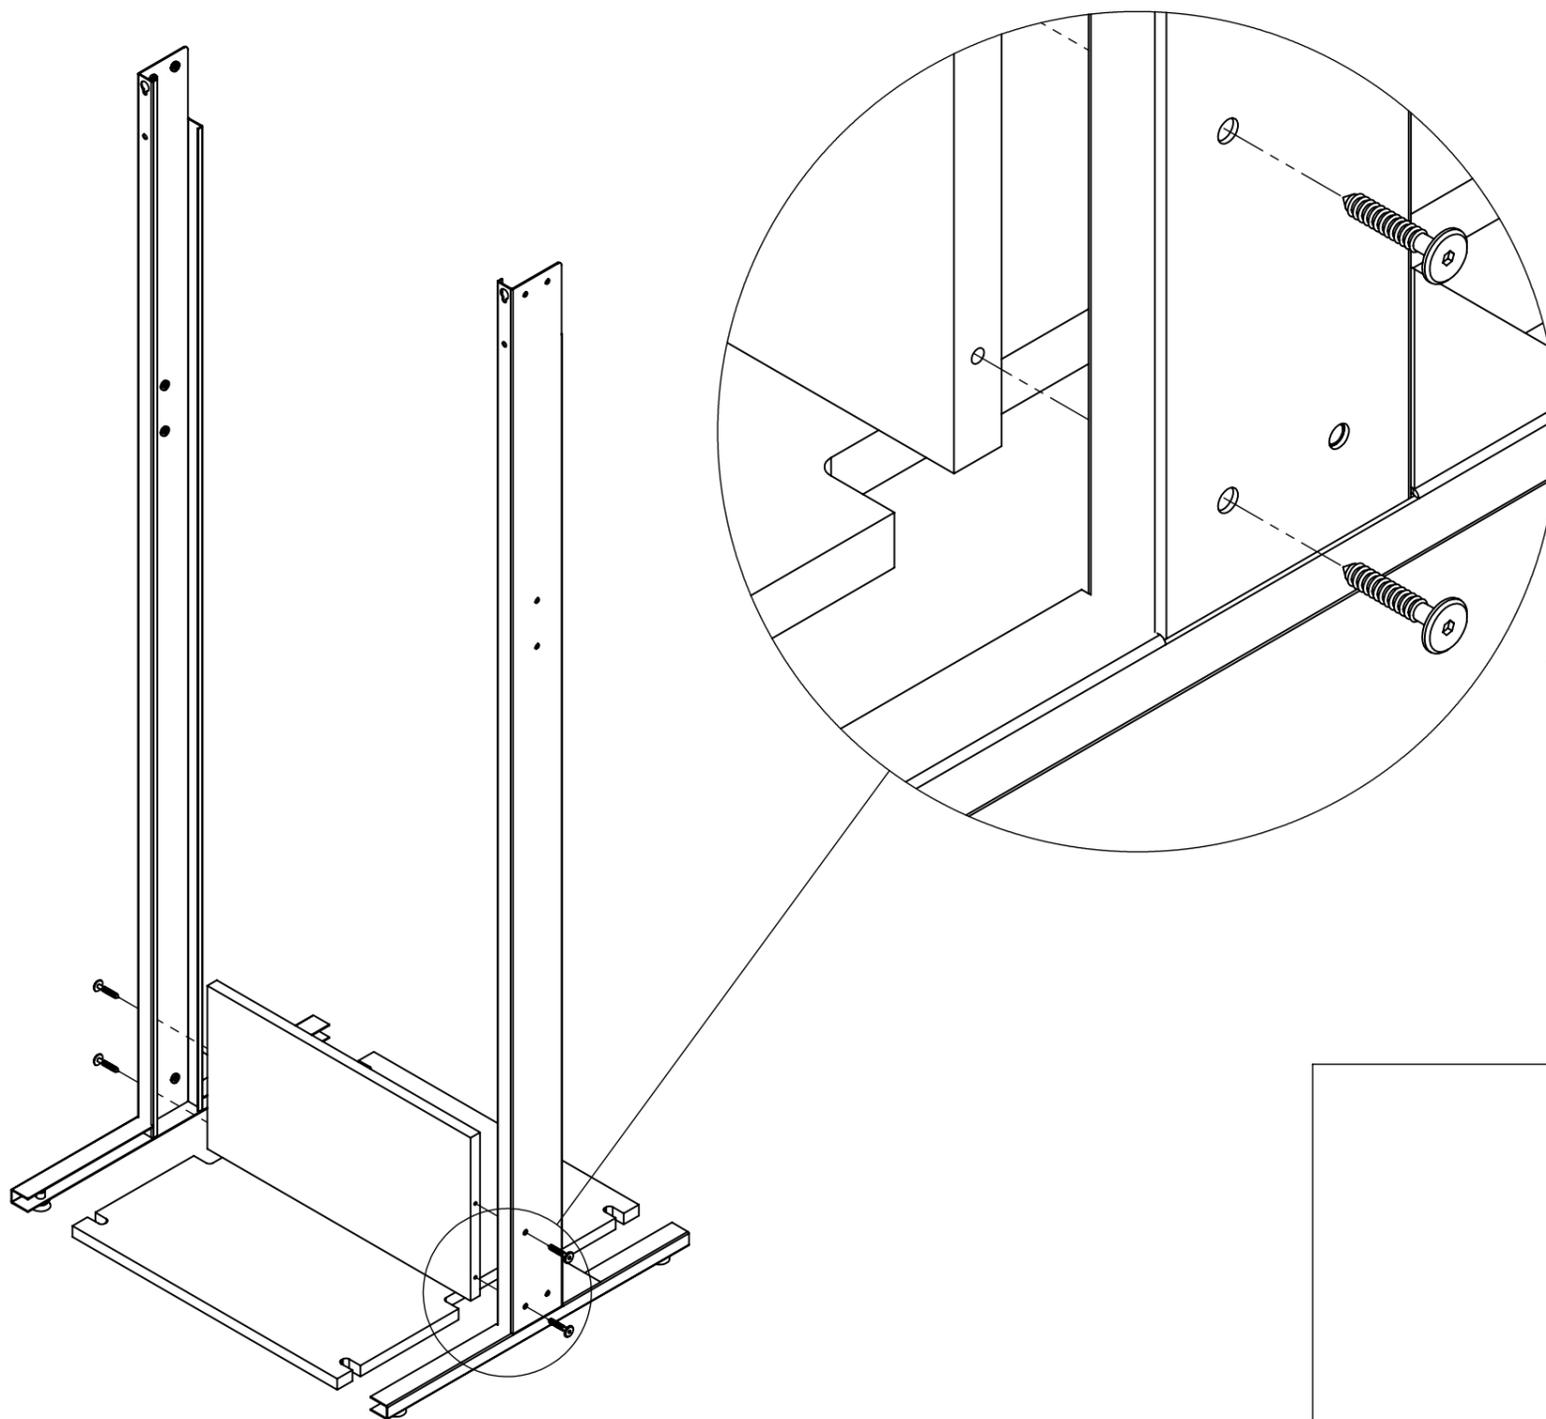


40mm DECO WOOD
SCREW - CW ZINC
4x



40mm DECO WOOD
SCREW - CW ZINC
4x




Step 4

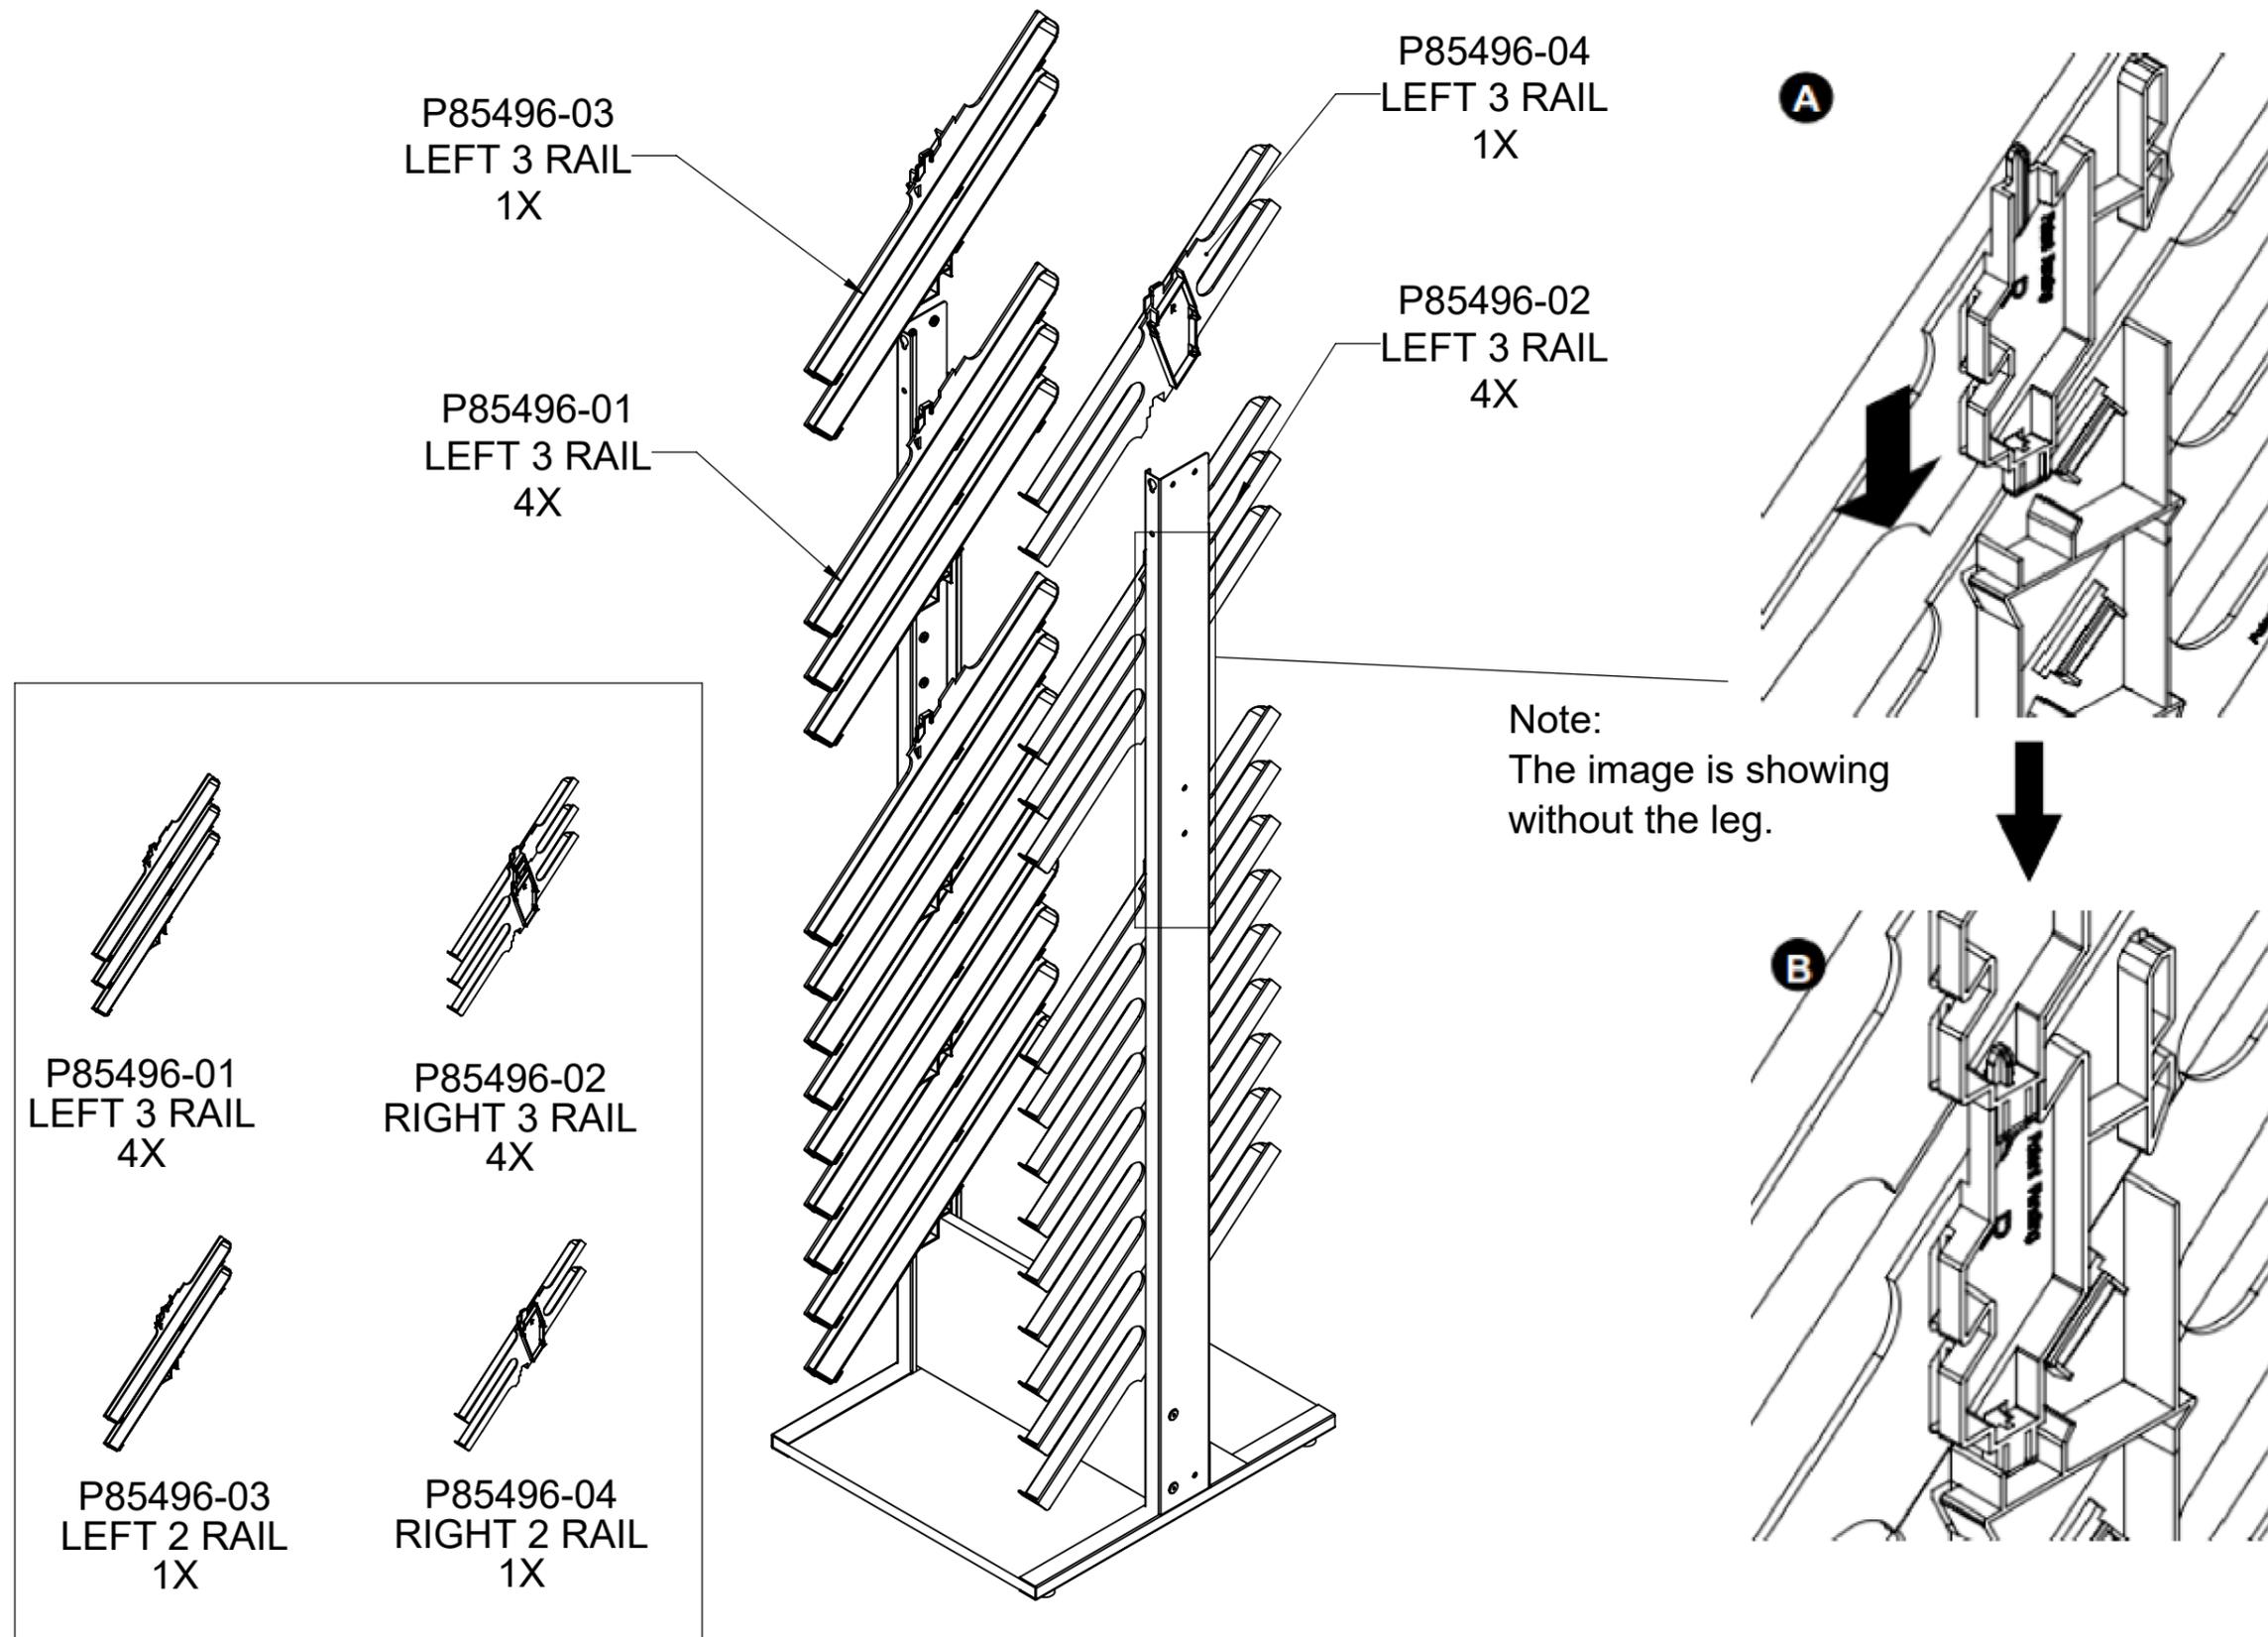

Step 5

Note:
Don't fully tighten screws until after
step 11 is complete.

.5in BOLT
2x

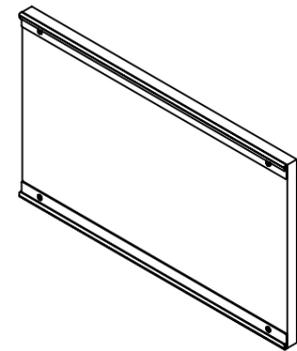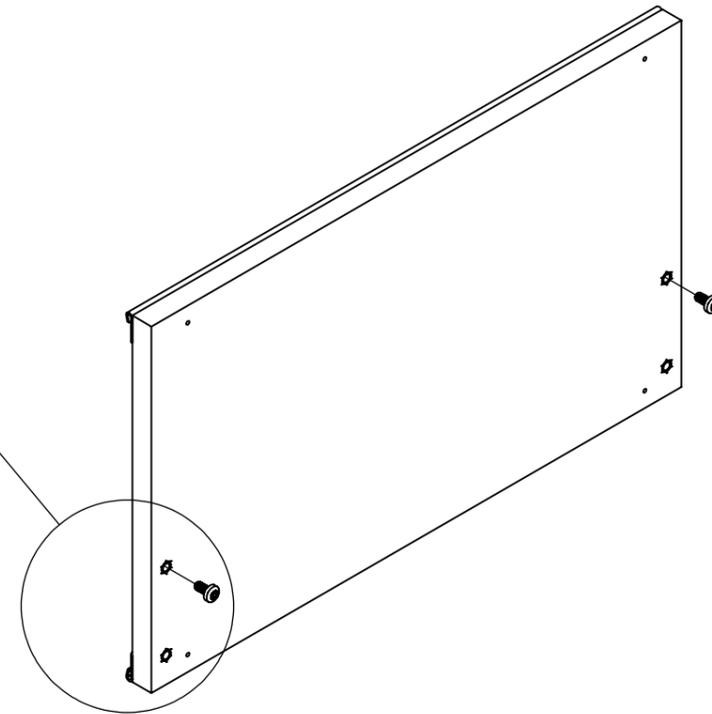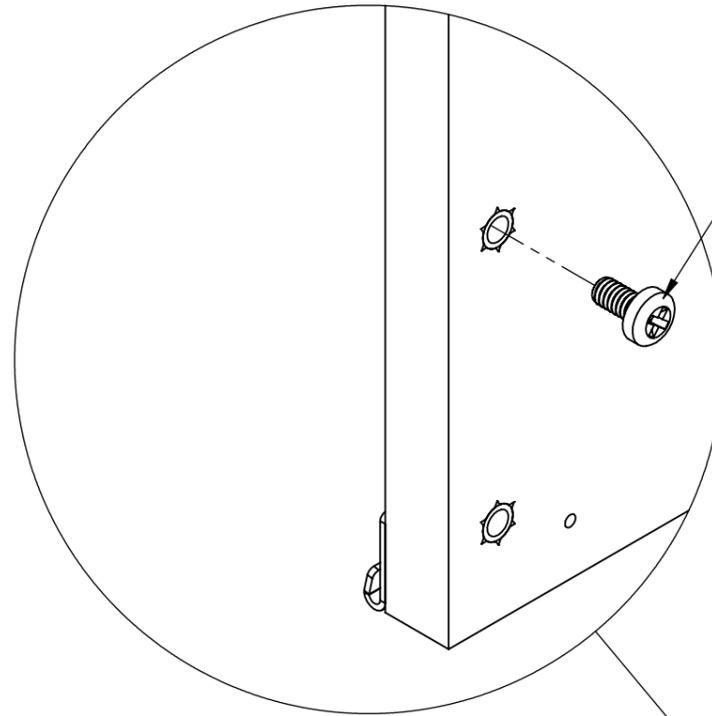


W3669-22
HEADER
1X





.5in BOLT
2x

Step 6

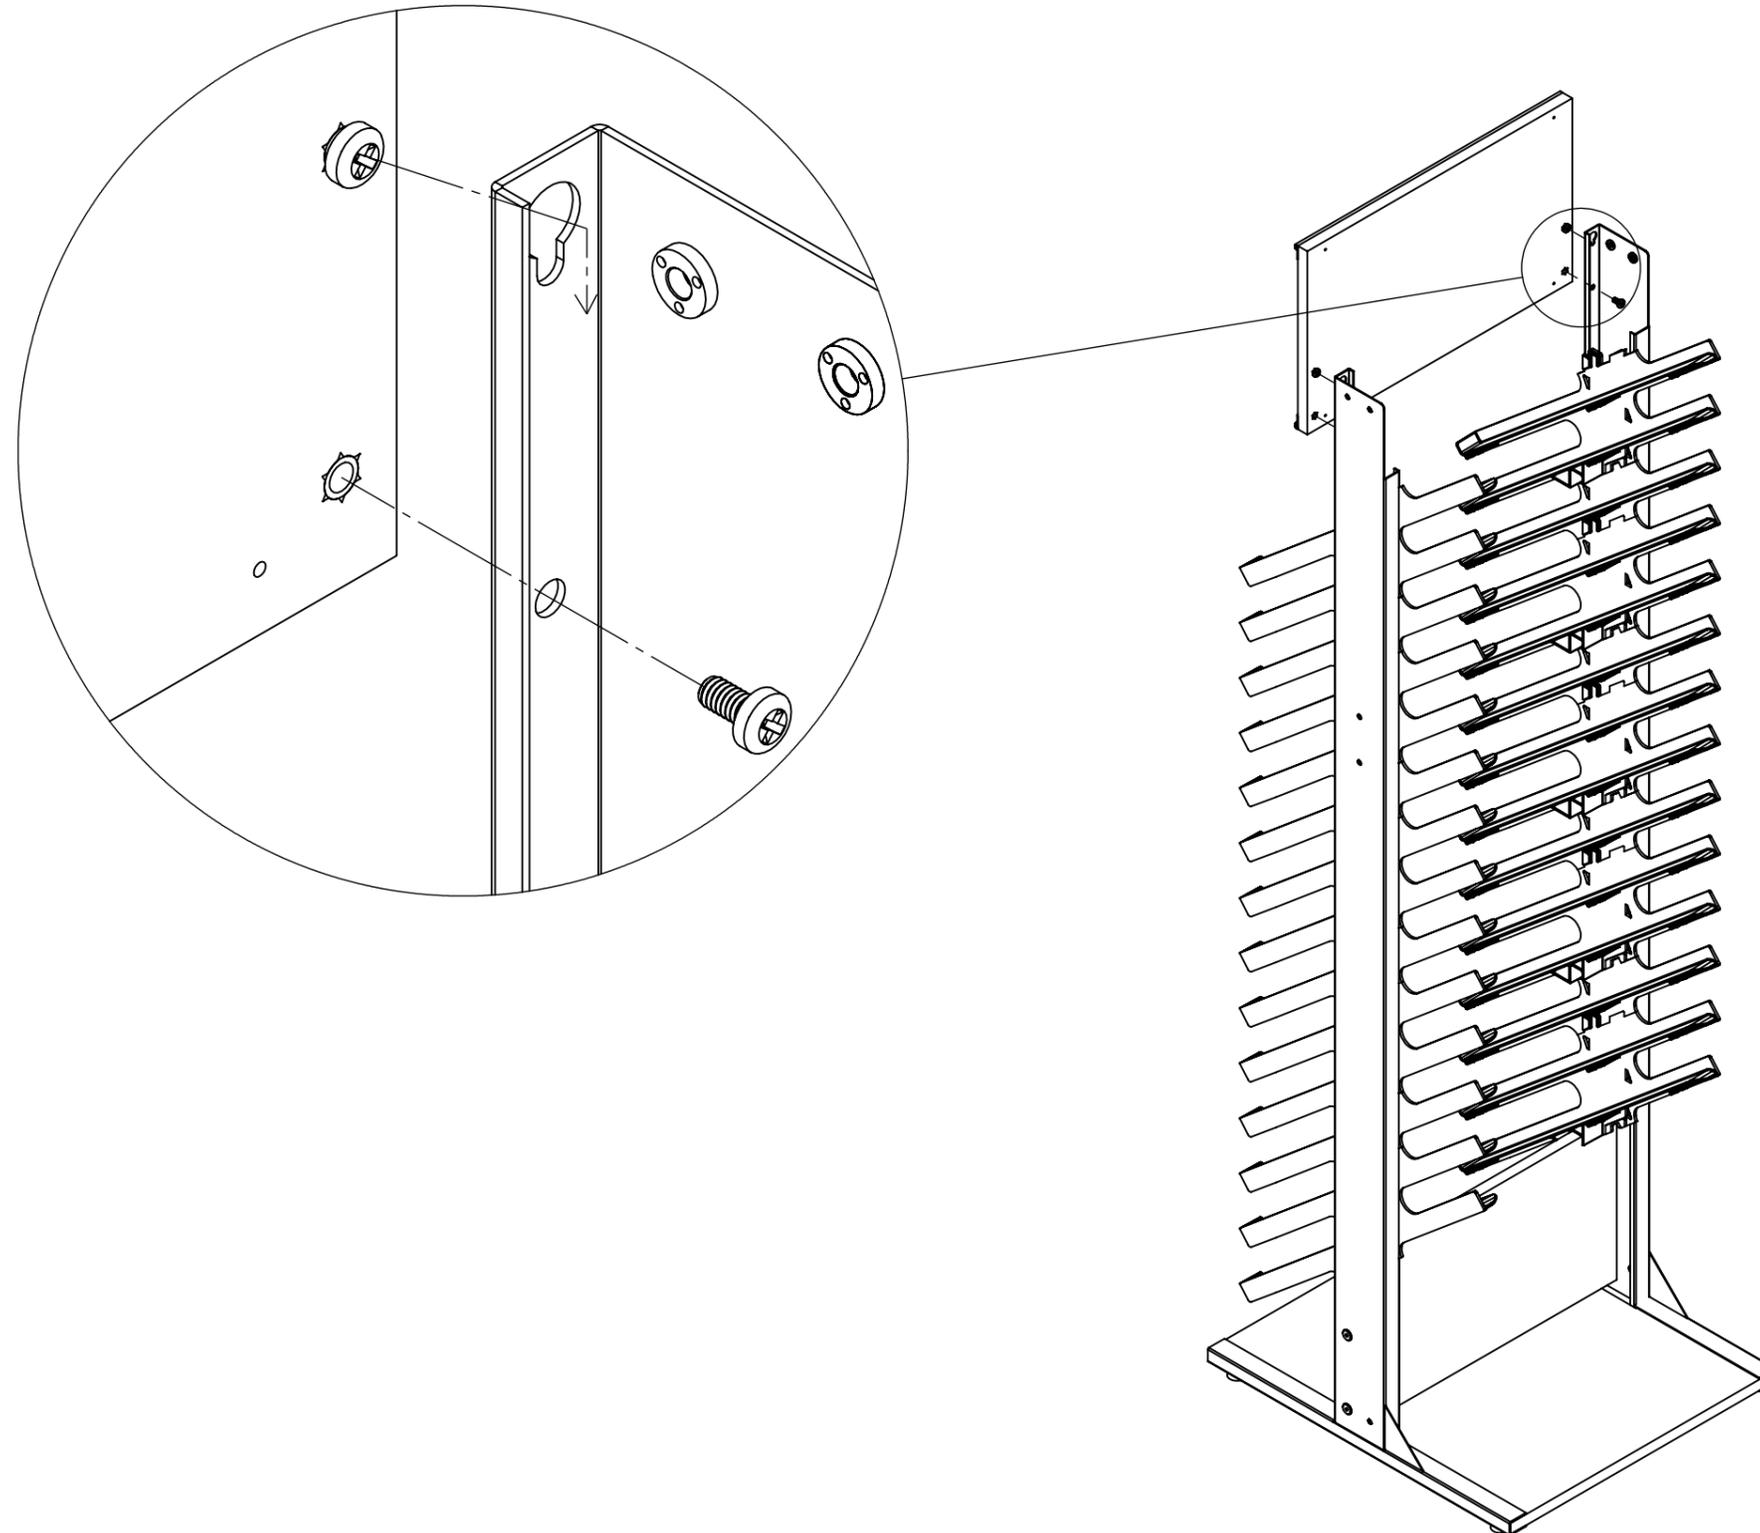




.5in BOLT
2x

Step 7

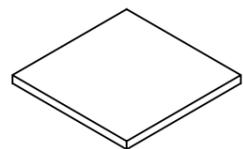
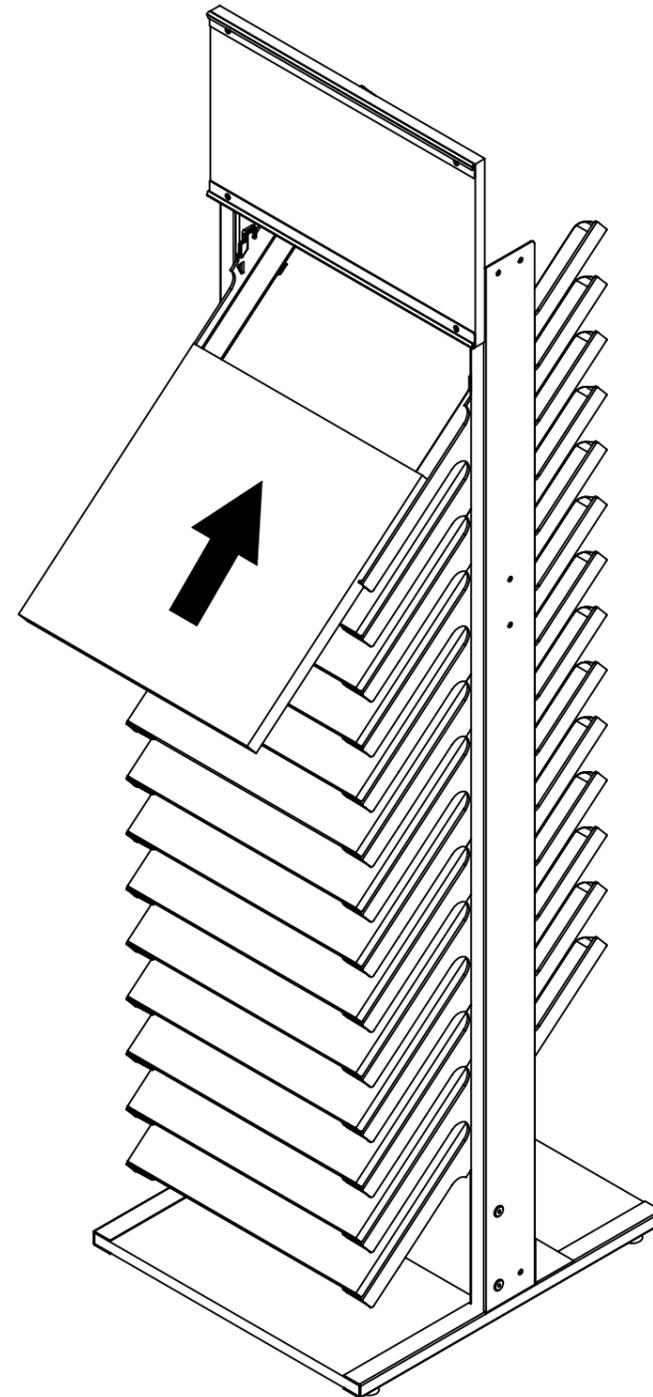


Adura Max Sample
(supplied by customer)
14X



Step 8

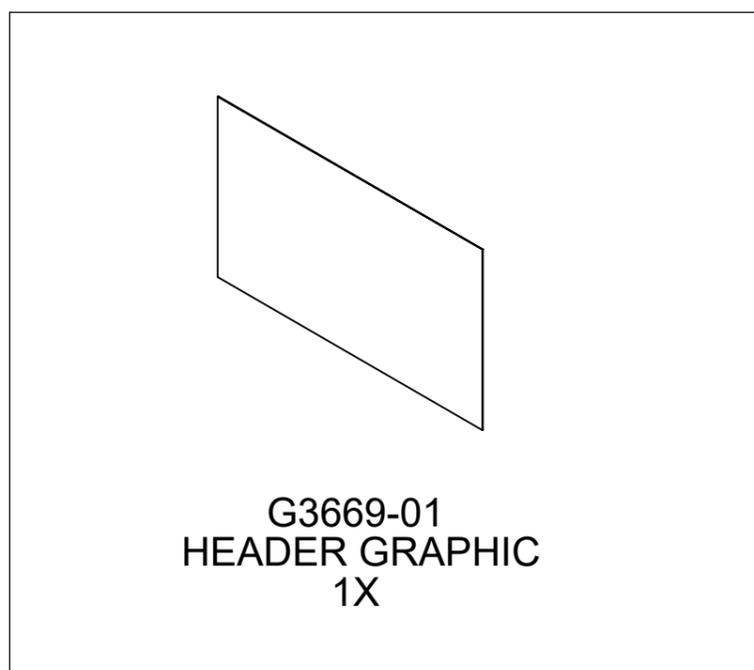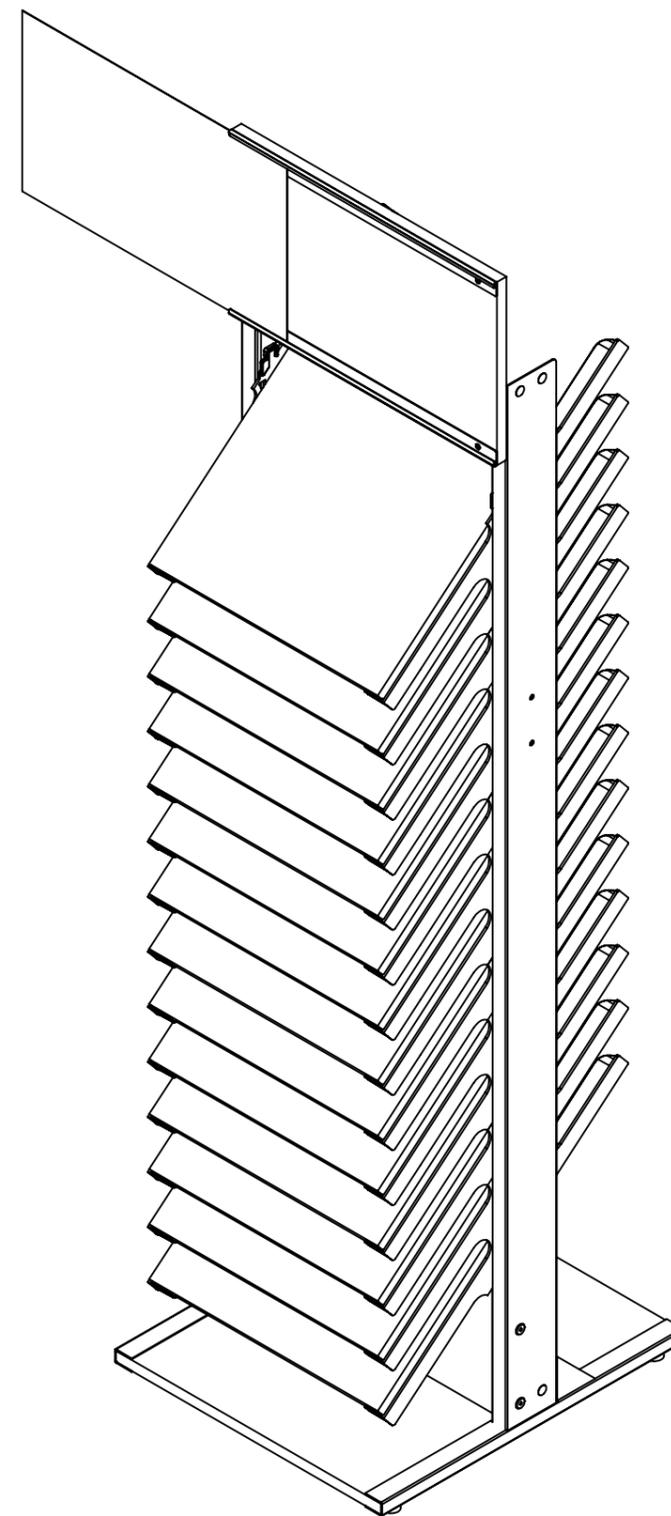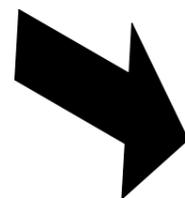

Step 9

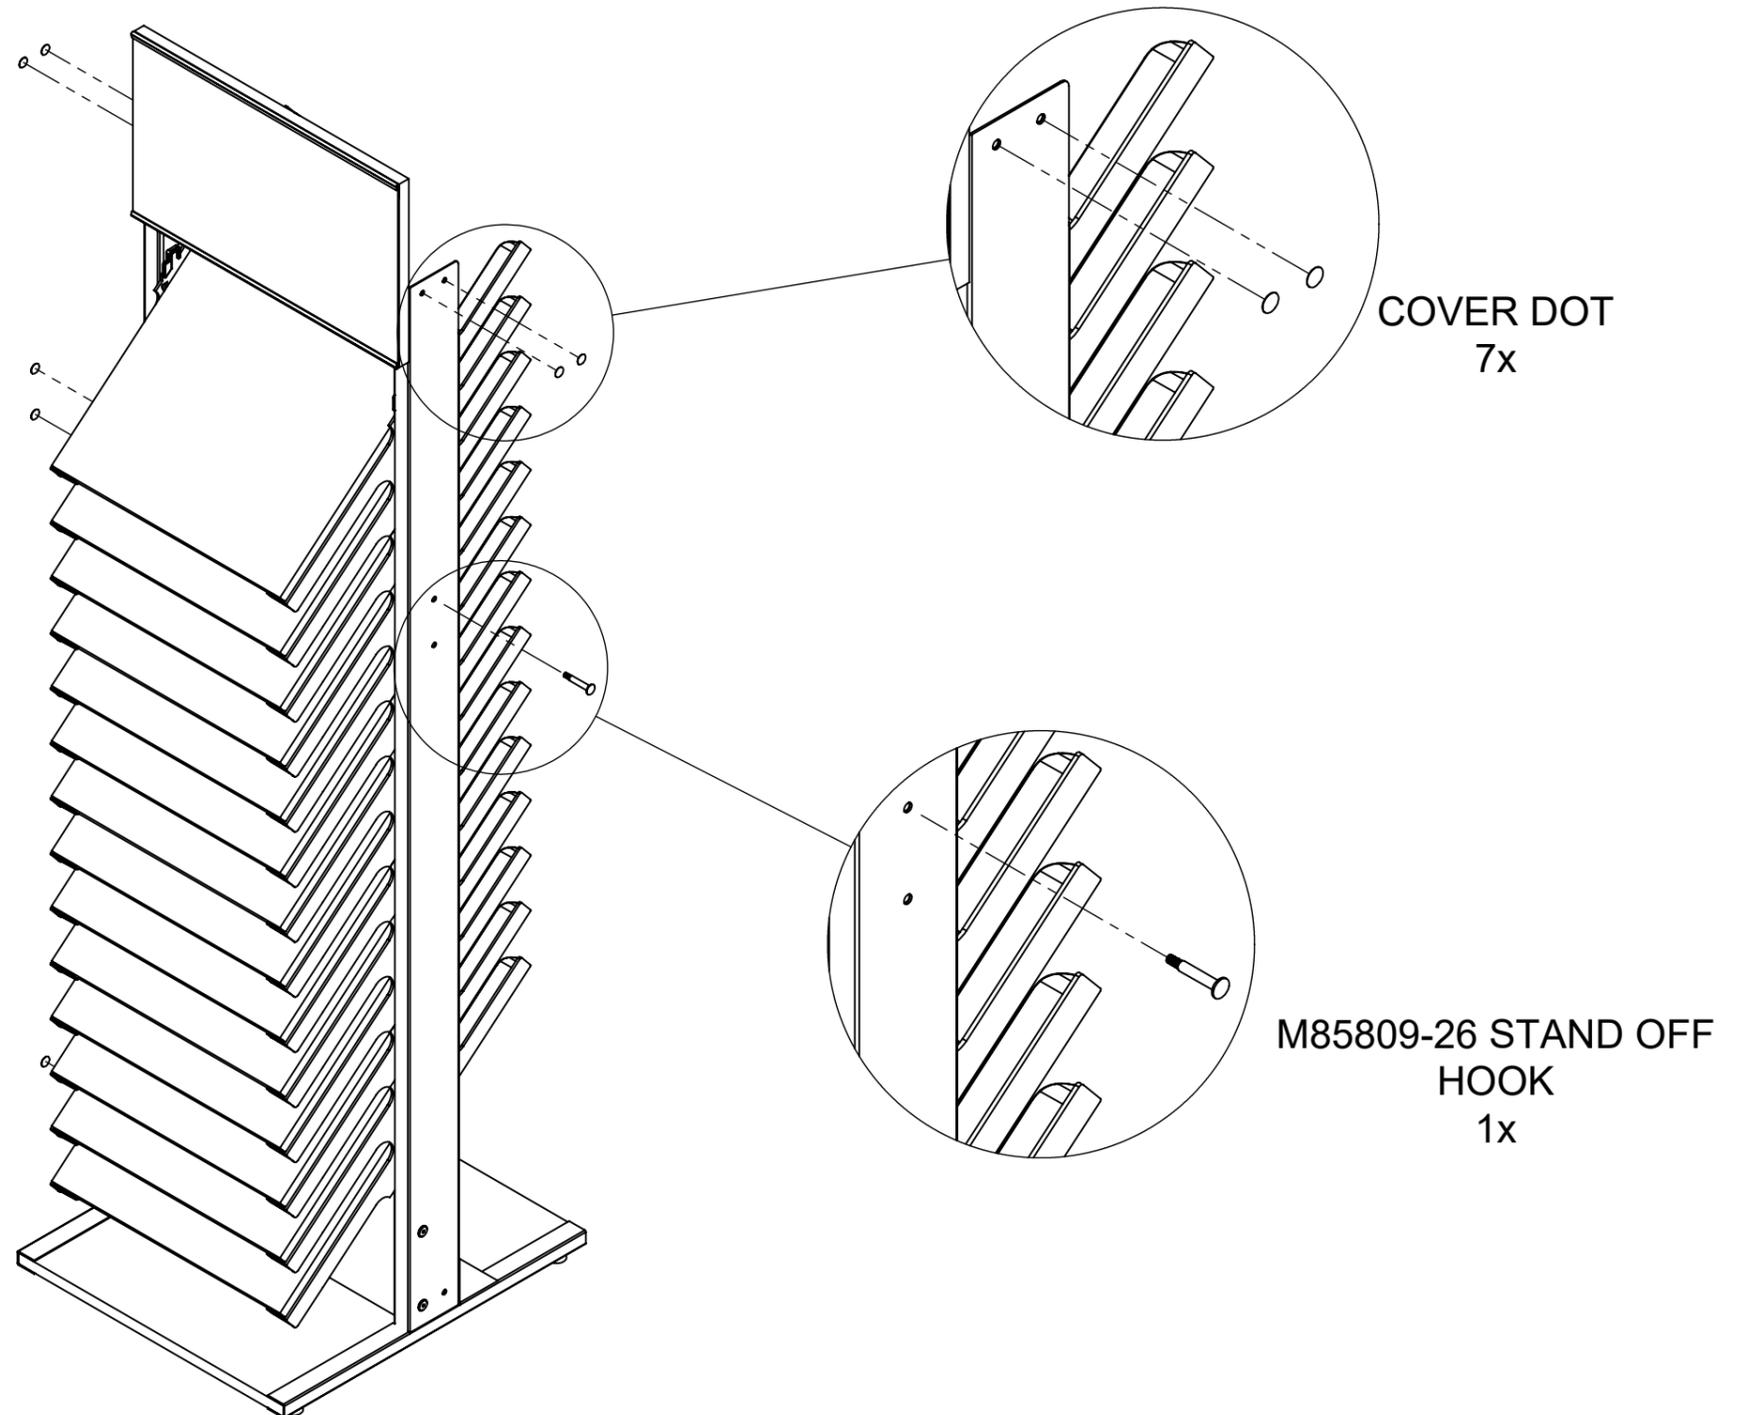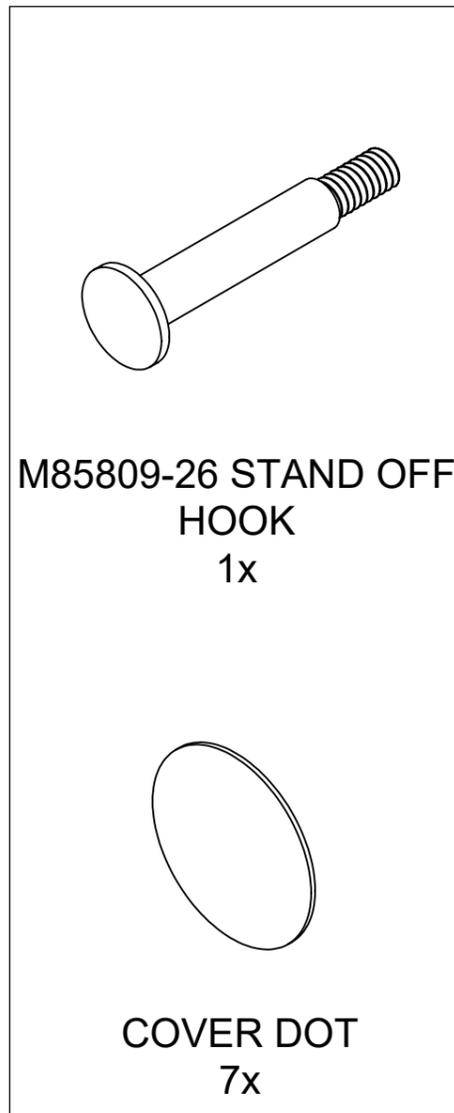

Step 10

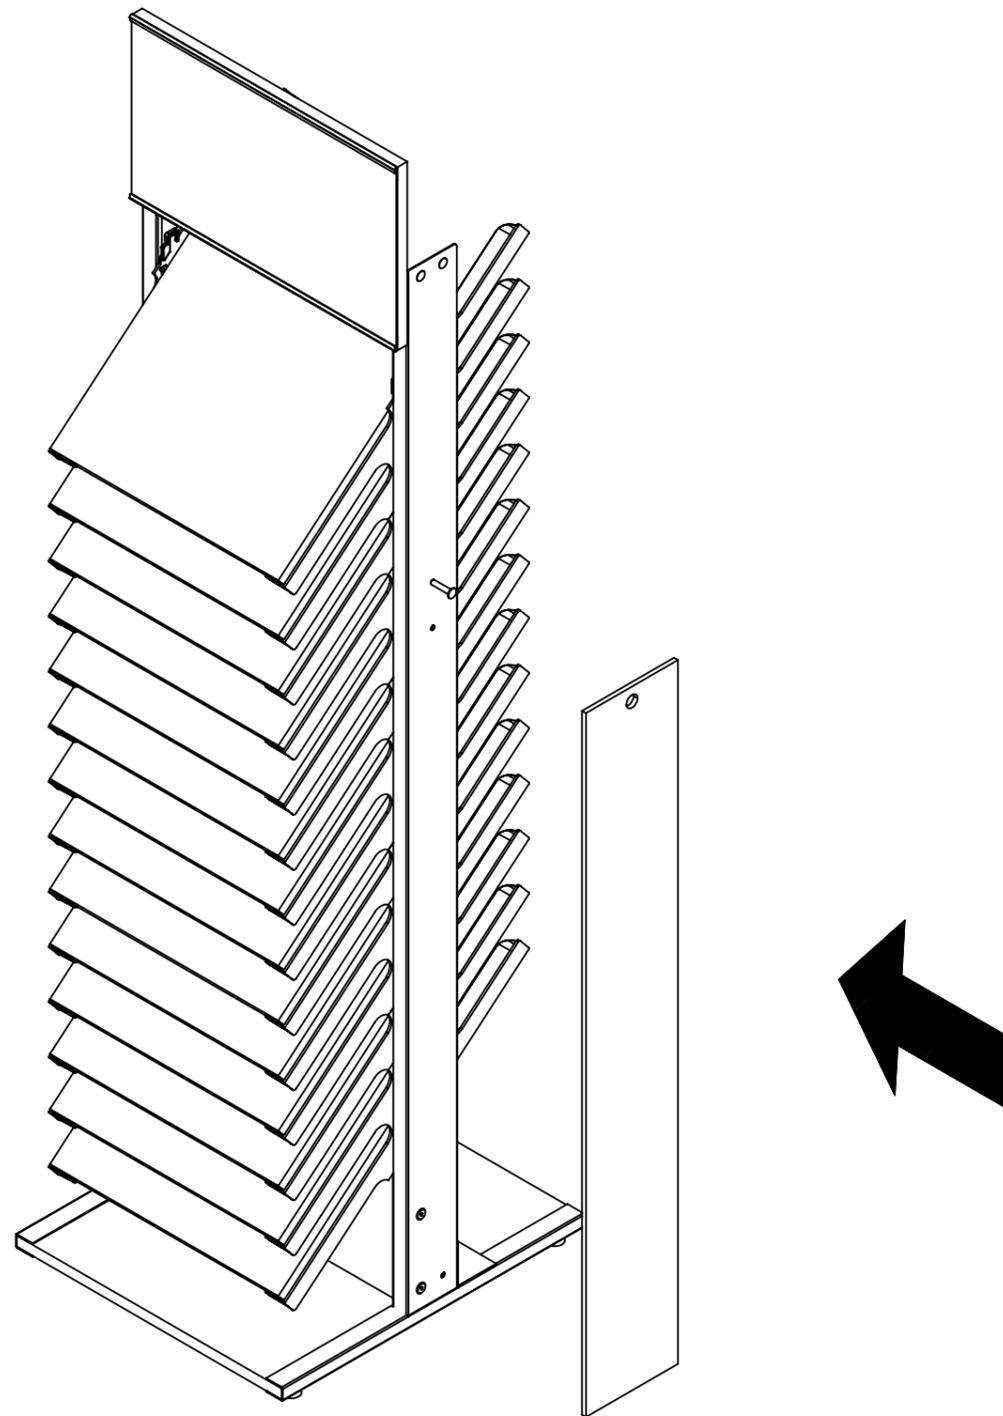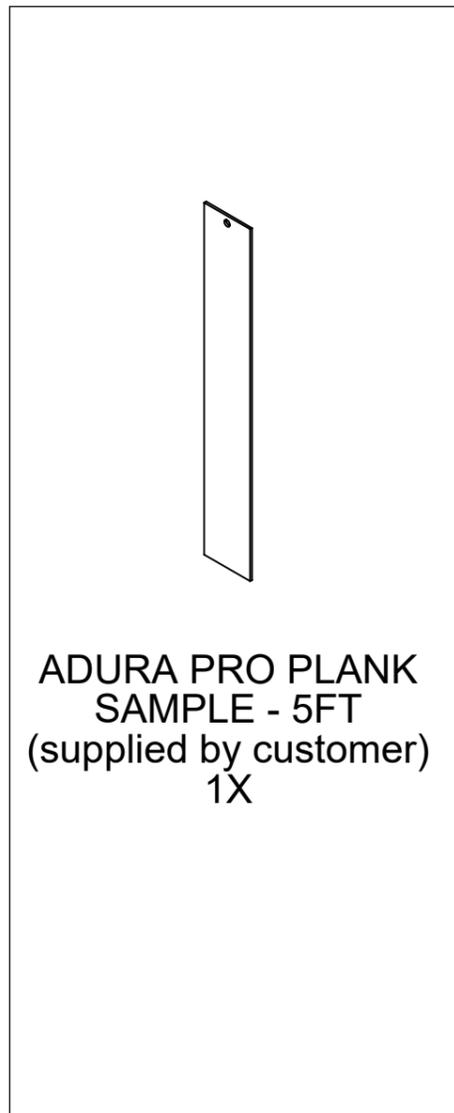

**CONGRATULATIONS YOU HAVE SUCCESSFULLY ASSEMBLED
AduraPRO 1 - tier display**

NEVER MOVE LOADED DISPLAY

MAKE SURE ALL FASTENERS ARE TIGHTENED