

A duraPRO 2-Tier Retrofit
ASSEMBLY INSTRUCTIONS

JAN 2026

42.3" W x 23.8" D x 80.0" H

CARTON CONTENTS

SAP 592047 - Side Plank Holder Retrofit

23.0" x 7.5" x 2.5" WGT:2.5lbs QTY REQ= 1

Description	Part QTY
SA3669-A TOP PLANK HOLDER	1
M3669-15 BOTTOM PLANK HOLDER	1
M3669-19 PLANK RETRO FIT BRACKET	1
M85809-26 STAND OFF HOOK	1
Hardware	1
Instructions	1

SAP 592048 AduraPRO2-Tier Retrofit Graphics


60.2" x 23.8" x 1.2" WGT:4lbs QTY REQ= 1

Description	Part QTY
G3669001-01 GRAPHIC FILLER	1
G3669001-02 HEADER GRAPHIC	1



Missing or damaged parts? Contact: displaycustomerservice@mohawkind.com
Need help with assembly? Call **856-853-7500** and ask for a Dal-Tile representative


Step 1

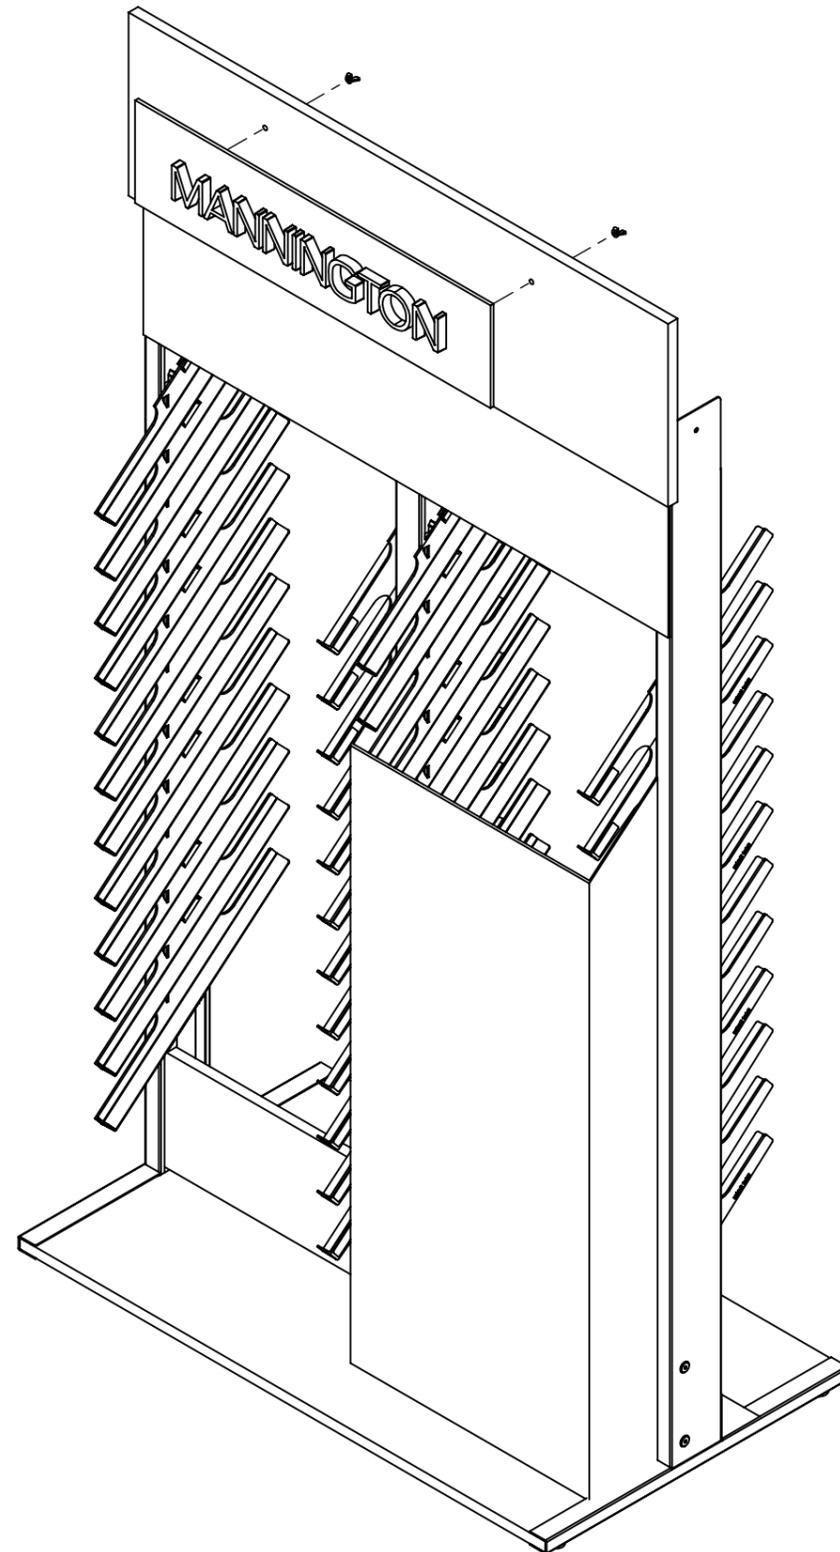


Remove the logo

Step 2

Remove graphics

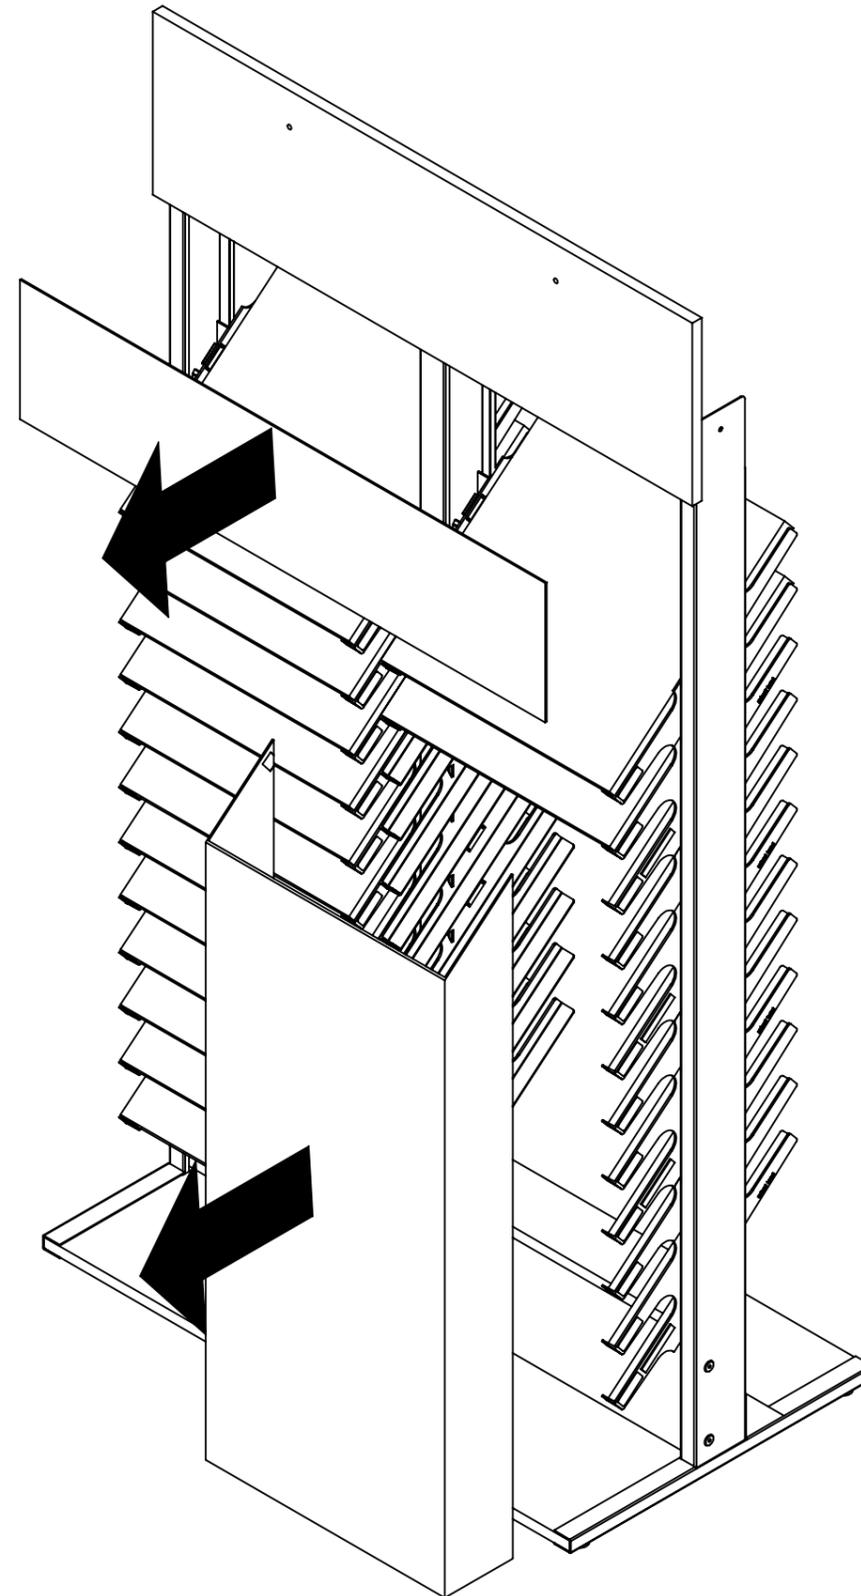


Step 3

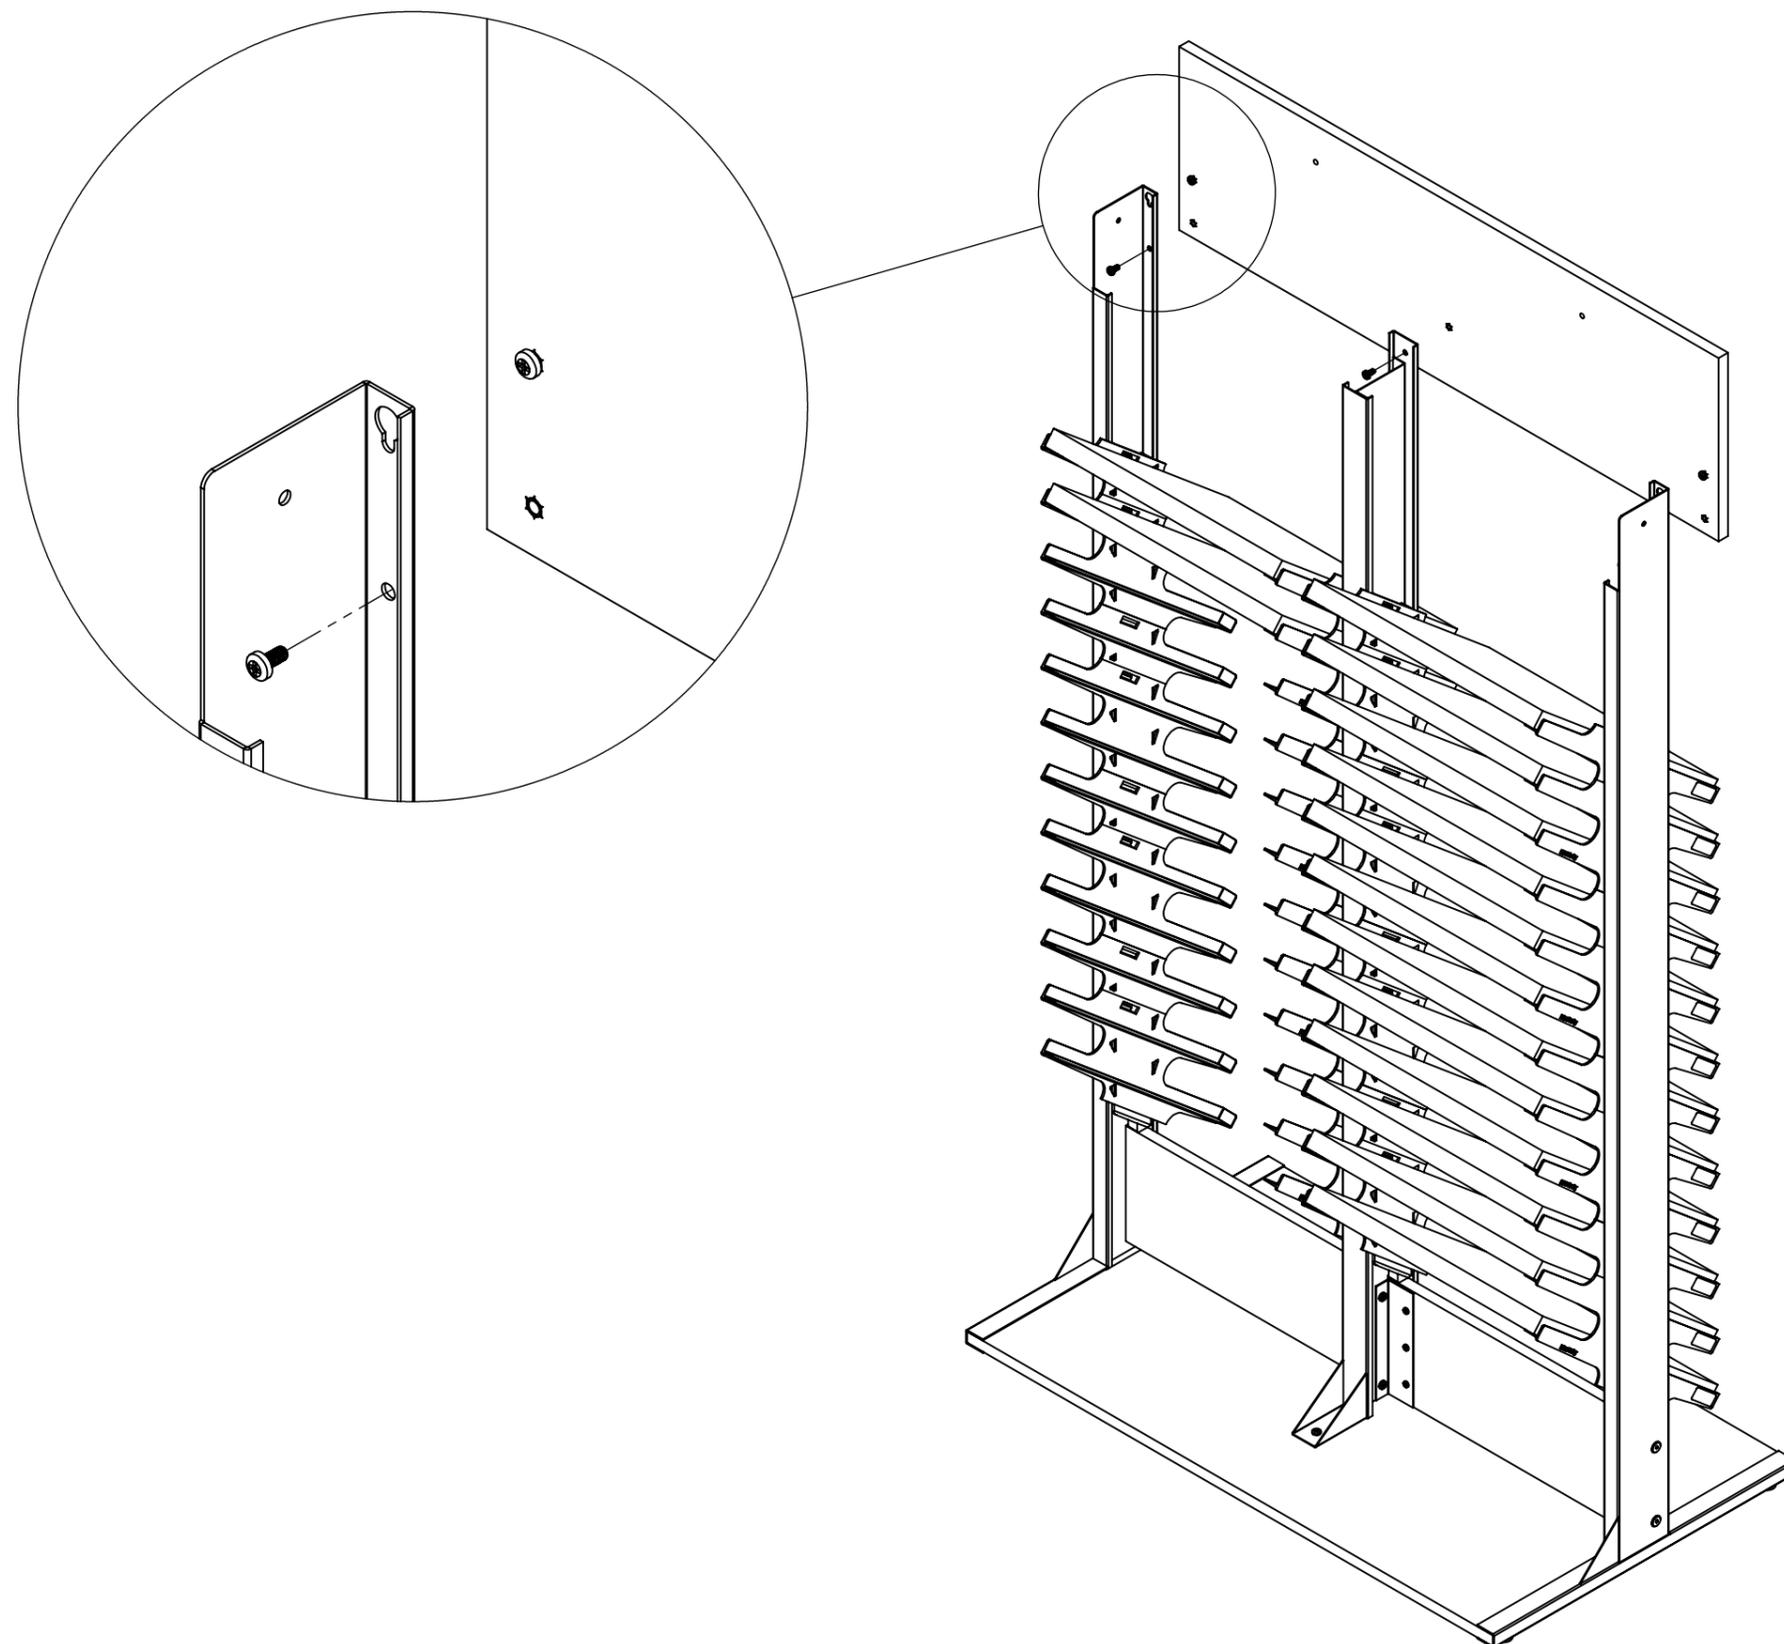


Remove the Header

Step 4

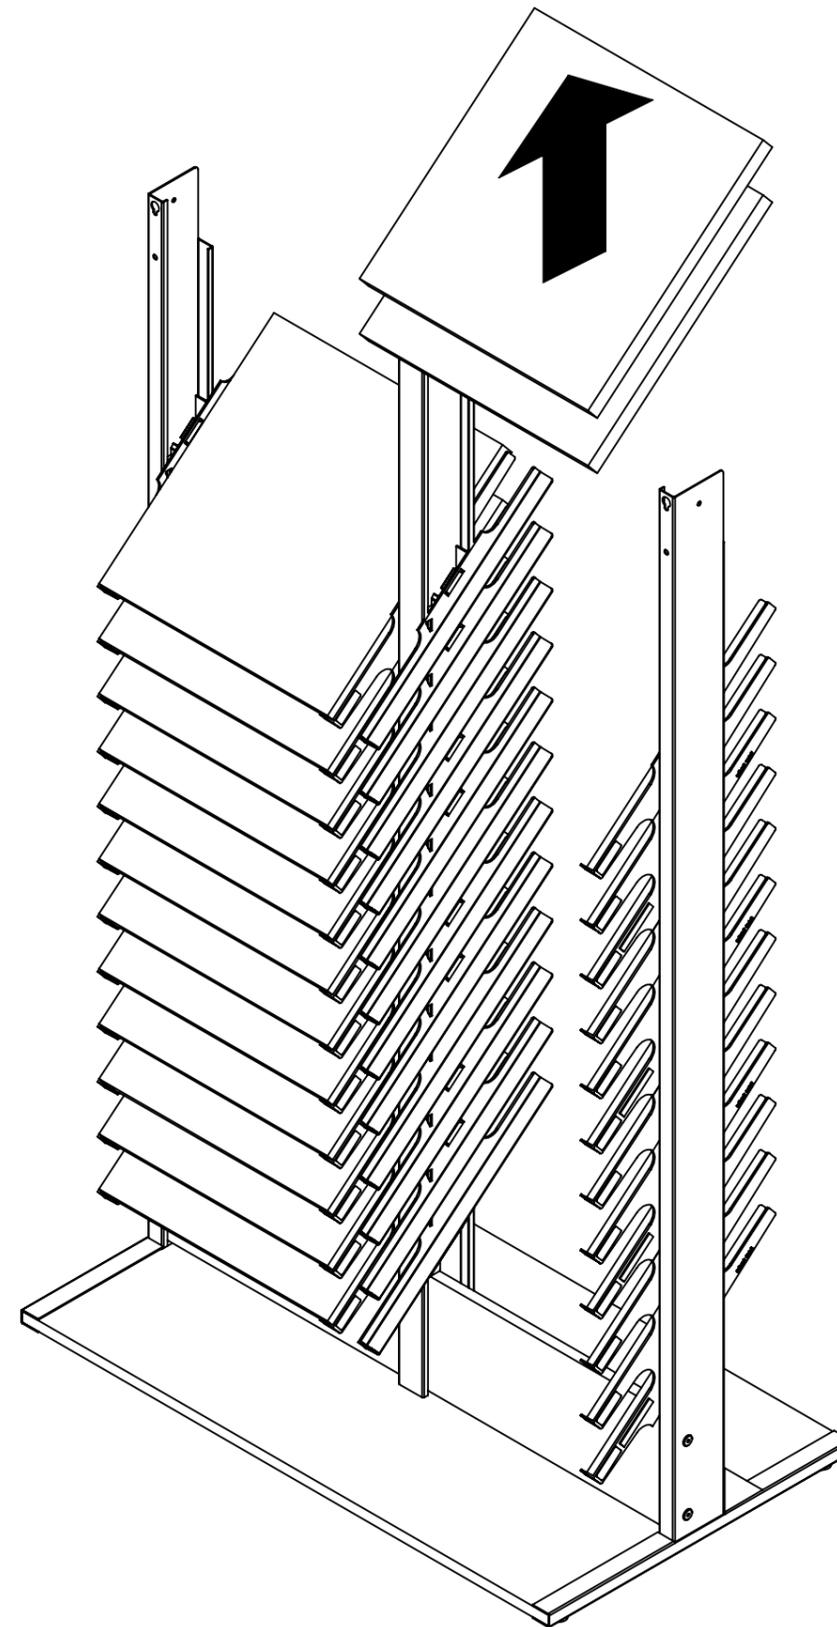


Remove samples

Step 5

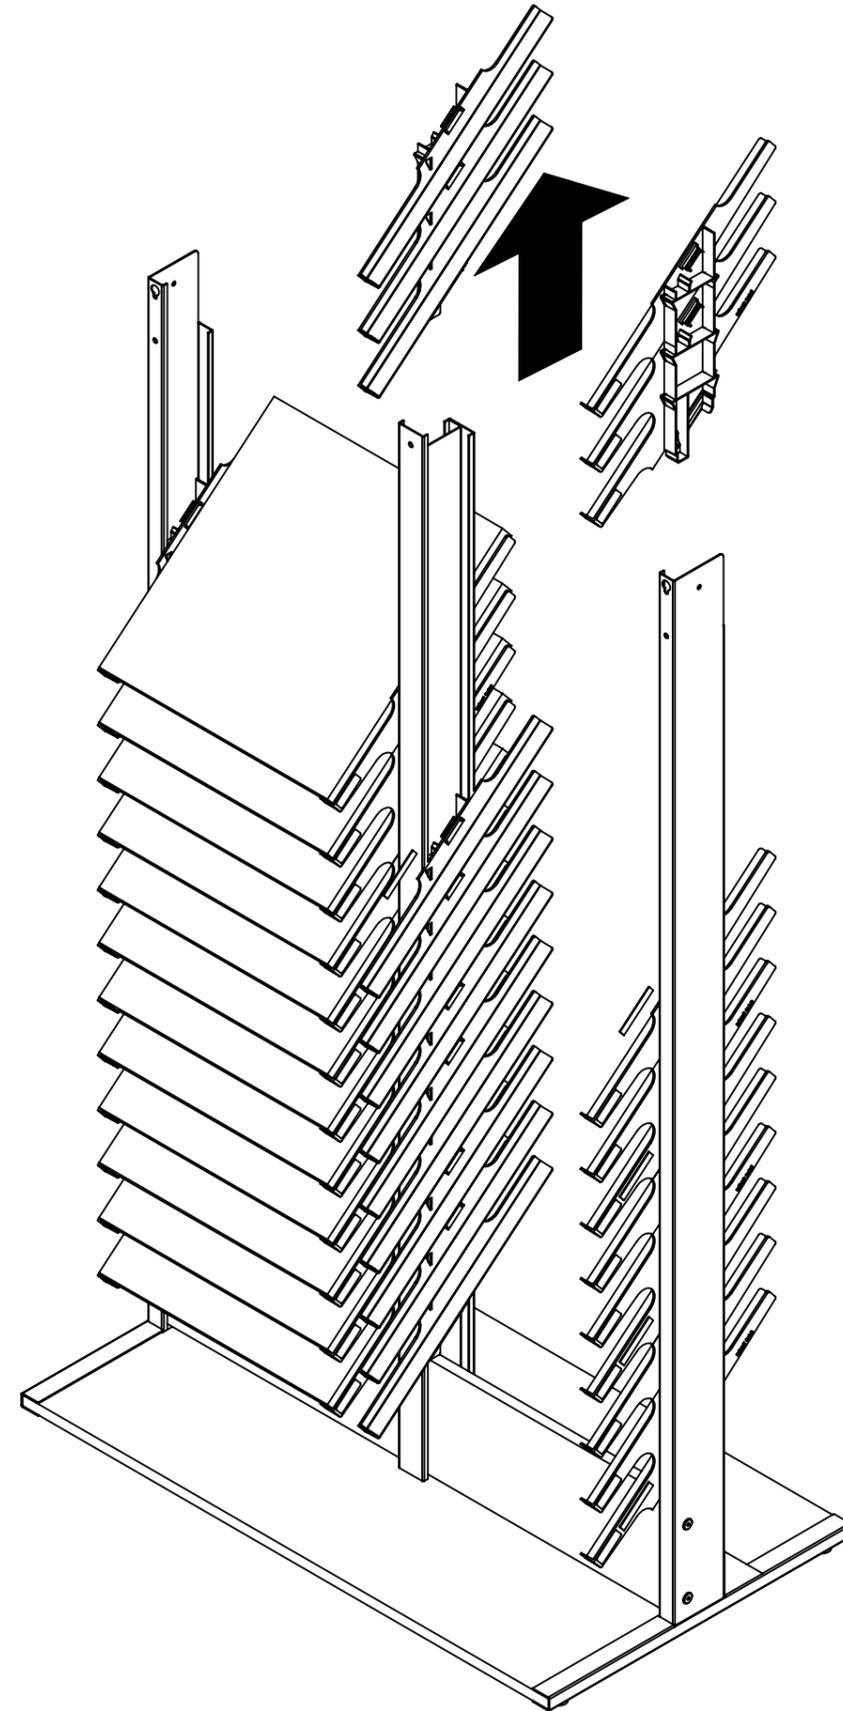

Slide out 4 sets of triple rails


Step 6

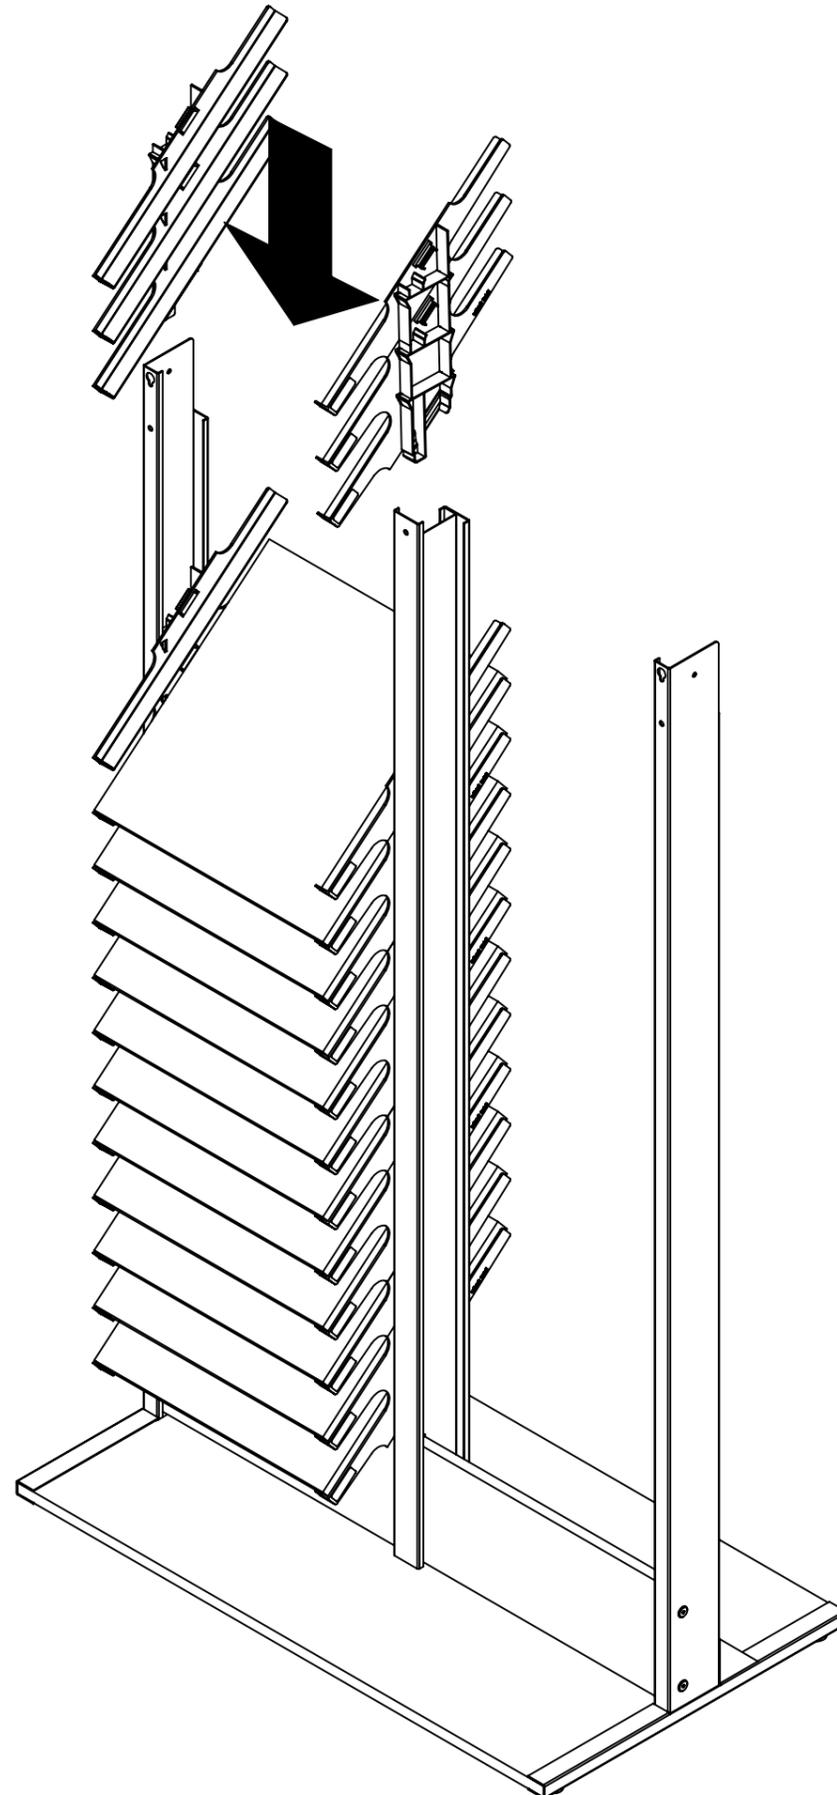




Install 1 set of triple Rails to left side



Step 7


Re-Install the Header

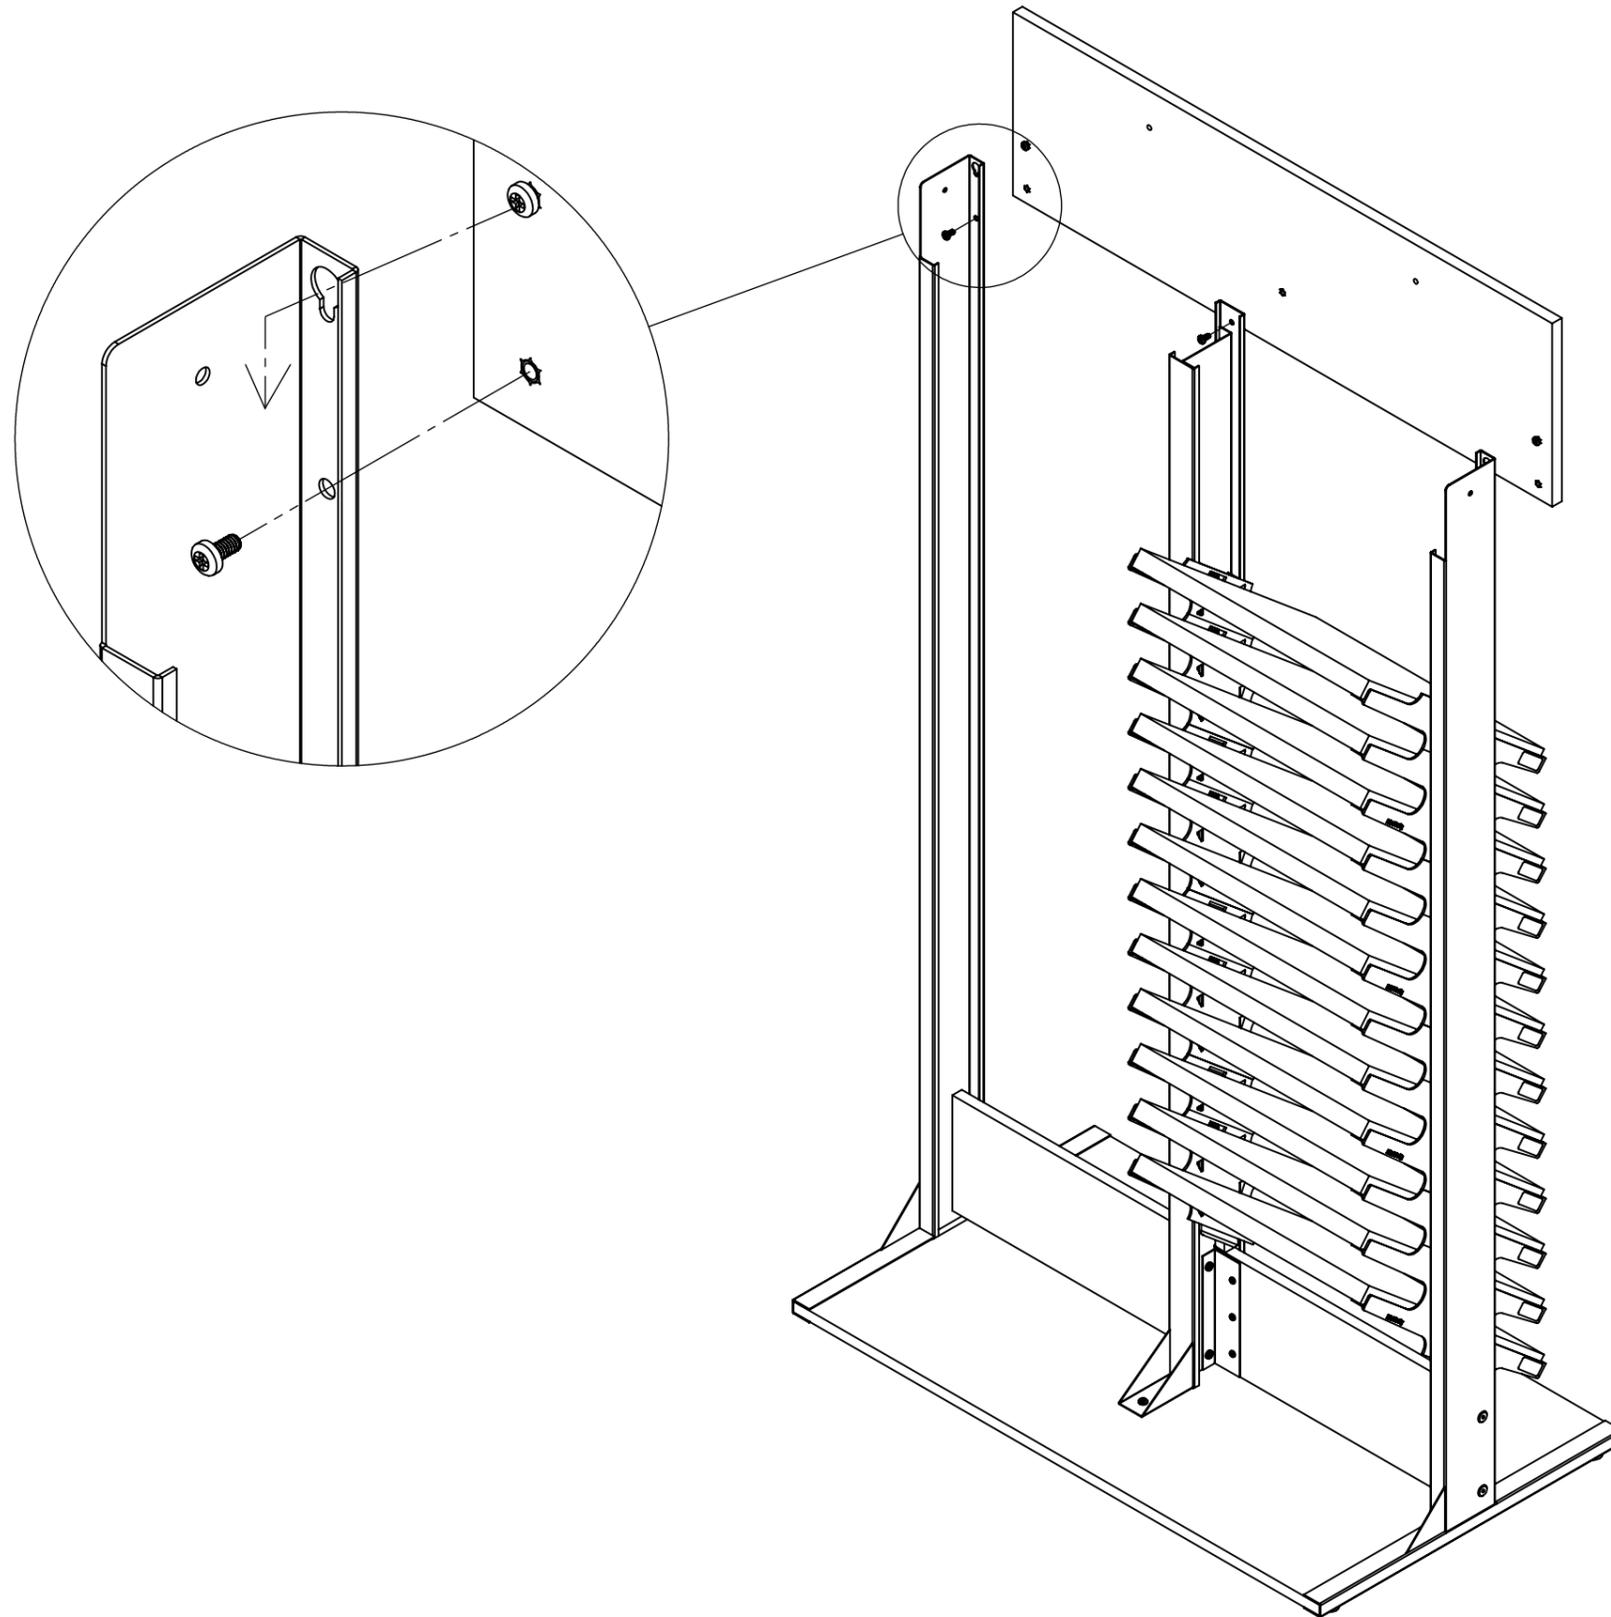

Step 8

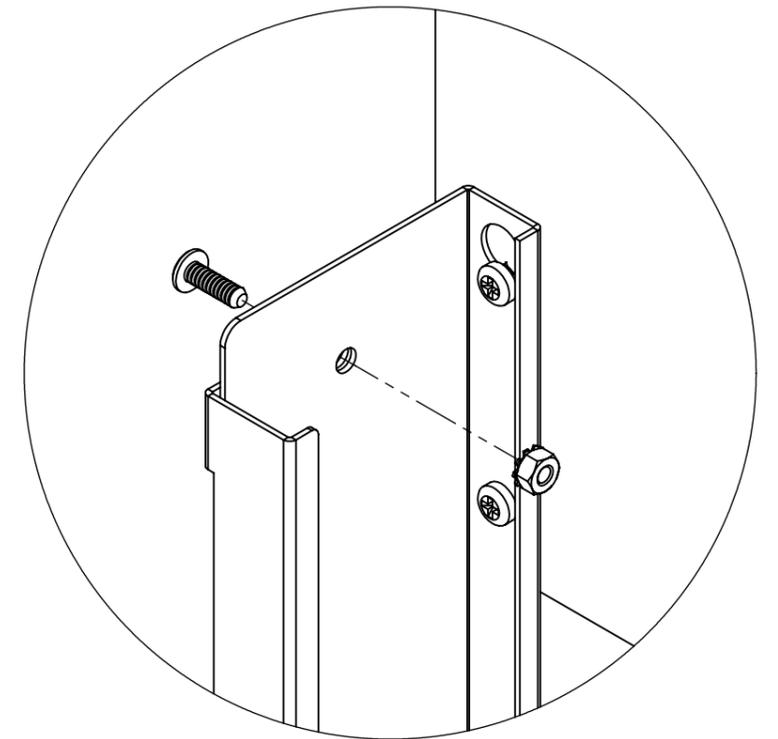
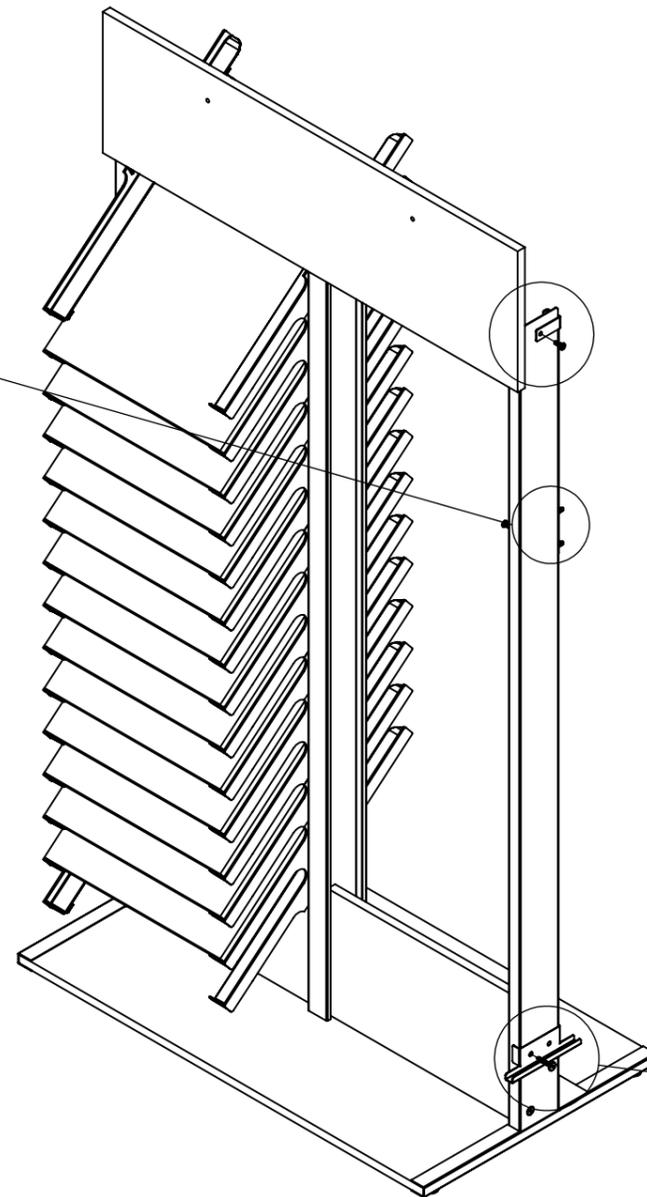
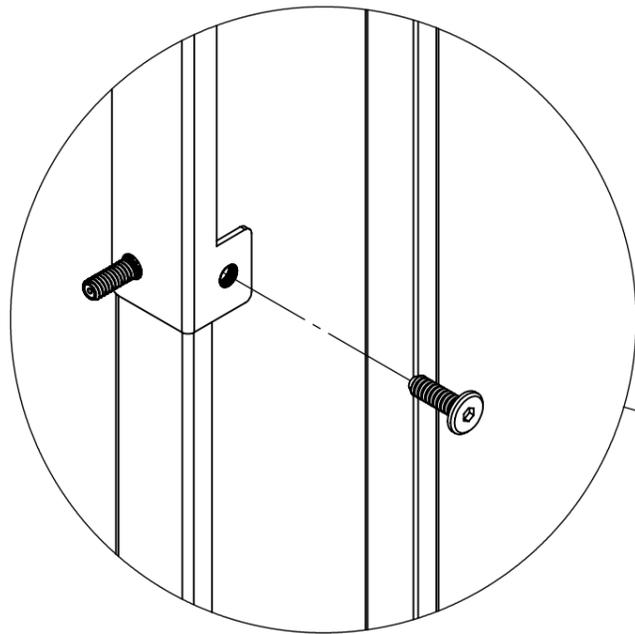


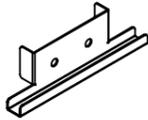	
M3669-19 PLANK RETRO FIT BRACKET 1x	M3669-15 BOTTOM PLANK HOLDER 1x
	
	DECO BOLT BC 13mm 2x
	
	1/4-20 TOOTH LOCK NUT 1x

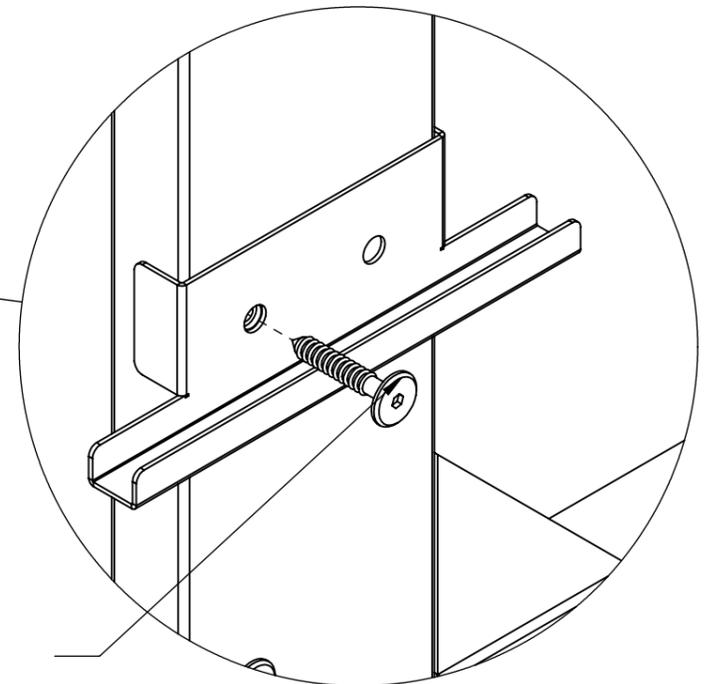

NOTE: Remove screw from leg, then reinstall to attach
BOTTOM PLANK HOLDER

Step 9

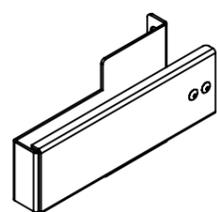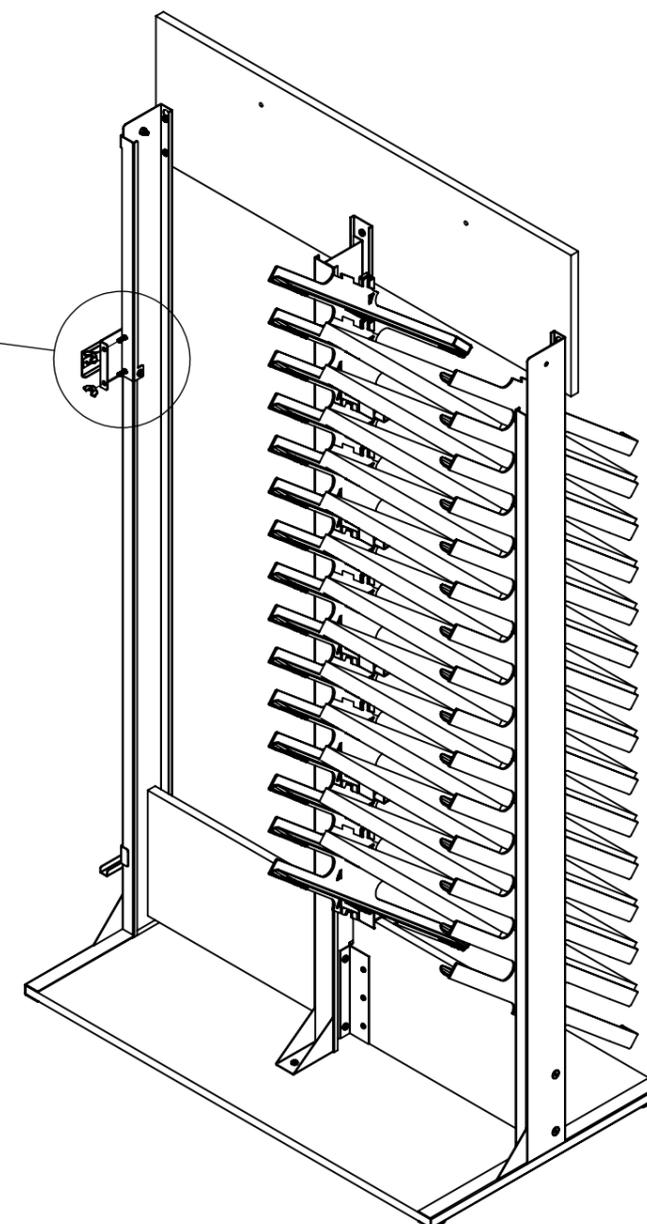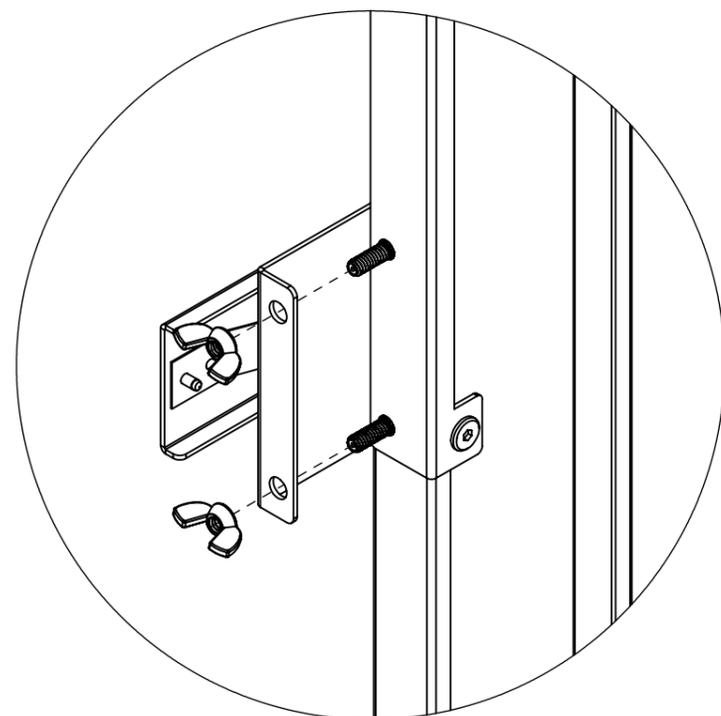


SA3669-A TOP
PLANK HOLDER
1x





1/4-20 WING NUT
2x

Step 10

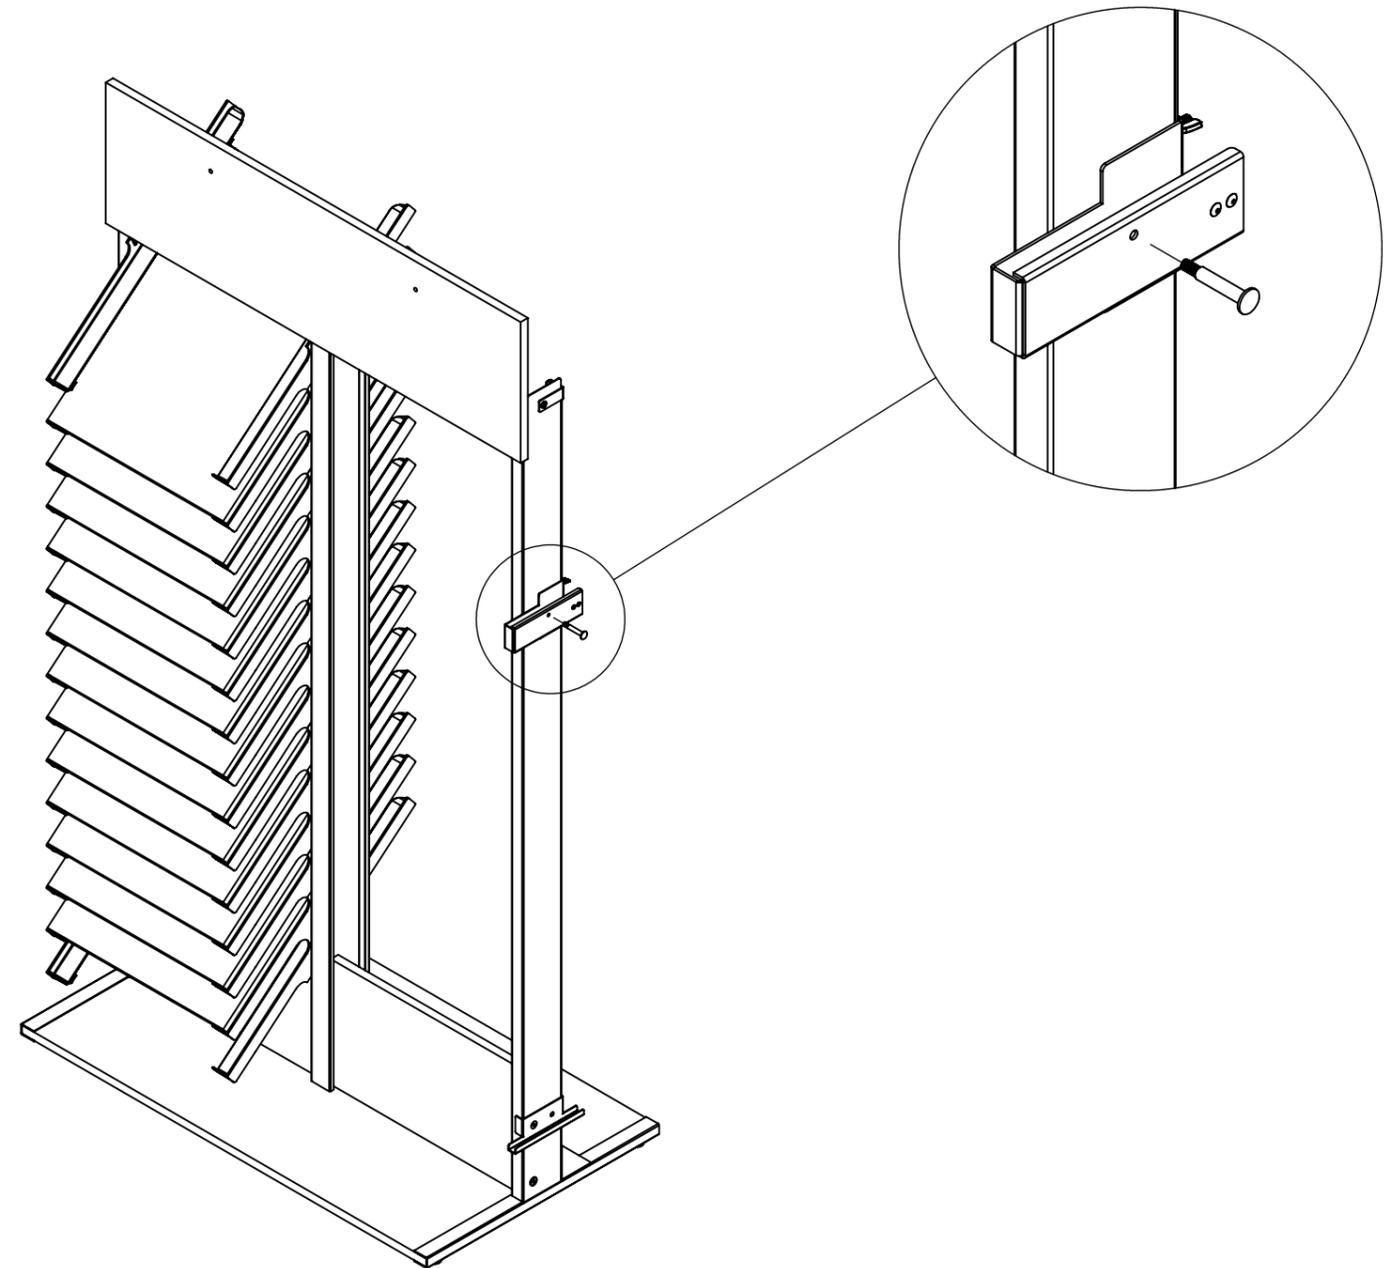

Step 11

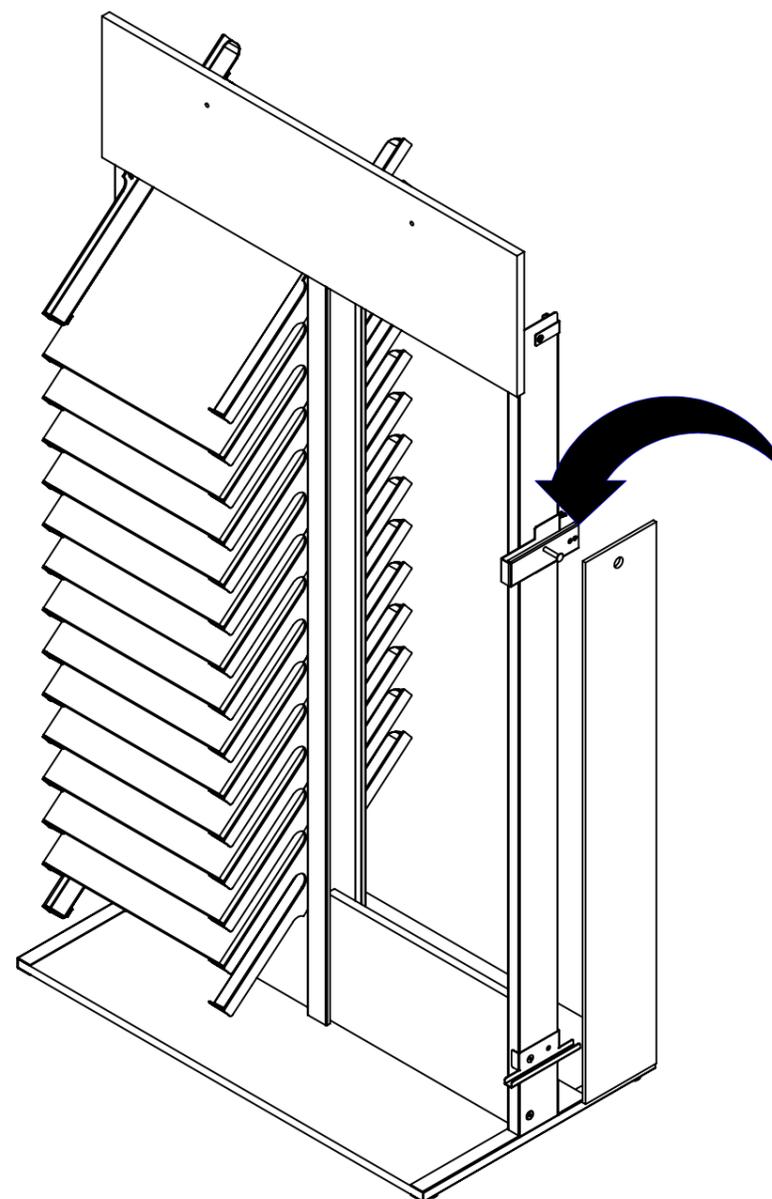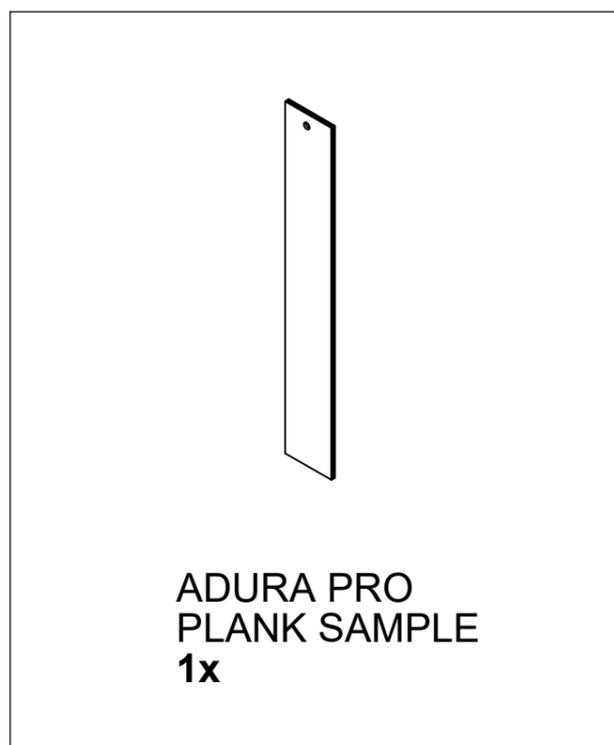

Step 12

