

APEX 3-TIER DISPLAY ASSEMBLY INSTRUCTIONS

JAN 2026

78.5" W x 23.8" D x 78.1" H

CARTON CONTENTS

SAP 592049 - Display Shell

75.4" x 26.6" x 3.2" WGT:65.0lbs QTY REQ= 1

Description	Part QTY
M85809-30 LEFT LEG	1
M85809-22 RIGHT LEG	1
M85809-28 RIGHT-MID LEG	1
M85809-29 LEFT-MID LEG	1
M85761-20 LEFT SAMPLE CLAMP	2
M85809-26 STAND OFF HOOK	1
M85809-31 HEADER BRACKET	1
M85809-32 BRACE BRACKET	2
M85809-27 BASE SUPPORT	1
M8609801-05 BOTTOM PIVOT BRACKET	1
M86607-08 Top Pivot Bracket	1
HW3670 Hardware	1
INST3670 Instructions	1

SAP 592049 - Flat Panels

66.5" x 26.1" x 2.8" WGT:64.0lbs QTY REQ= 1


Description	Part QTY
W85809-09 BRACE	1
W85809-10 BASE	1
W86607-10 HEADER WITH CHANNELS	1
G3670-01 VERTICAL GRAPHIC	1
G86607-01 Header Graphic	1

SAP 348609 - Adura Rails - 4 sets

20" x 10" x 14" WGT:11lbs QTY REQ= 2

Description	Part QTY
P85496-01 Left Triple Rail	4
P85496-02 Right Triple Rail	4

RECOMMENDED TOOLS

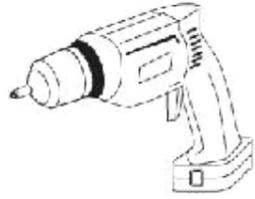


CORDLESS
POWER DRILL



PHILLIPS HEAD
SCREW DRIVER



4mm HEX KEY

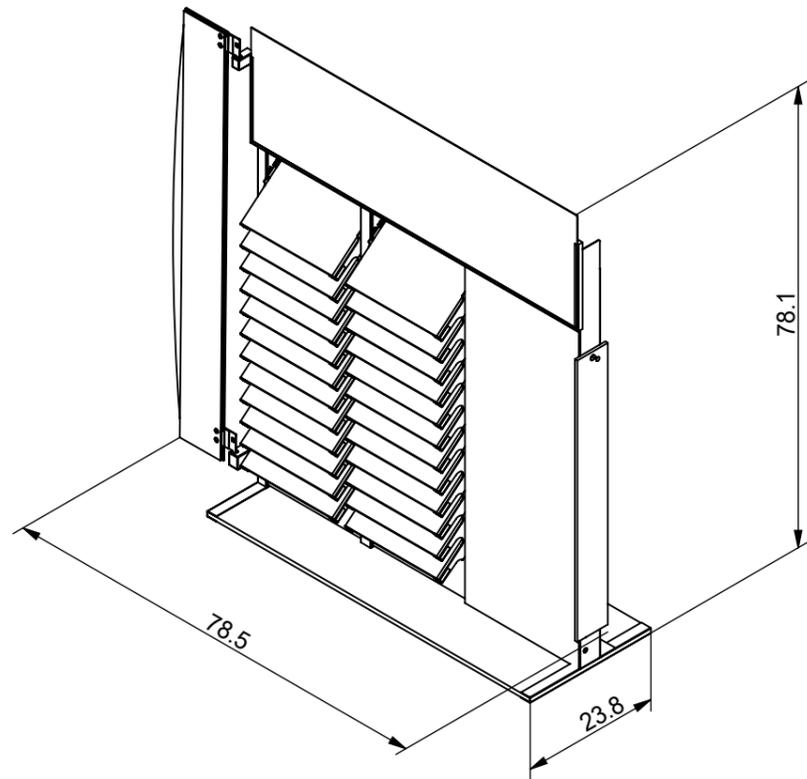

Be sure to provide a minimum of 78.5" to install this display.
Display Foot Print: 78.5" x 23.8" x 78.1"



**HAND TIGHTEN ALL FASTENERS
DURING ASSEMBLY.**

**WHEN ASSEMBLY IS COMPLETED
USE APPROPRIATE TOOLS TO SECURE
ALL FASTENERS PERMANENTLY.**

SAFETY GUIDELINES

**Failure to follow the assembly instructions
could result in damage or injury.**

**Install in a level and stable location. If not on a
level surface please level before installation.**

**Assemble display in the area it will occupy.
Never attempt to move display after loading.**

**When using any power tools, always use
eye protection.**




**Do not work on this display with product in it.
Unload display before relocating unit.
Failure to do this may result in damage or injury.**




**For proper installation and safety follow all steps
in sequential order.**

Two people required to set up this display.


PARTS

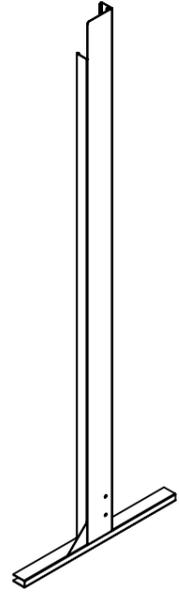


M85809-30
LEFT LEG
1x

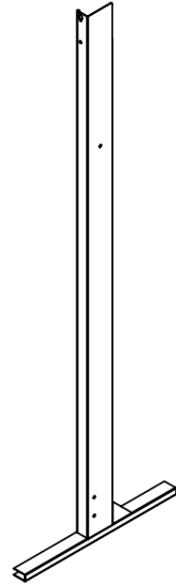


M85809-22
RIGHT LEG
1x




M85809-28
RIGHT-MID LEG
1x



M85809-28
LEFT-MID LEG
1x

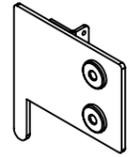


M85761-20
LEFT SAMPLE CLAMP RUN2
2x

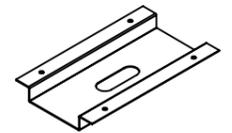

M85809-27
BASE SUPPORT
1x




M85809-26
STAND OFF HOOK
1x

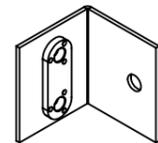


M85809-31
HEADER BRACKET
1x



M85809-32
BRACE BRACKET
2x

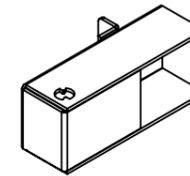


M8609801-05
BOTTOM PIVOT BRACKET
1x

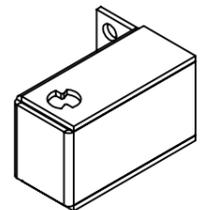


M86607-08
Top Pivot Bracket
1x


PARTS

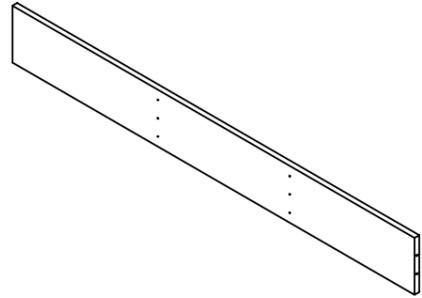


W85809-09
BRACE
1x

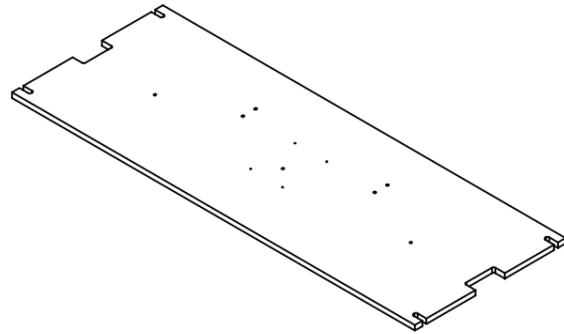


W85809-10
BASE
1x

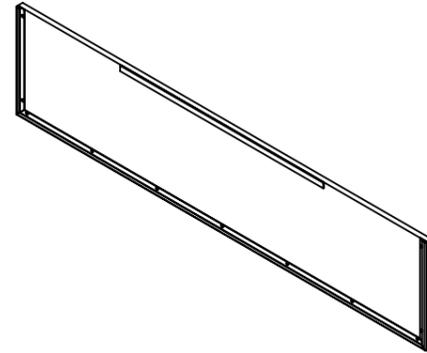


W86607-10
HEADER
1x

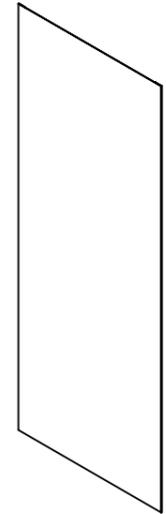


G3670-01
VERTICAL GRAPHIC
1x

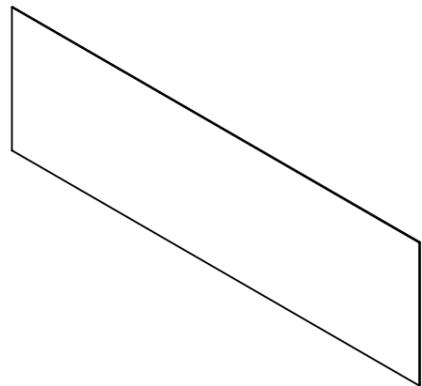


G86607-01
Header Graphic
1x

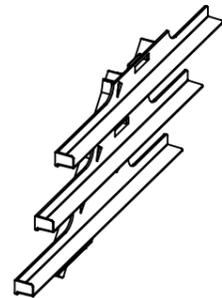

P85496-01
LEFT RAIL
8x

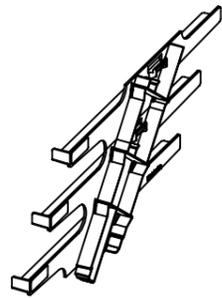

P85496-02
RIGHT RAIL
8x

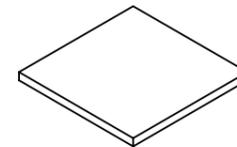

Adura Sample
(CUSTOMER SUPPLY)
24x



PLANK SAMPLE
(CUSTOMER SUPPLY)
1x



LONG PLANK SAMPLE
(CUSTOMER SUPPLY)
1x

HARDWARE



LEVELER
4x



CONFRAMAT SCREW
3x



#10x16mm PH-PH
10x



DECO WOOD SCREW
4x



1/4-20x12.7mm
PH PAN
20x



NYLON FLAT WASHER
2x







20mmFT
DECO BOLT
4x



4mm Hex Key
1x

Step 1

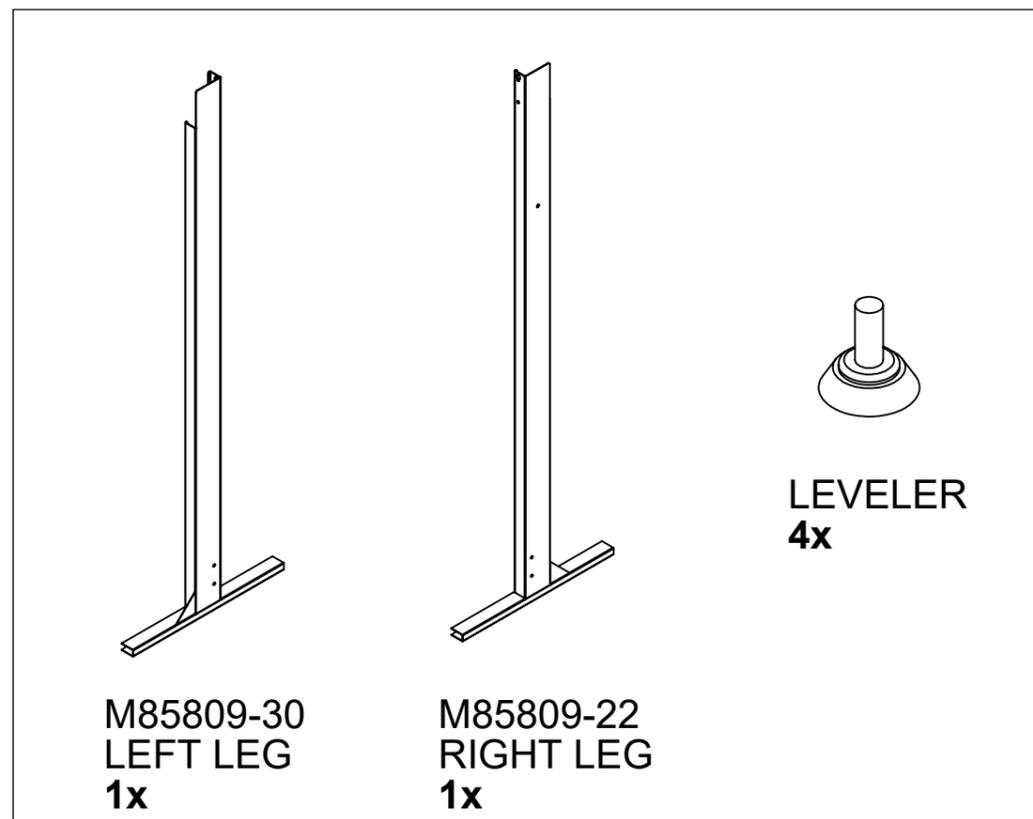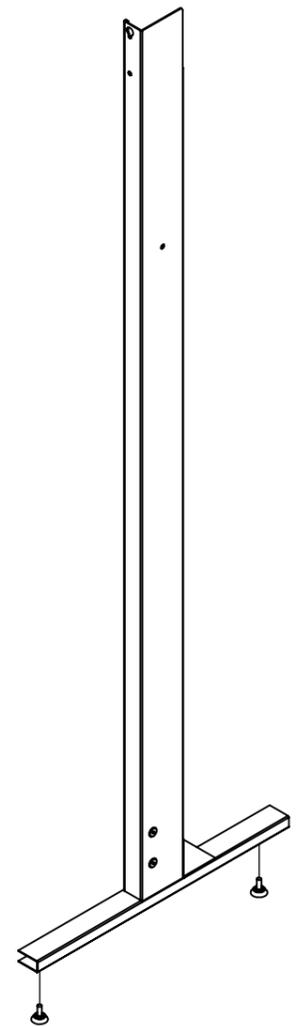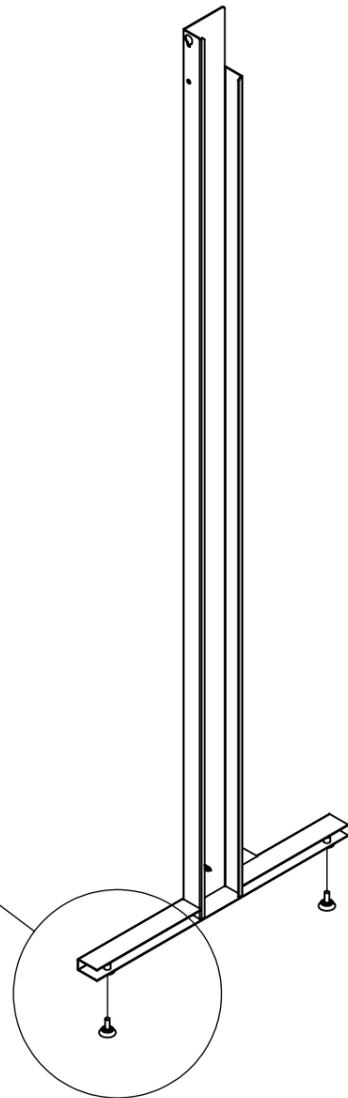
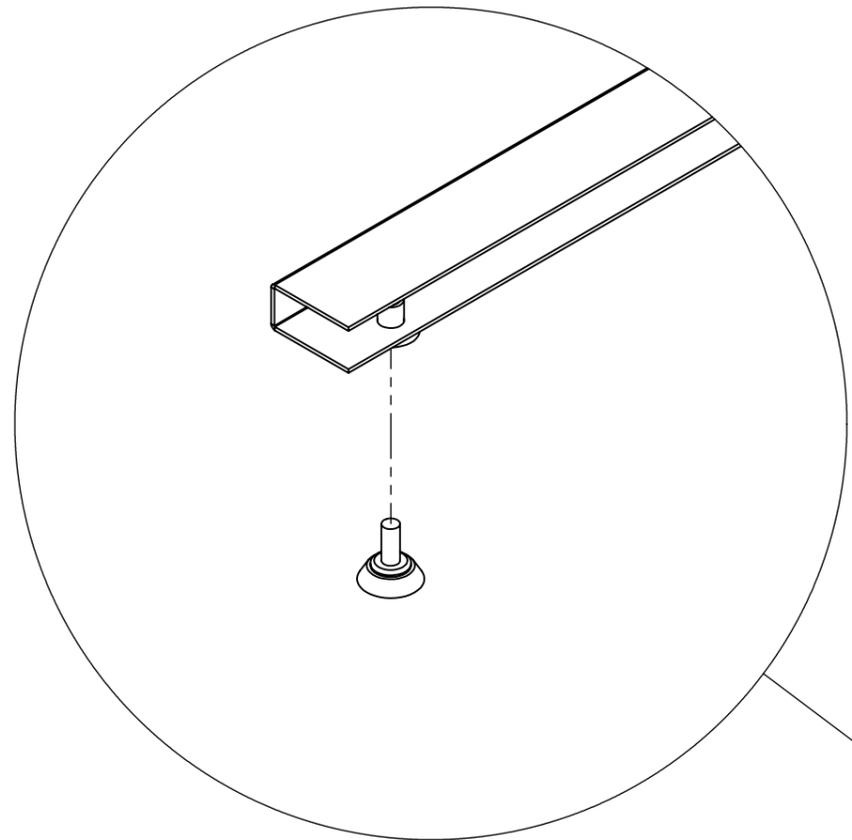


M85809-30
LEFT LEG
1x


M85809-22
RIGHT LEG
1x

LEVELER
4x

Step 2

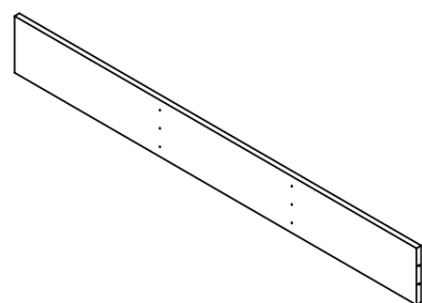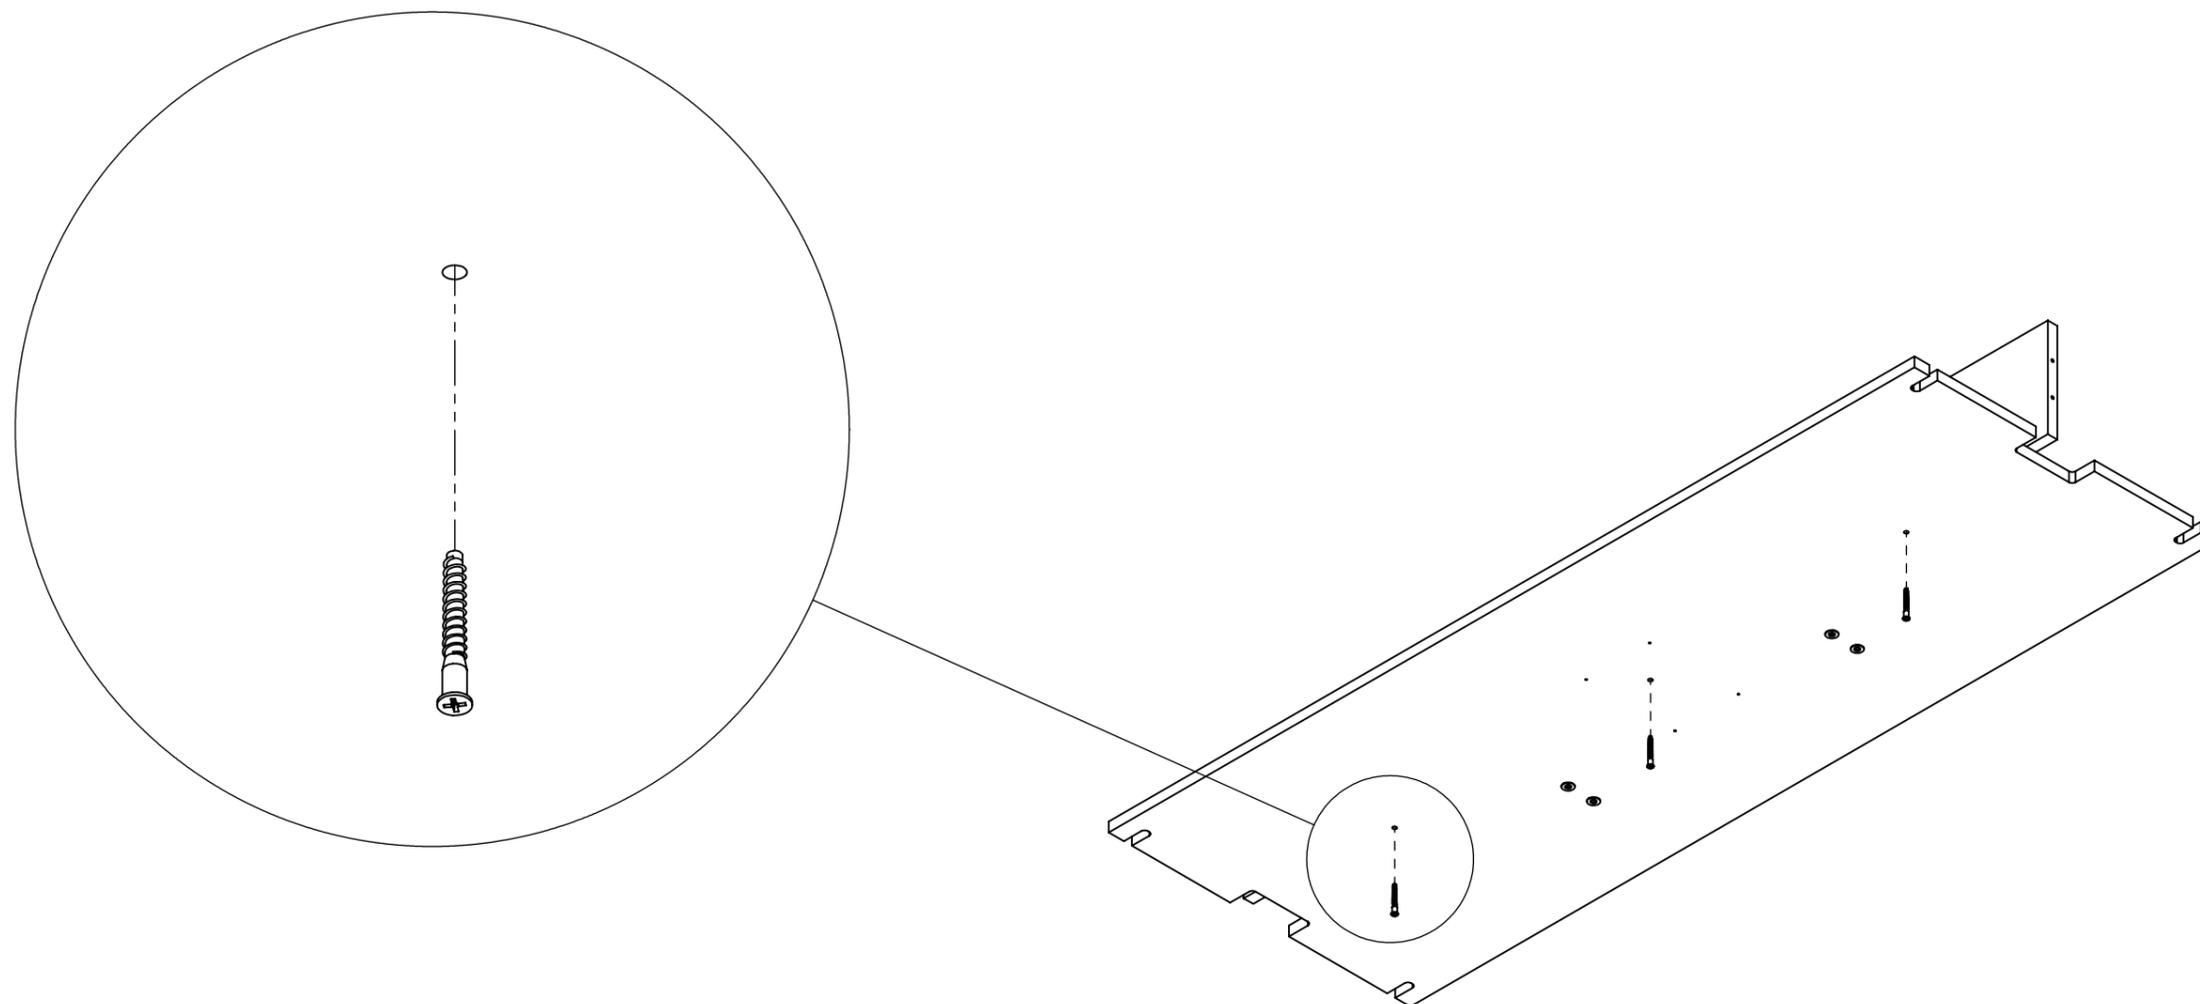

W85809-09
BRACE
1x



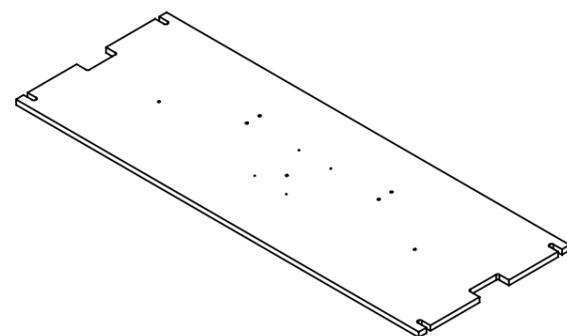


W85809-10
BASE
1x



CONFRAMAT
SCREW
3x

Step 3

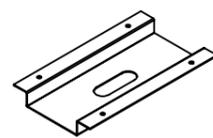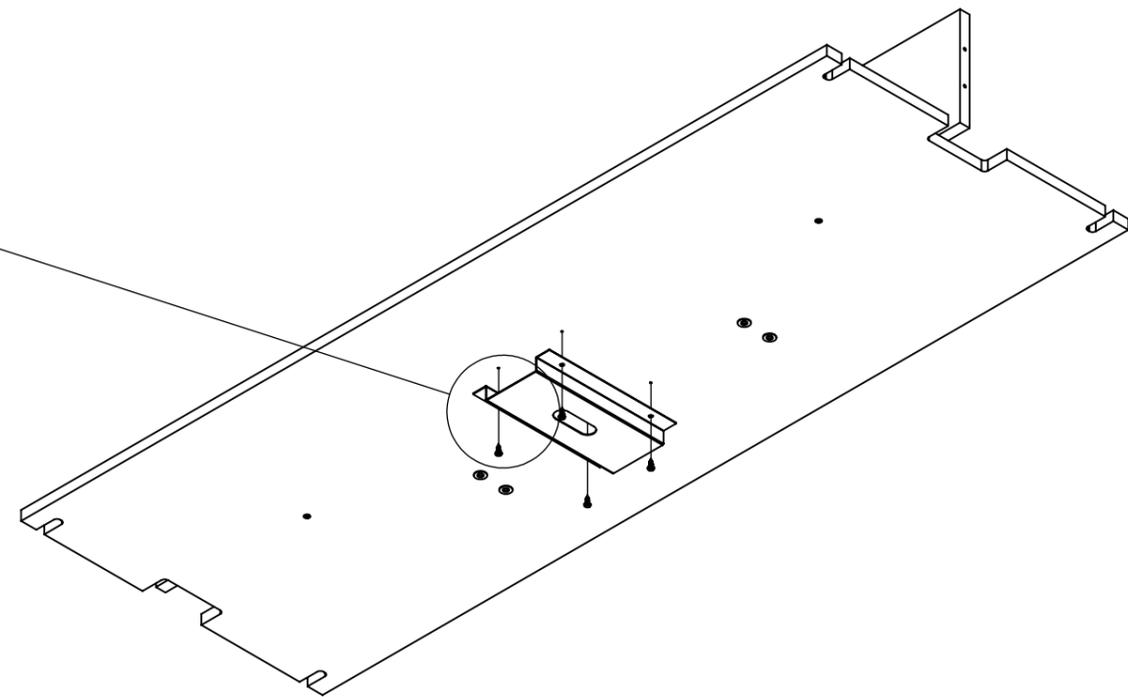
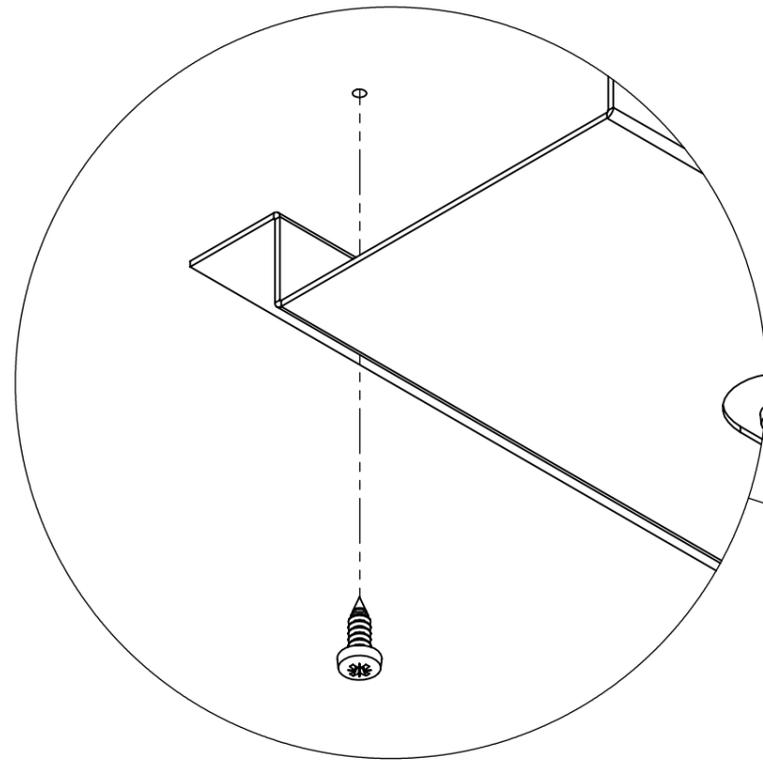


M85809-27
BASE SUPPORT
1x




#10x16mm PH-PH
4x

Step 4

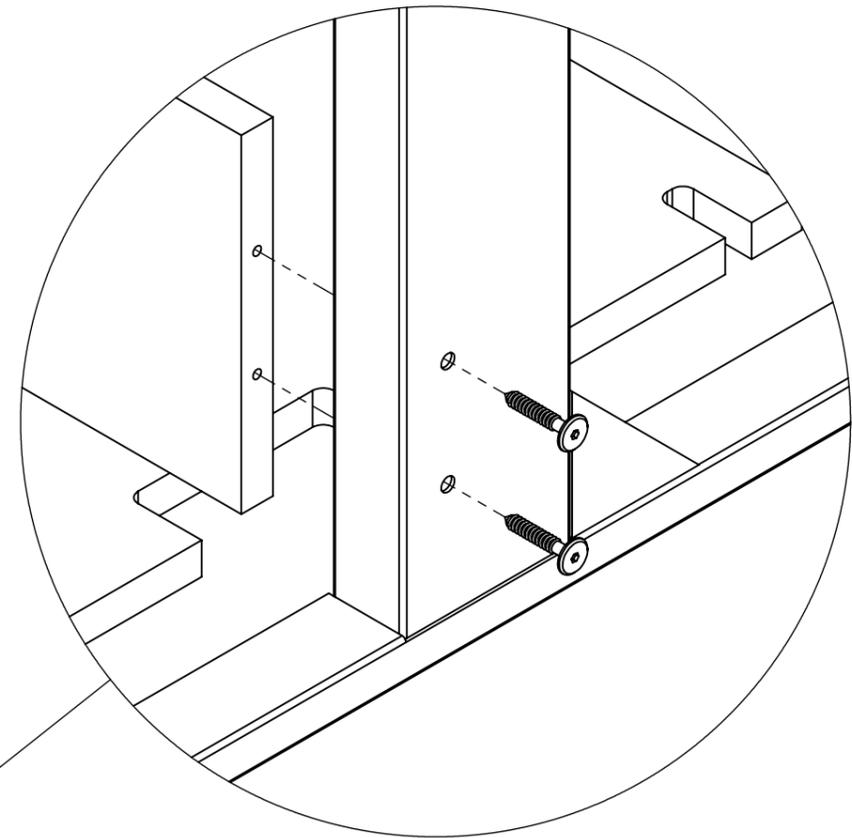
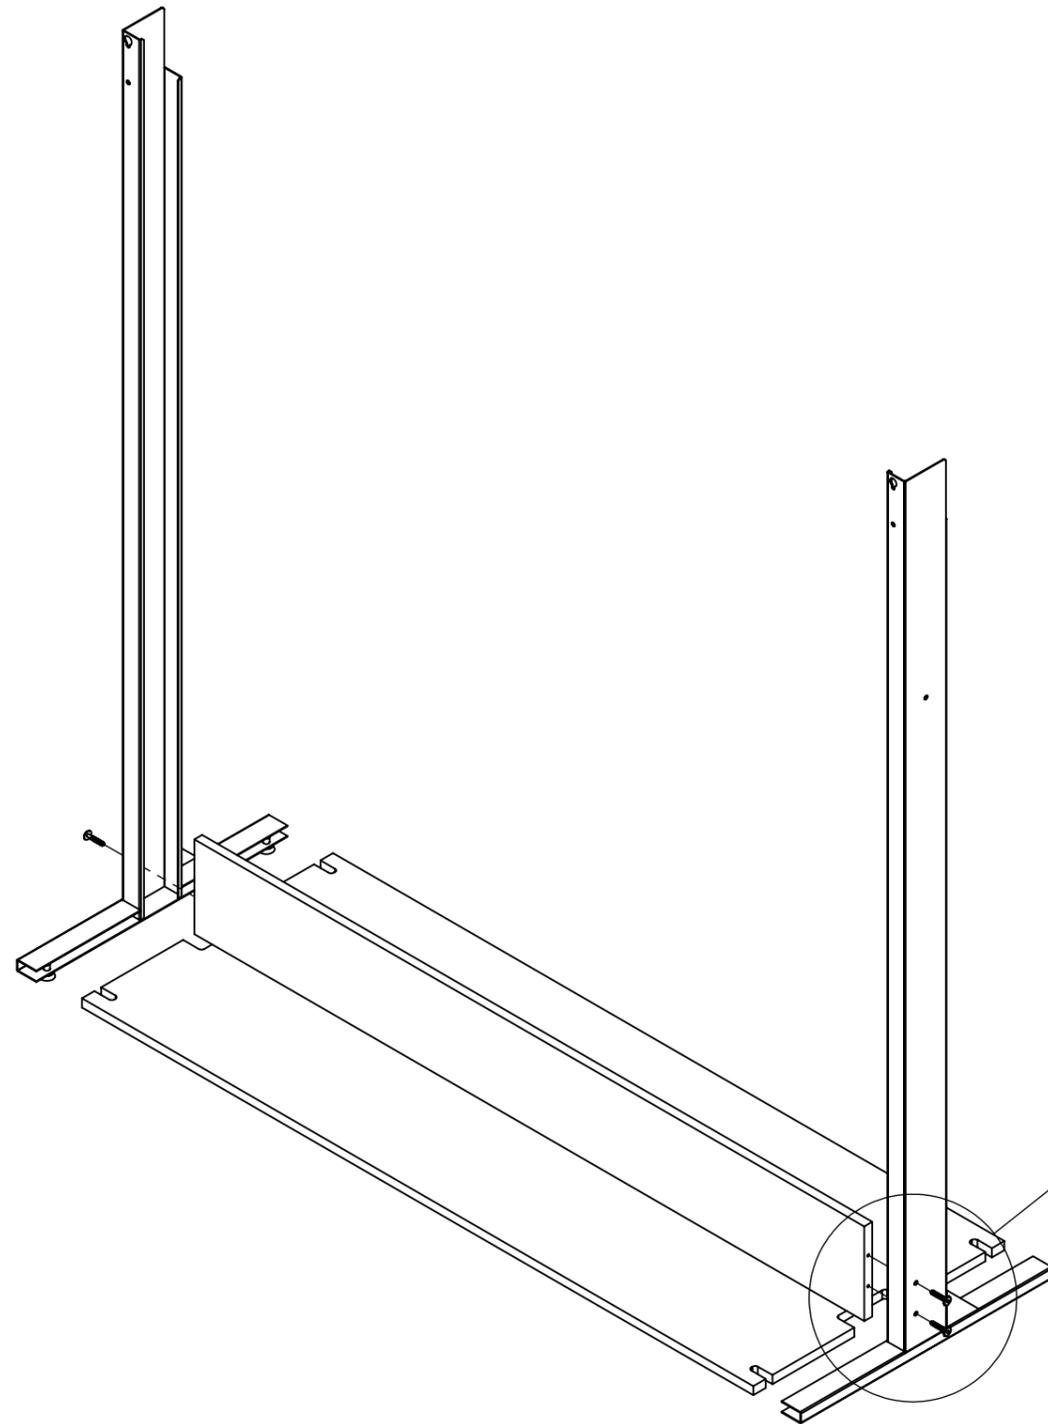




DECO WOOD SCREW
3x

Step 5


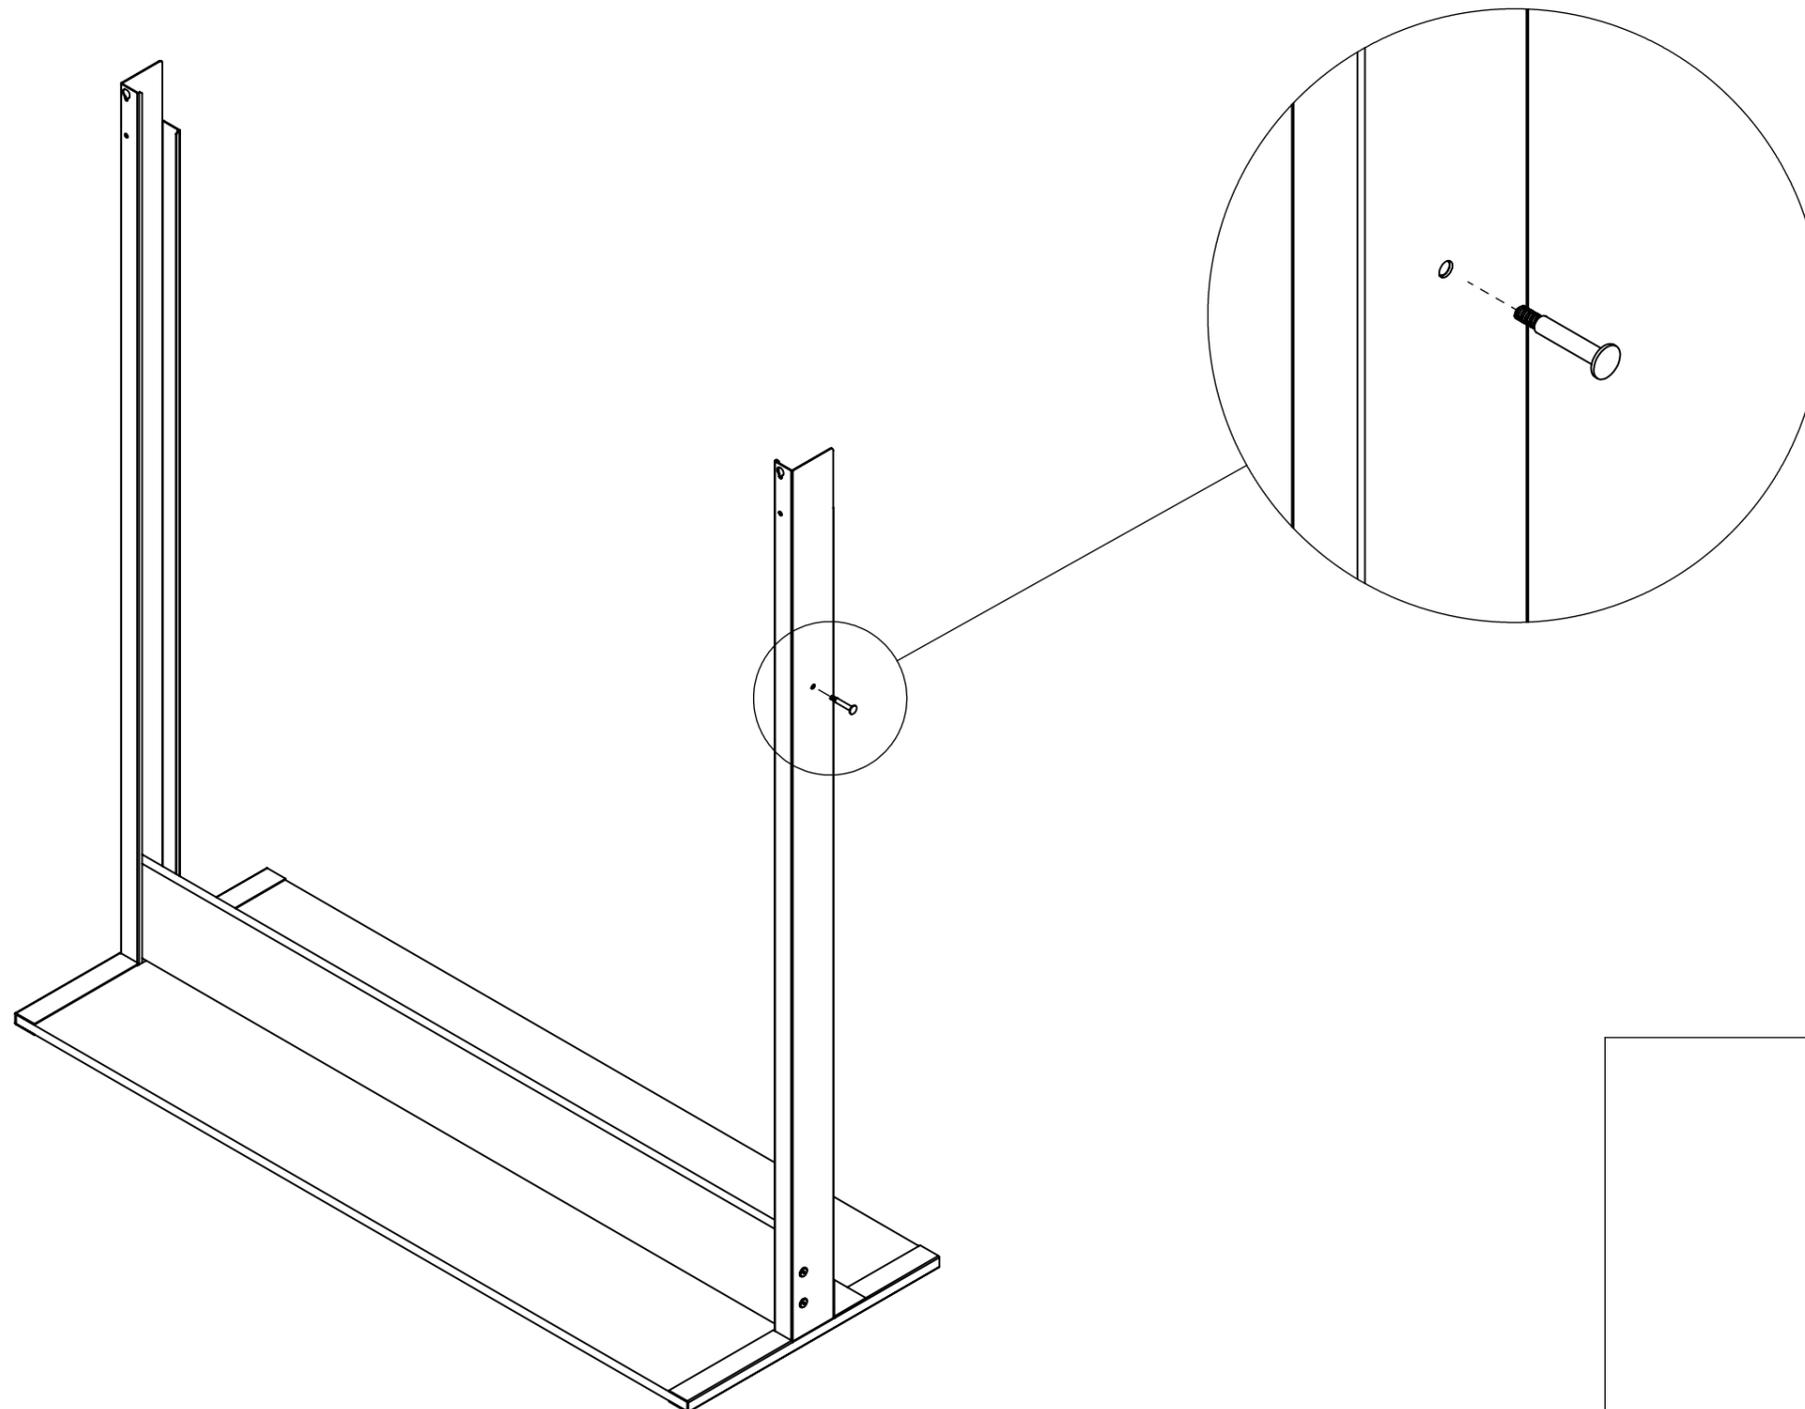


Step 6

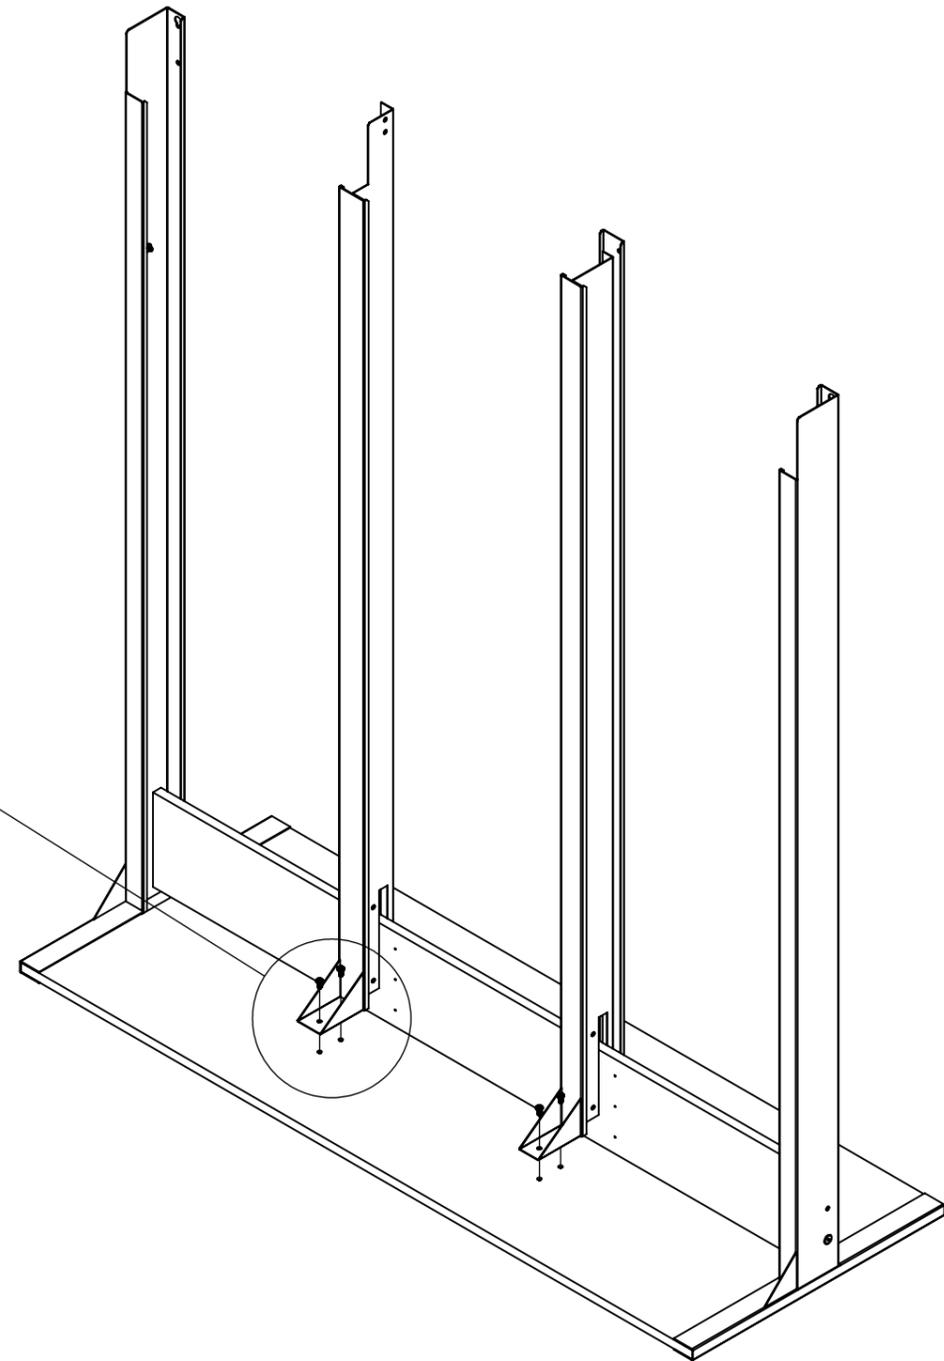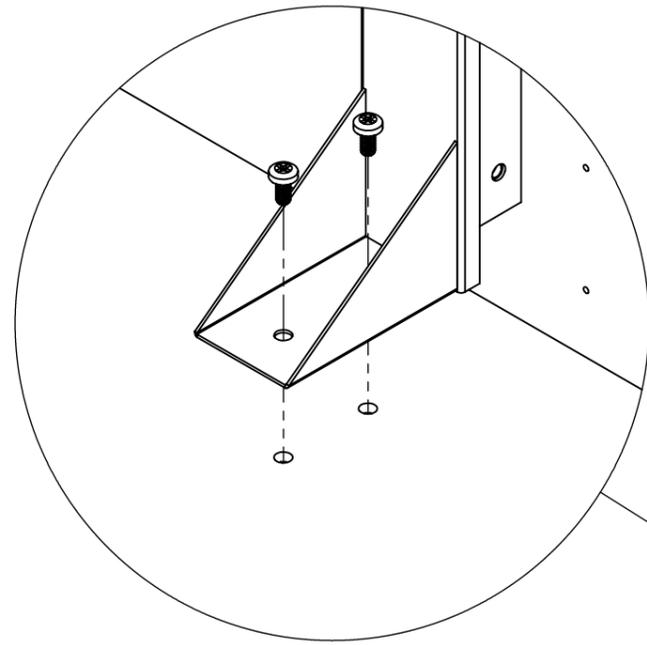




		
M85809-28 RIGHT-MID LEG 1x	M85809-28 LEFT-MID LEG 1x	1/4-20x12.7mm PH PAN 4x

Step 7

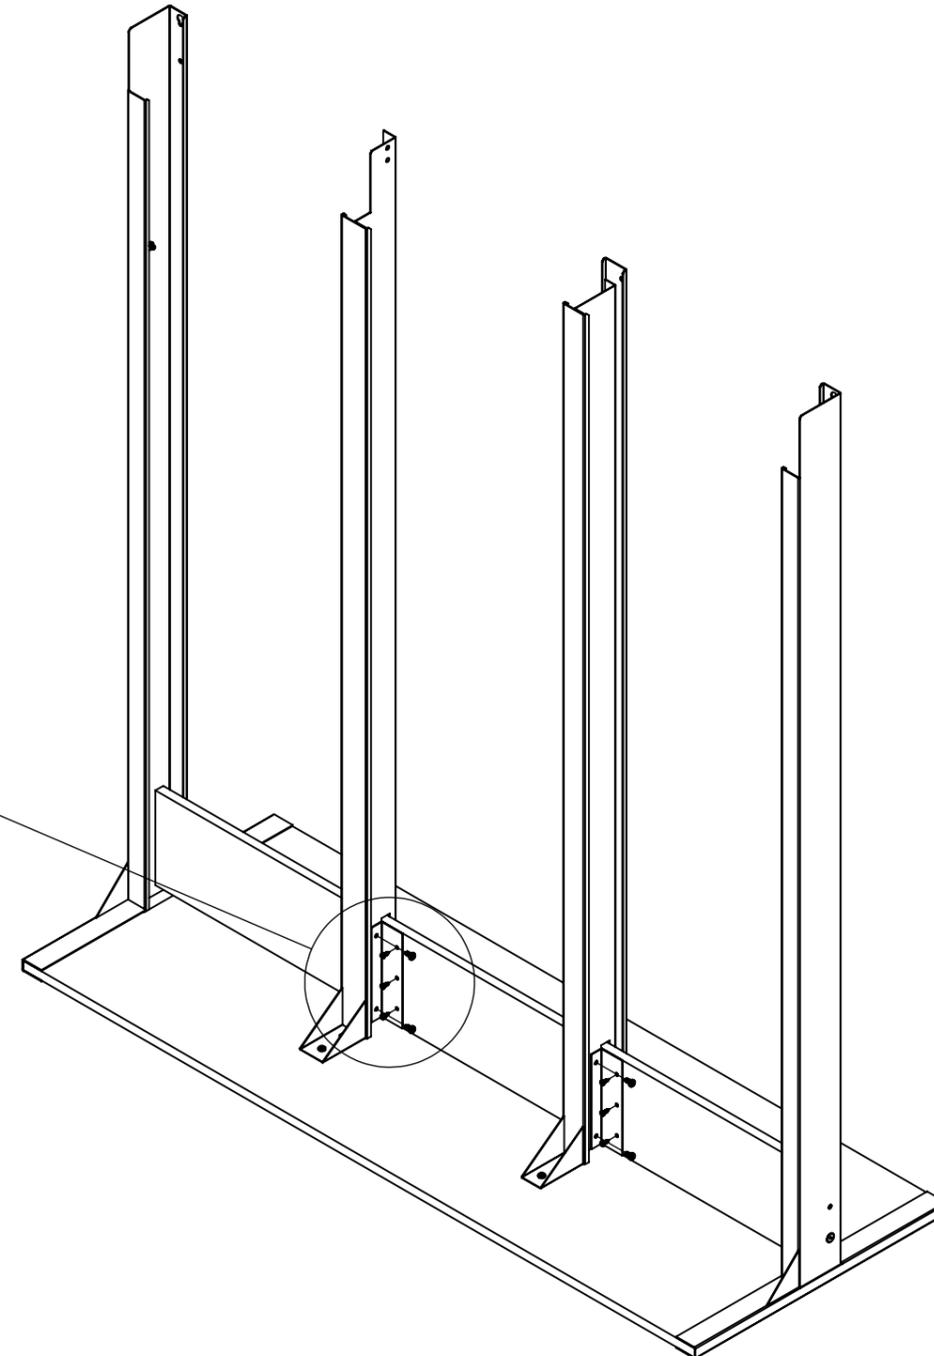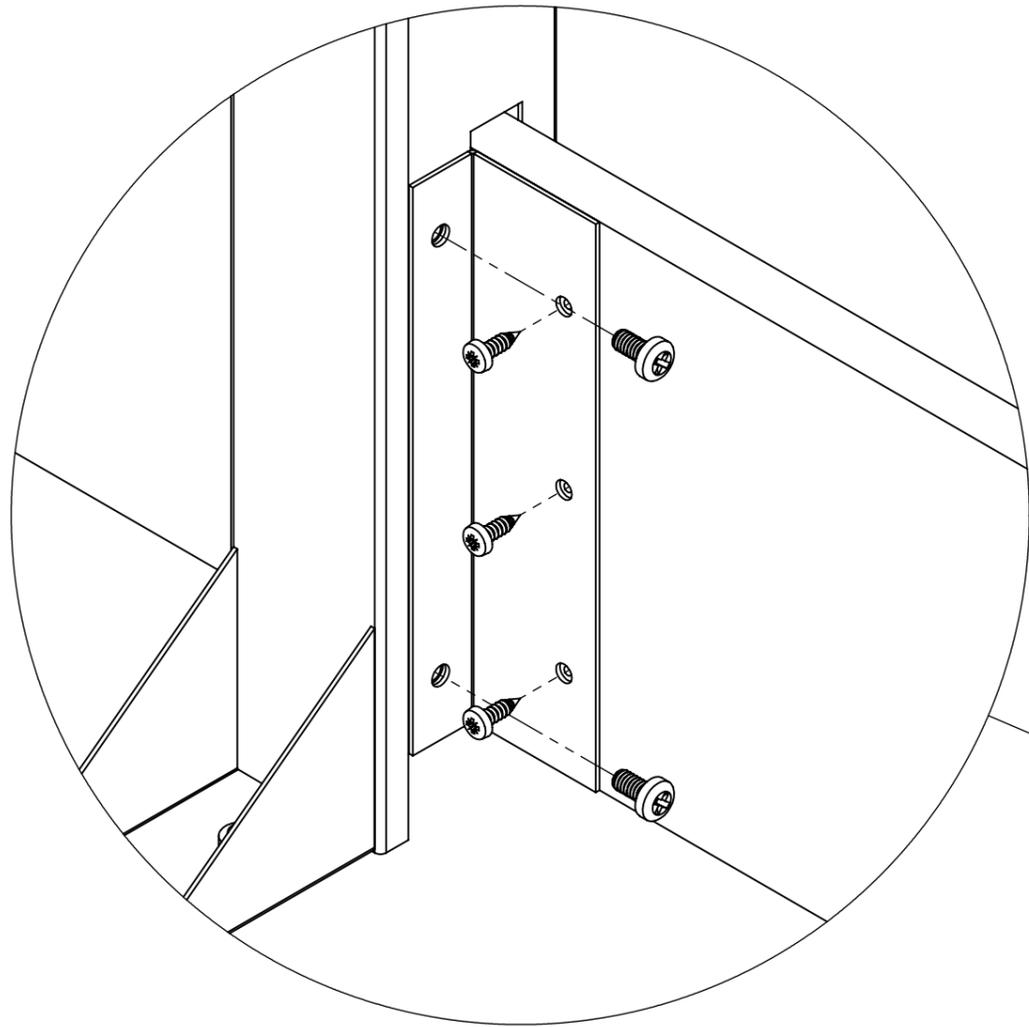

	
	1/4-20x12.7mm PH PAN 4x
M85809-32 BRACE BRACKET 2x	
	#10x16mm PH-PH 6x

Step 8

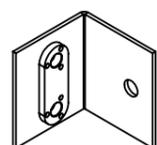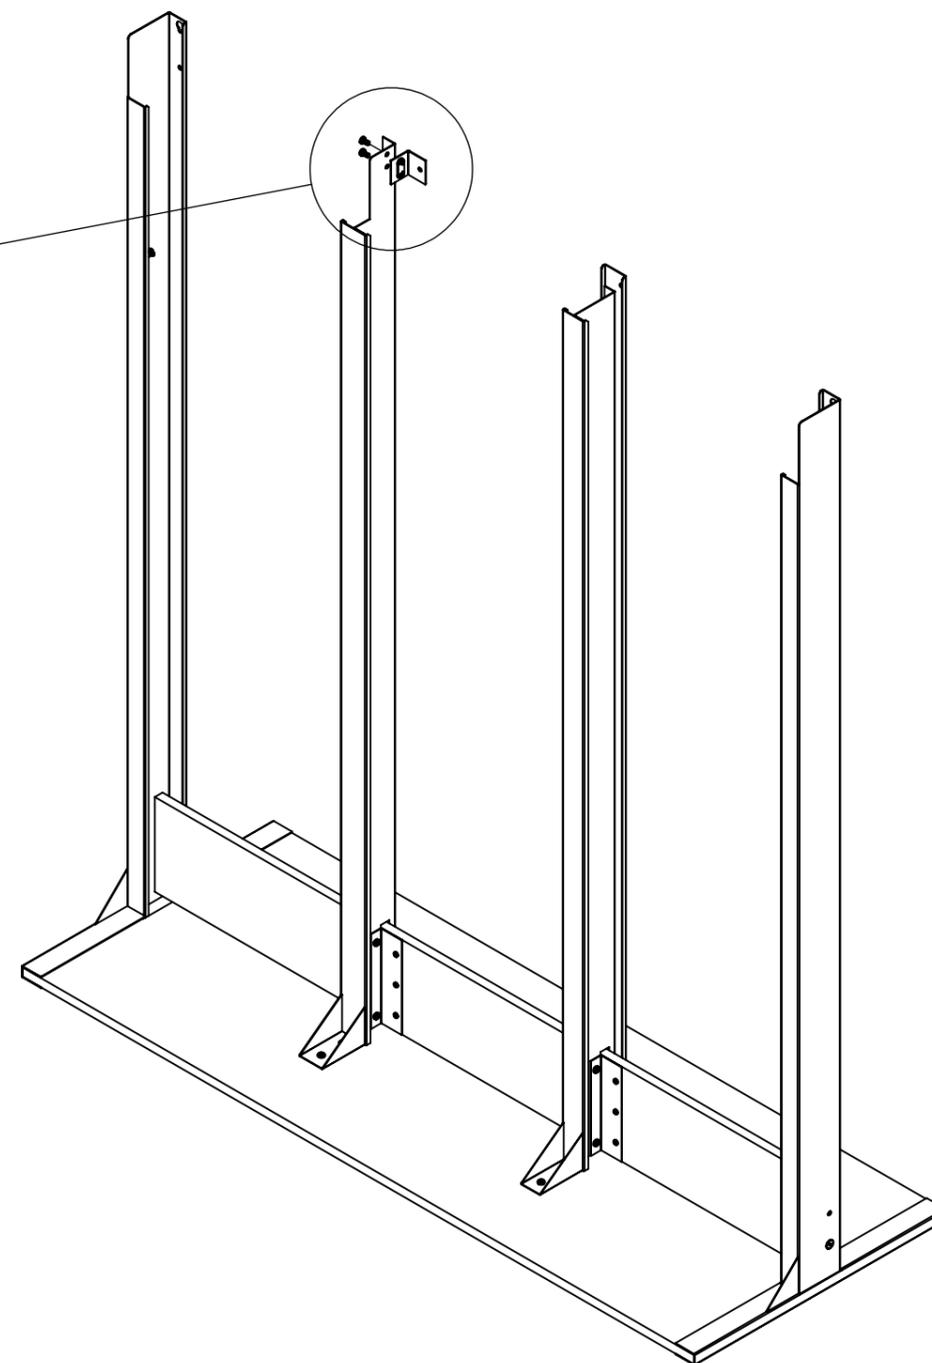
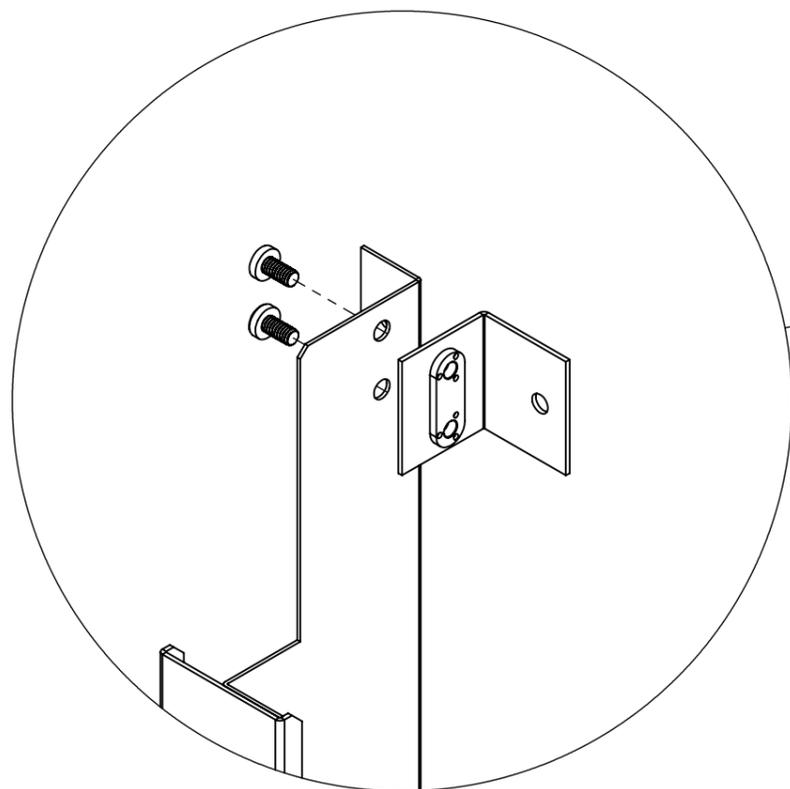


M85809-31
HEADER BRACKET
1x






1/4-20x12.7mm
PH PAN
2x

Step 9

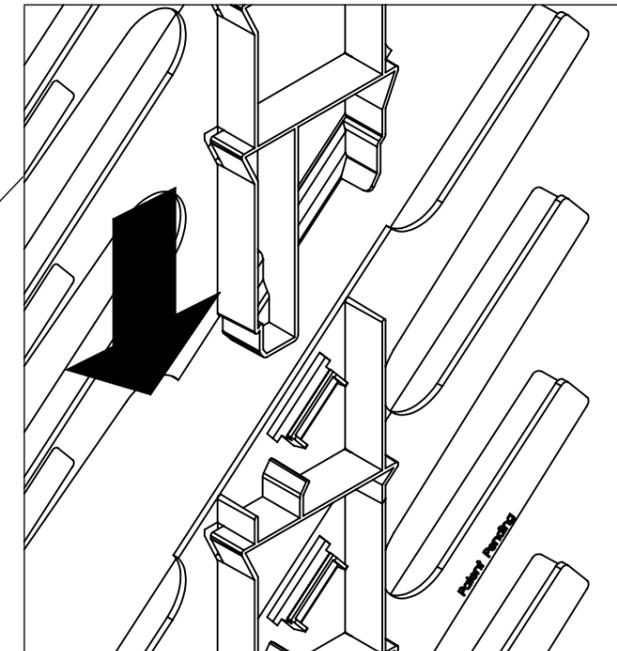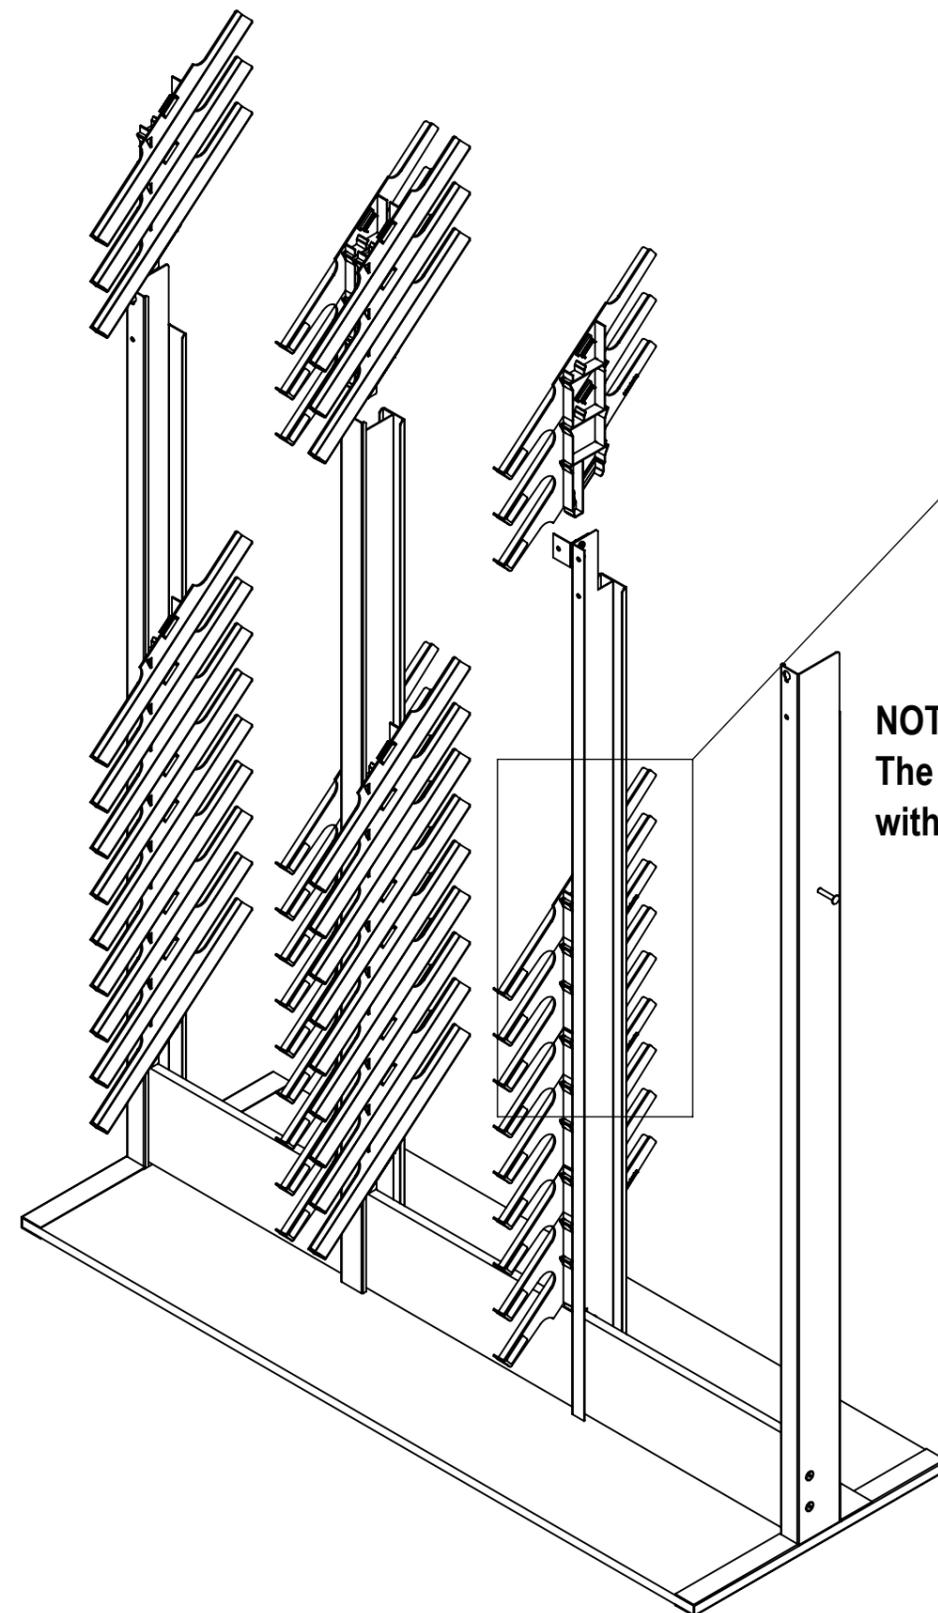




NOTE:
The image is showing
without the leg.

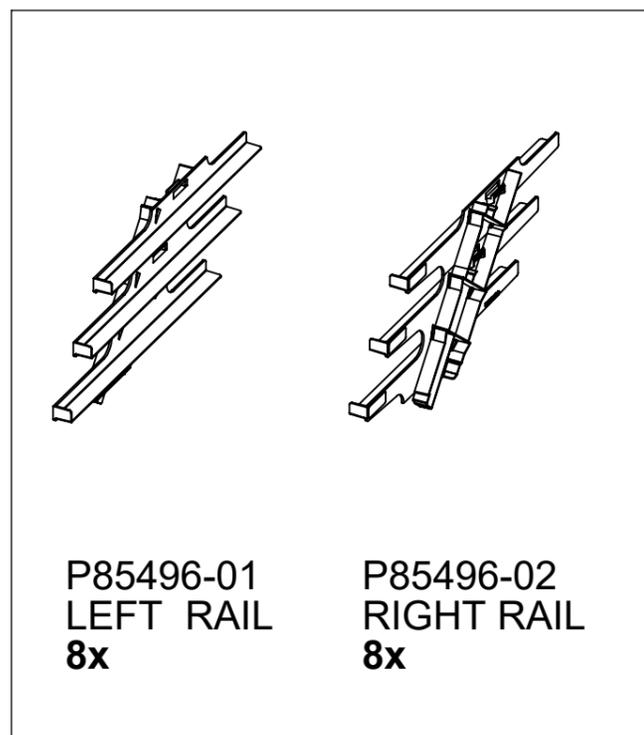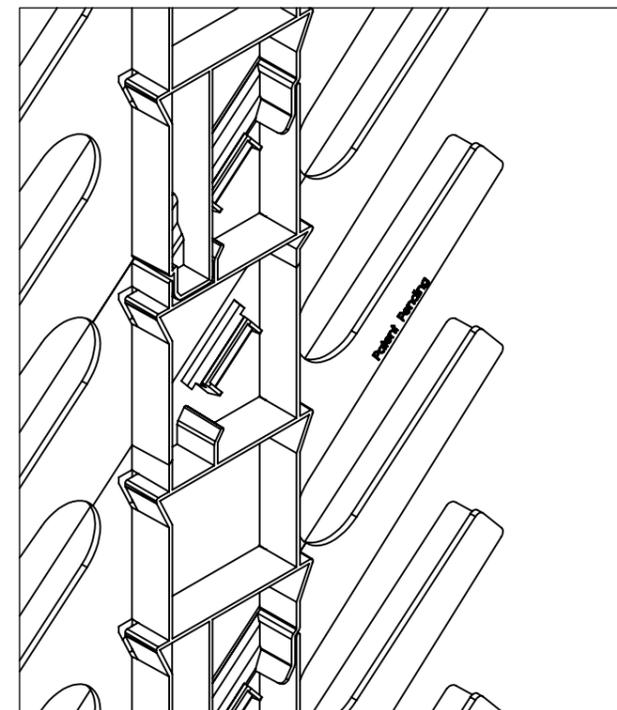

Step 10

NOTE:

Fully tighten screws after hang up HEADER

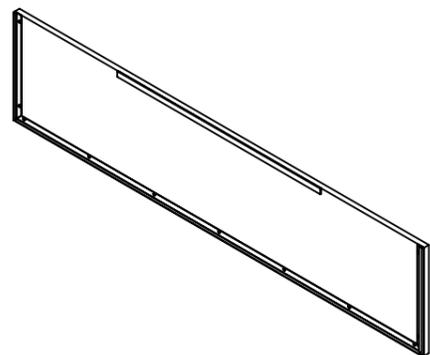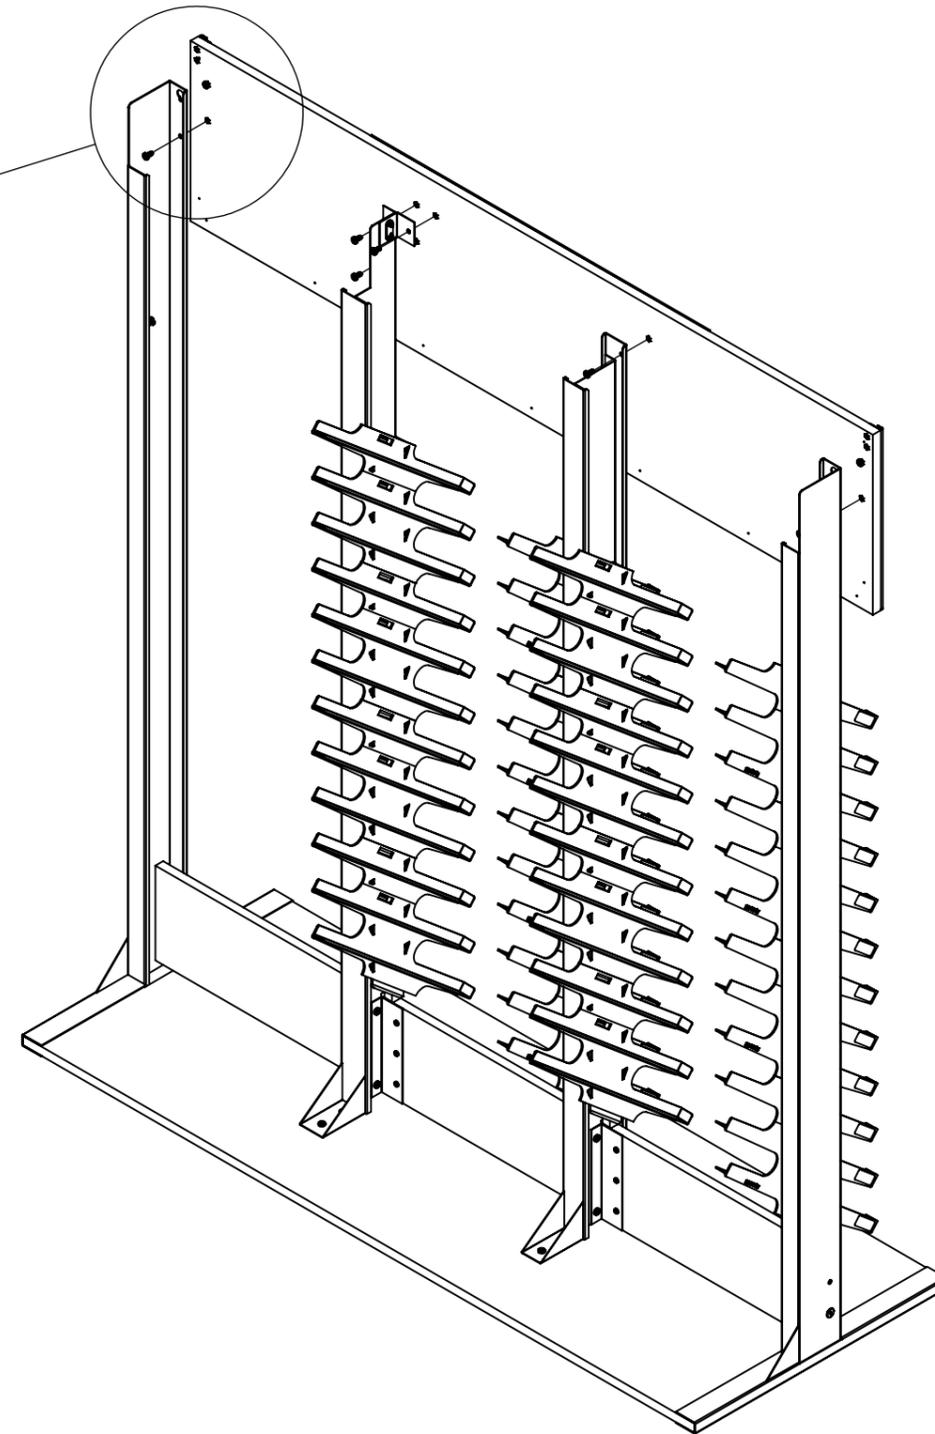
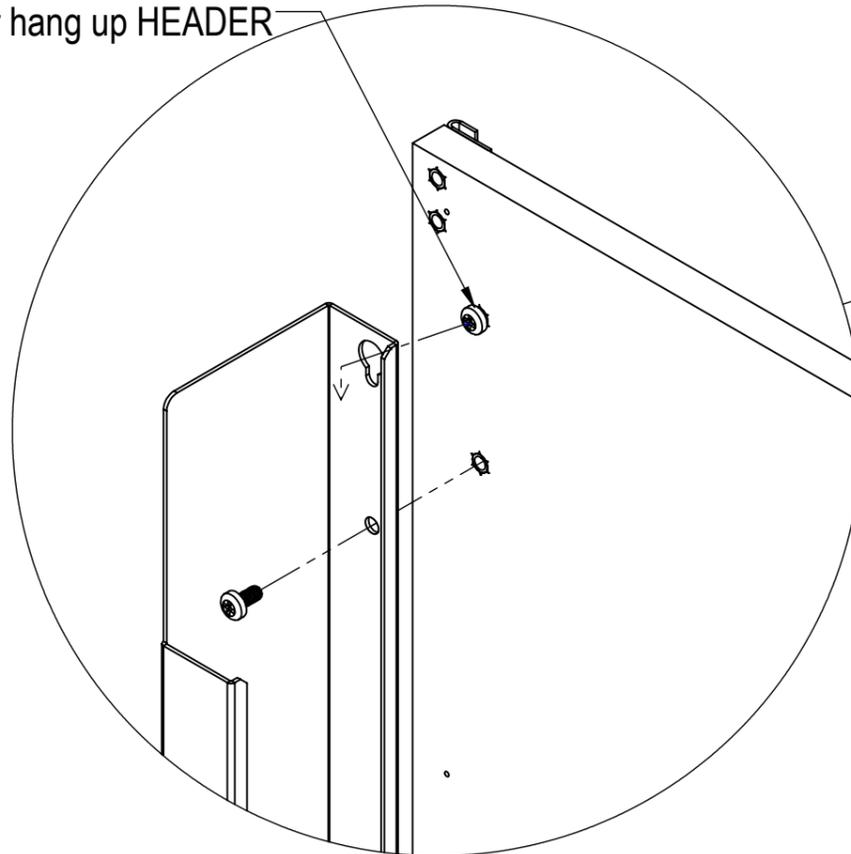


W86607-10
HEADER PRE-ASSEMBLY
1x




1/4-20x12.7mm
PH PAN
8x


Step 11

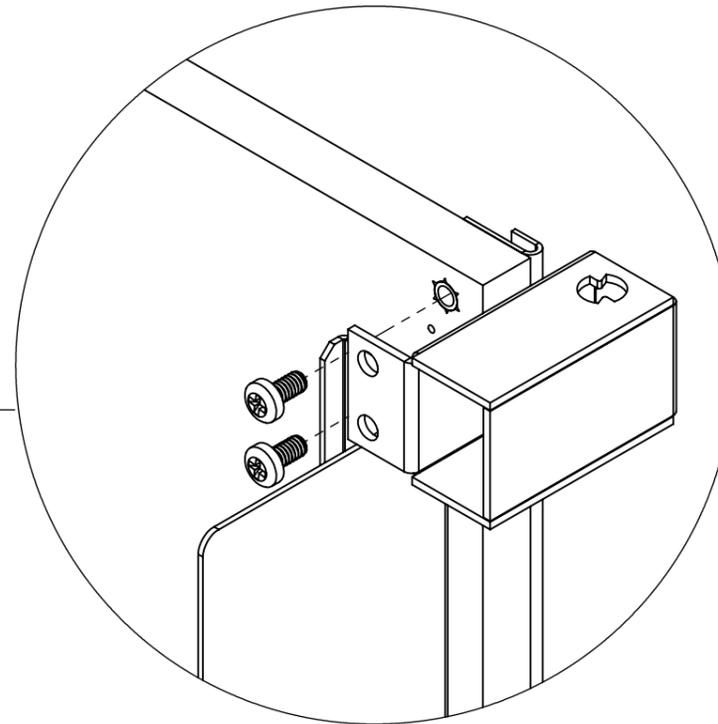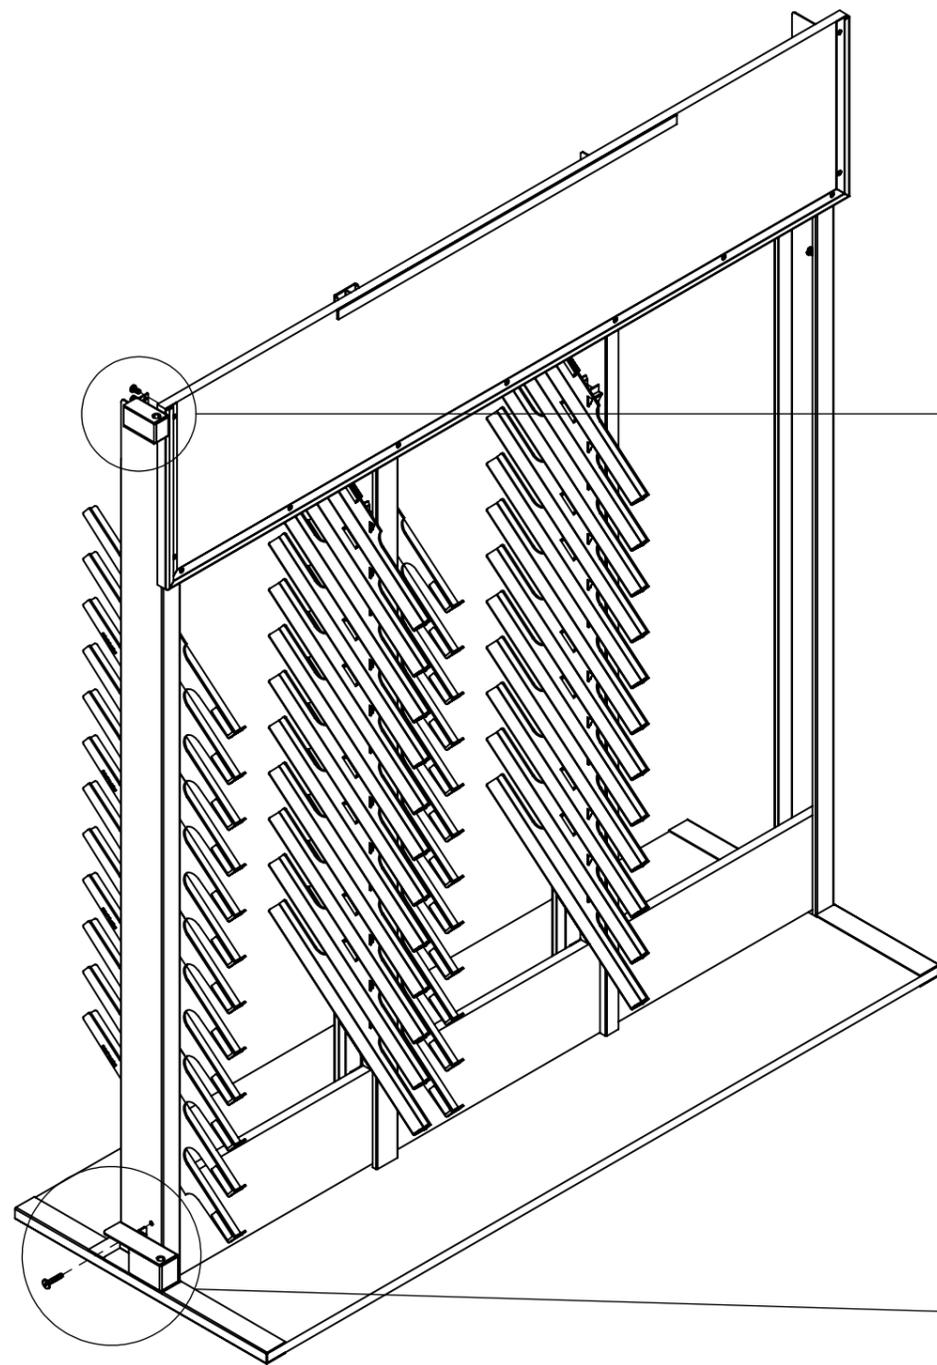


1/4-20x12.7mm
PH PAN
2x

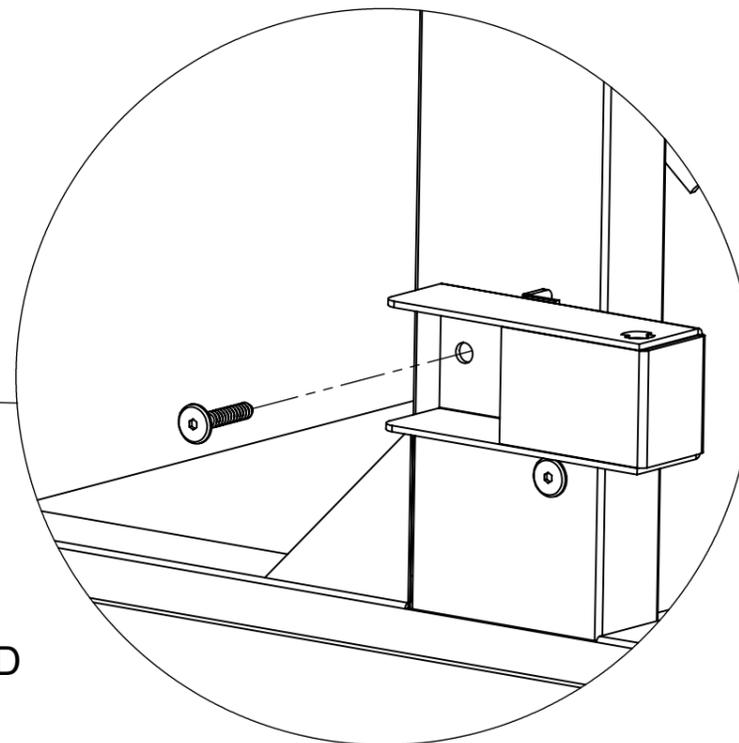



DECO WOOD
SCREW
1x

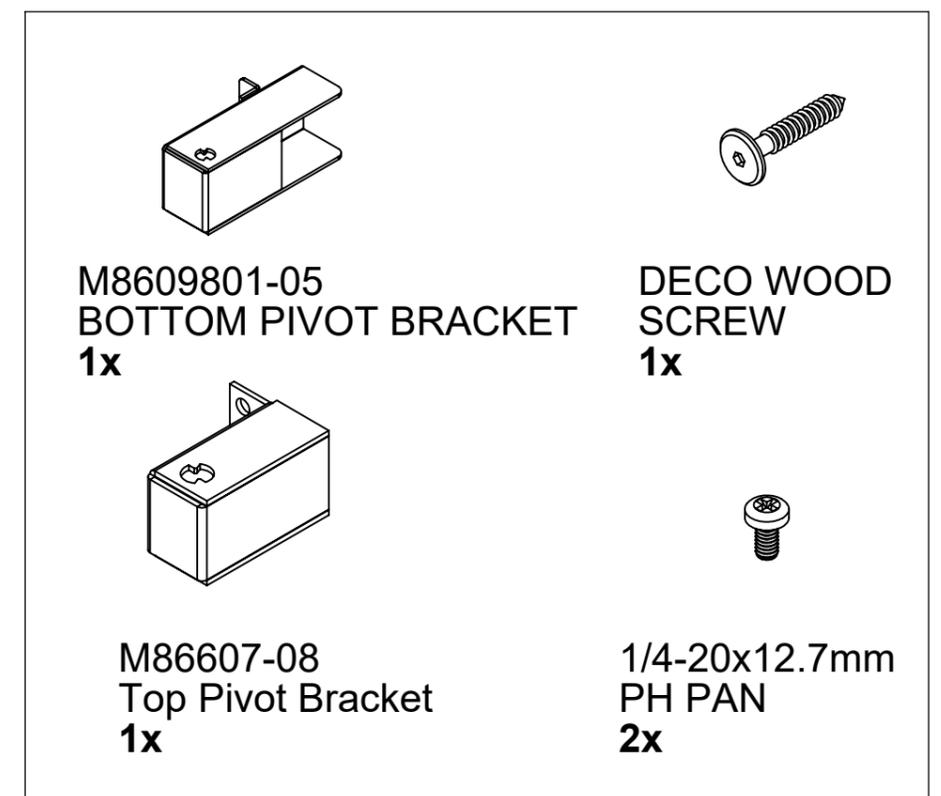



Step 12

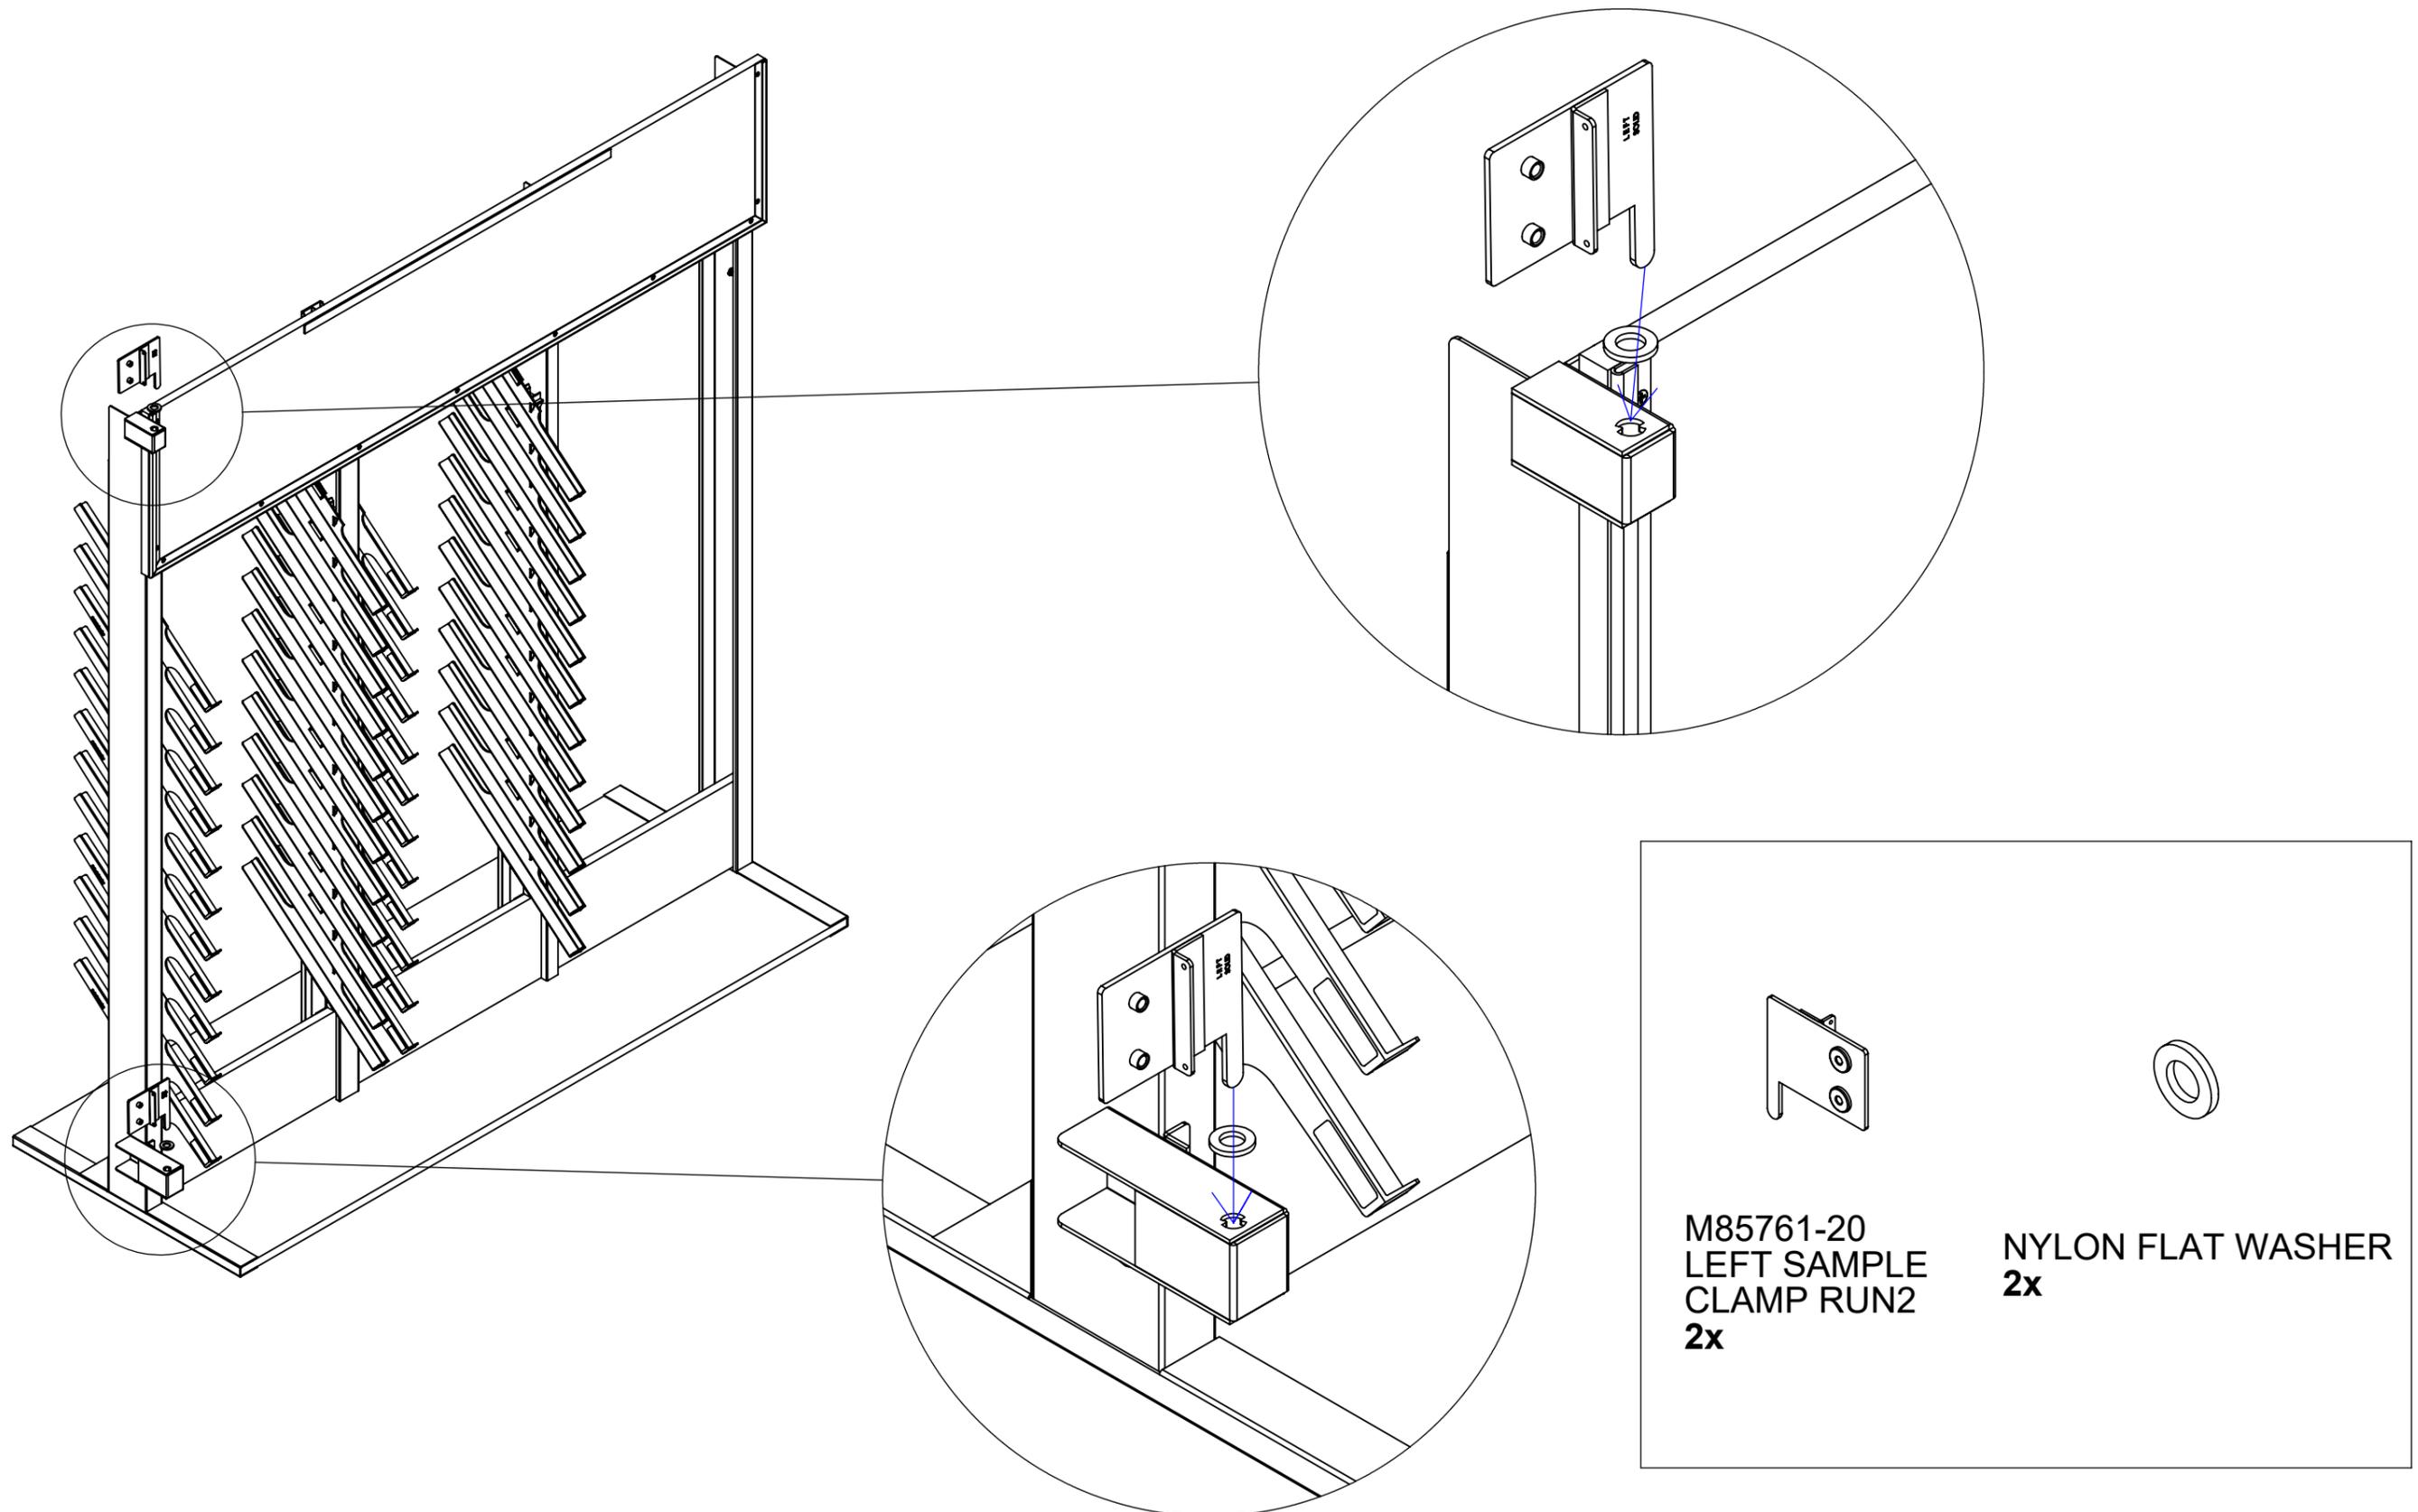



Step 13

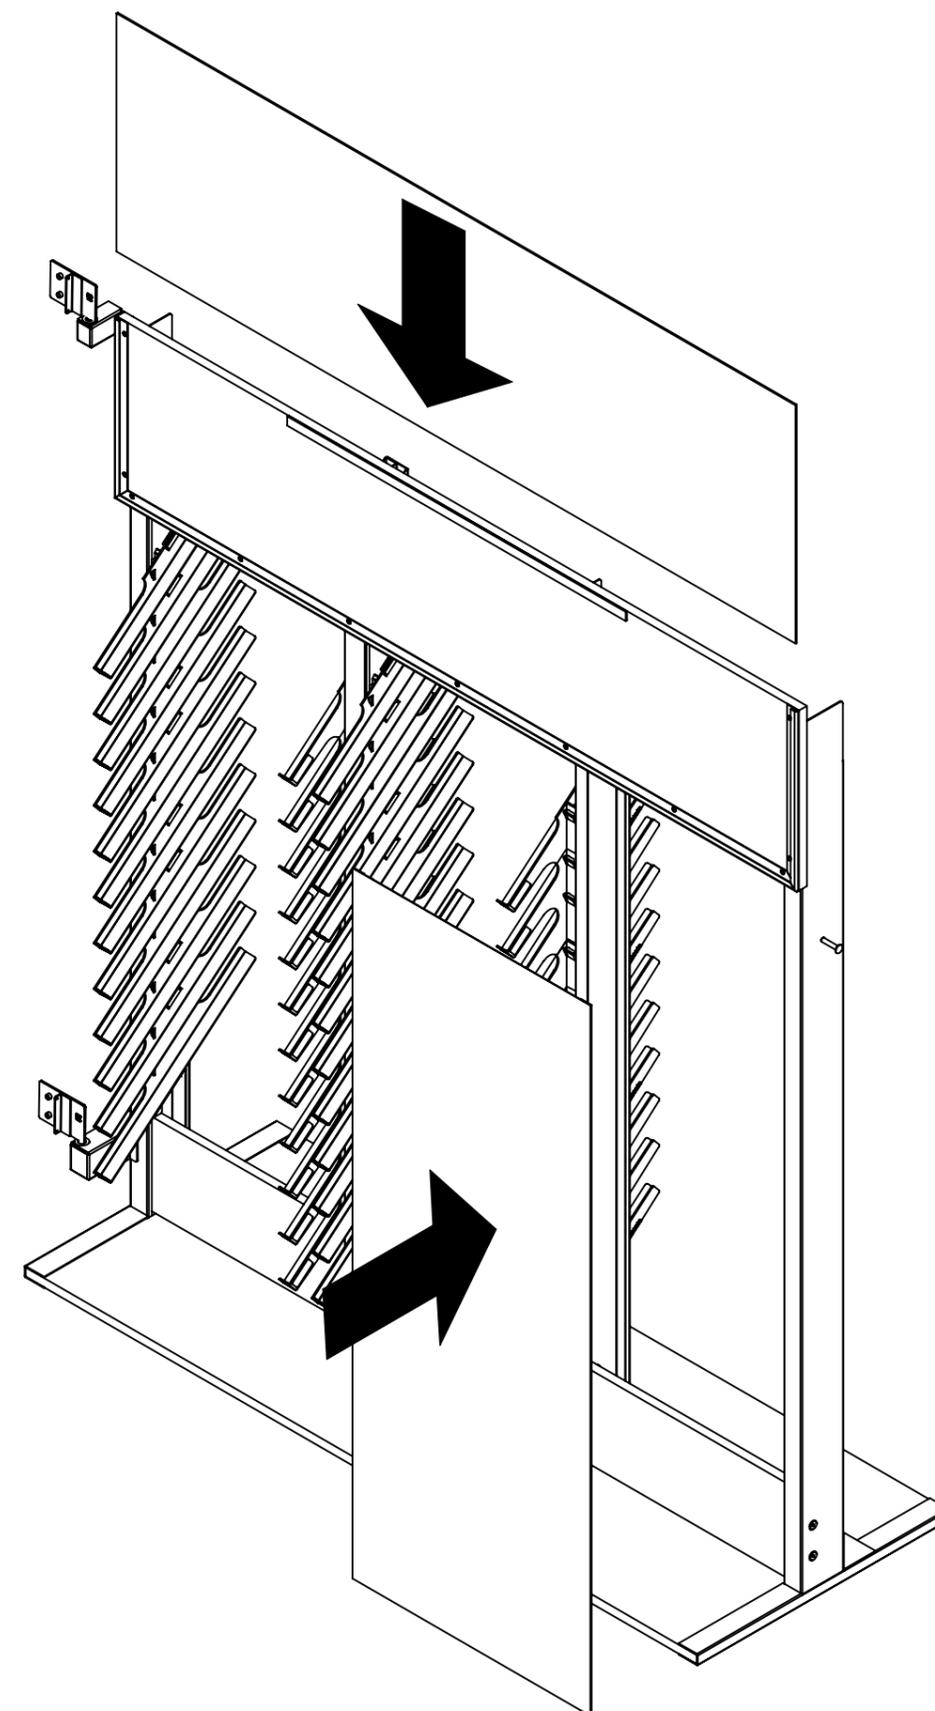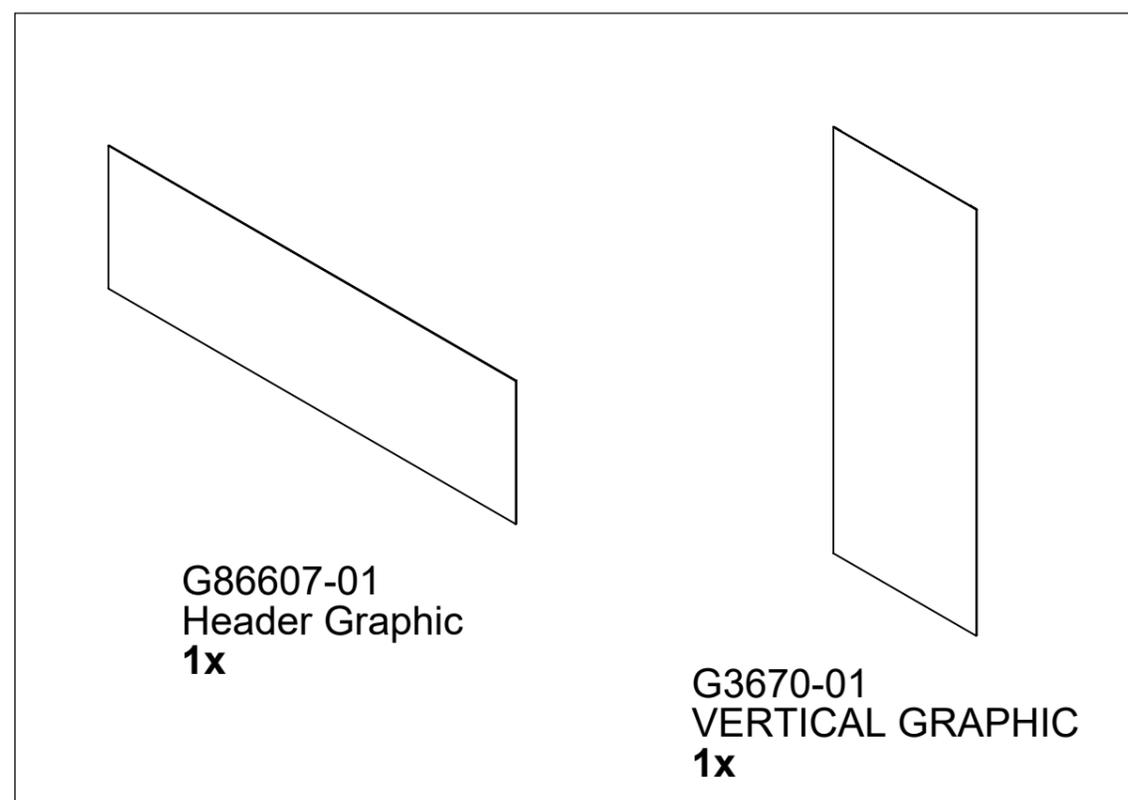




Step 14

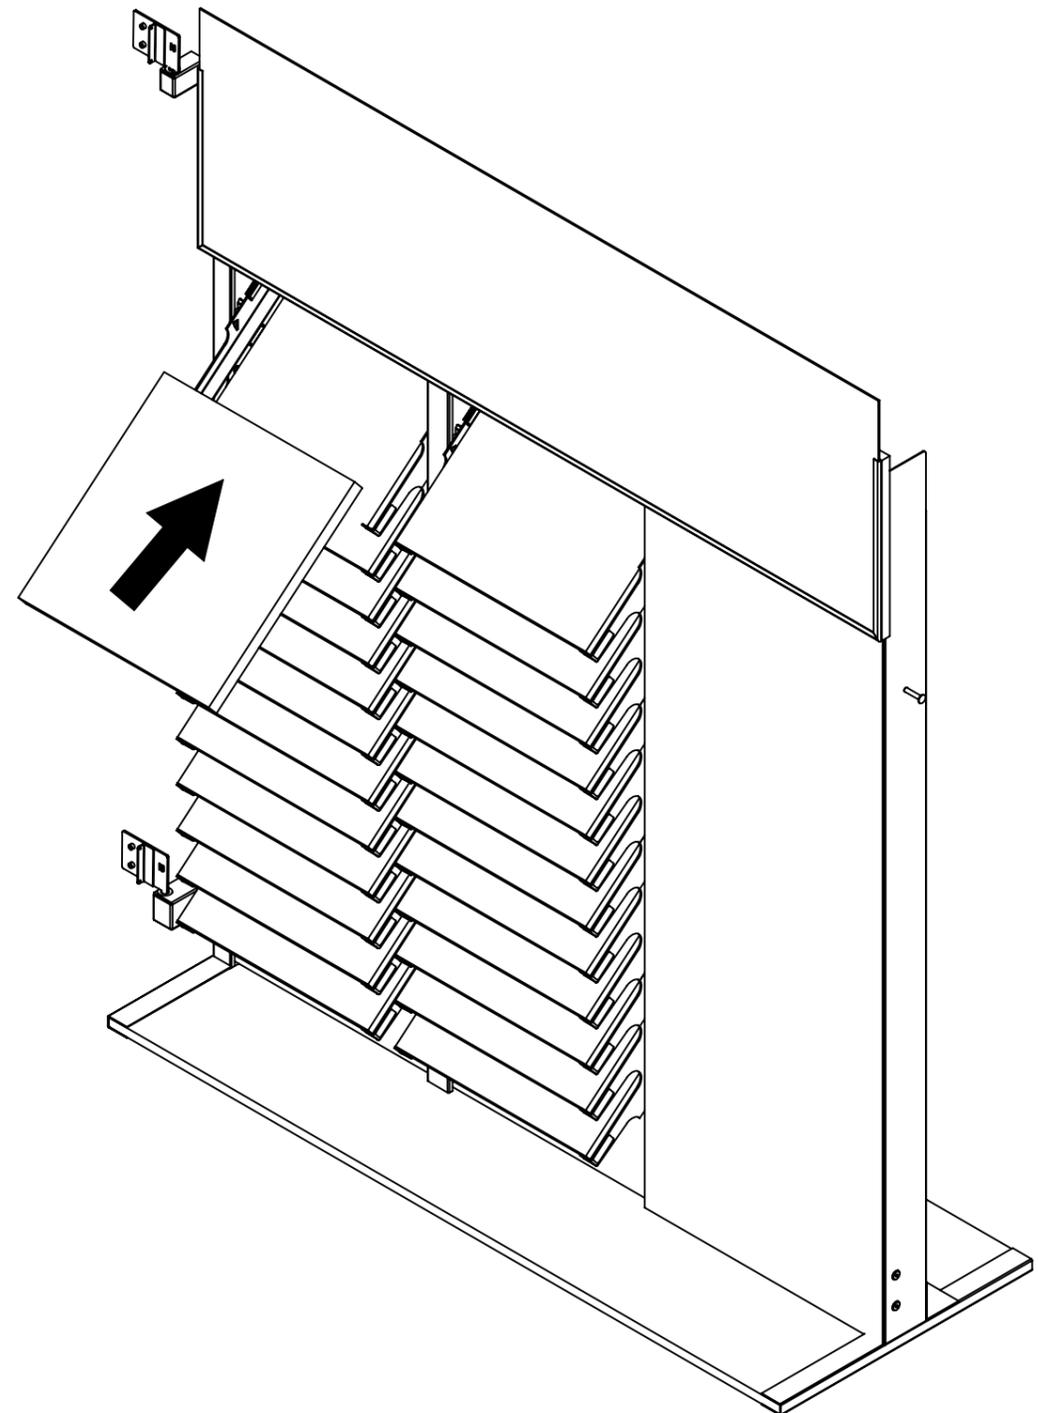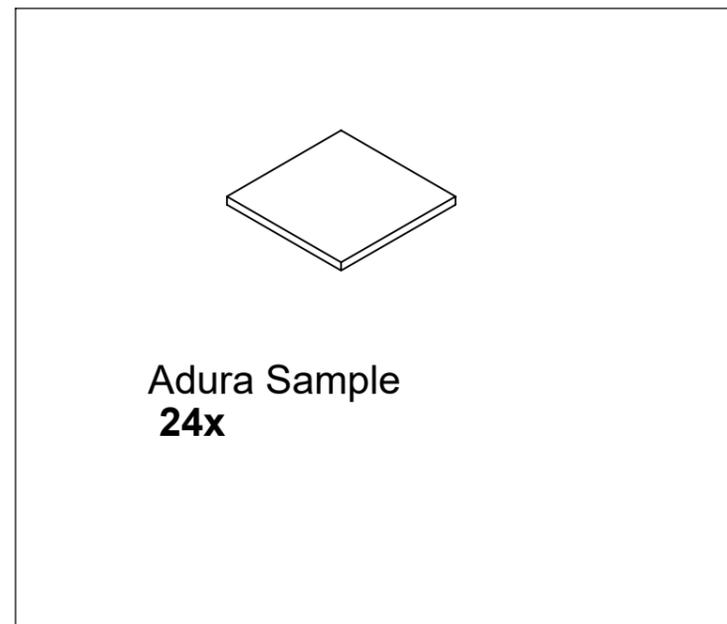

Step 15

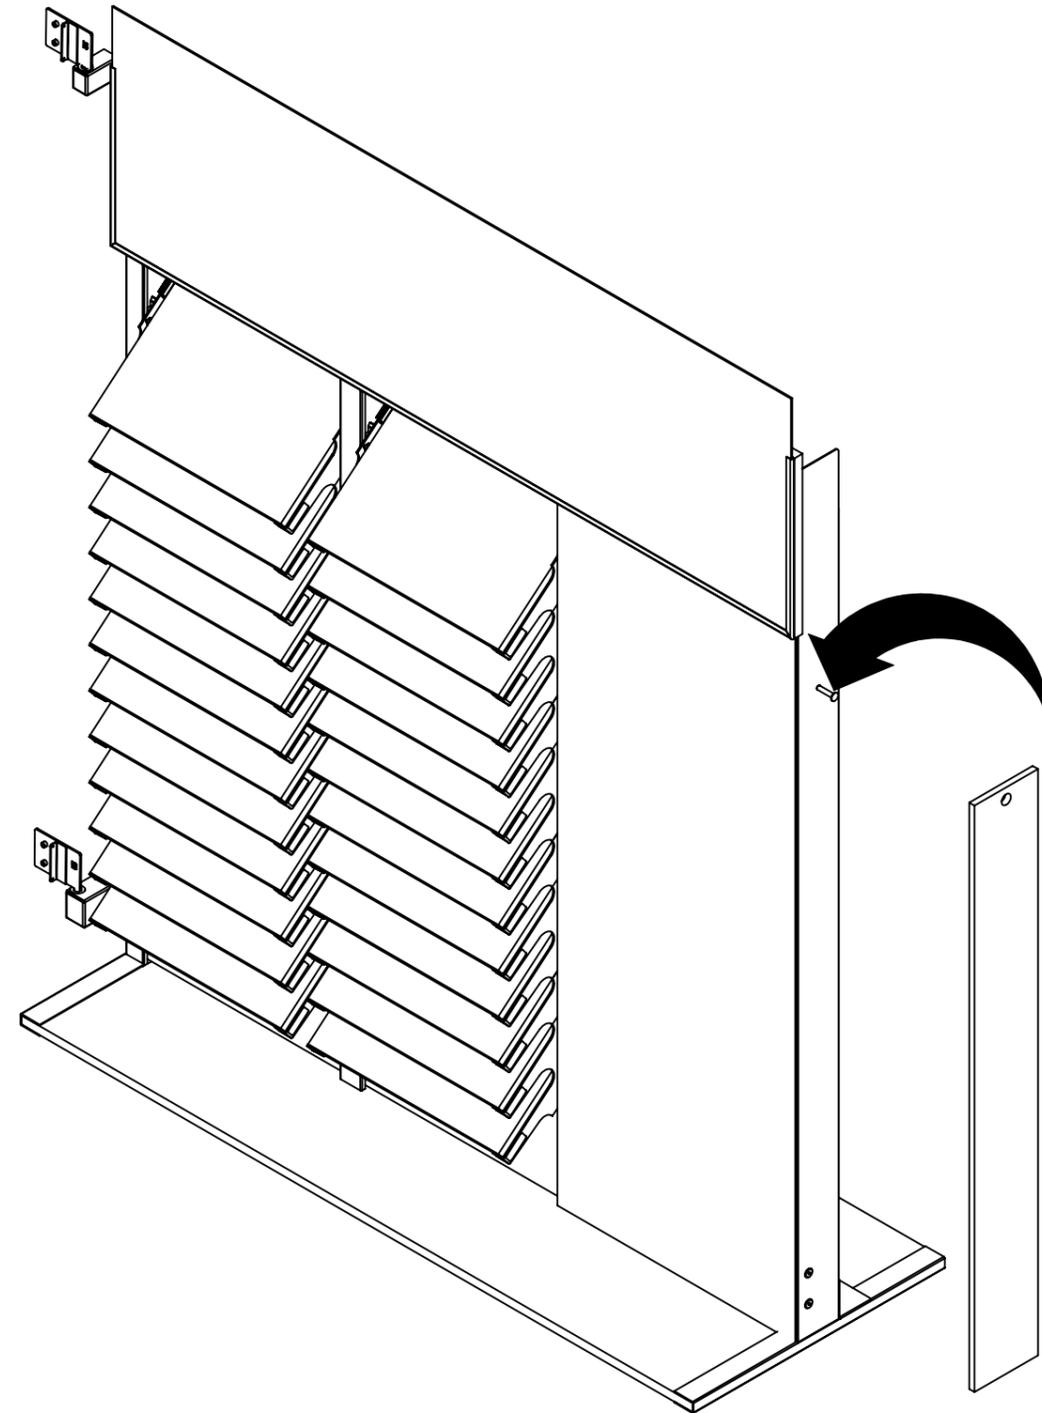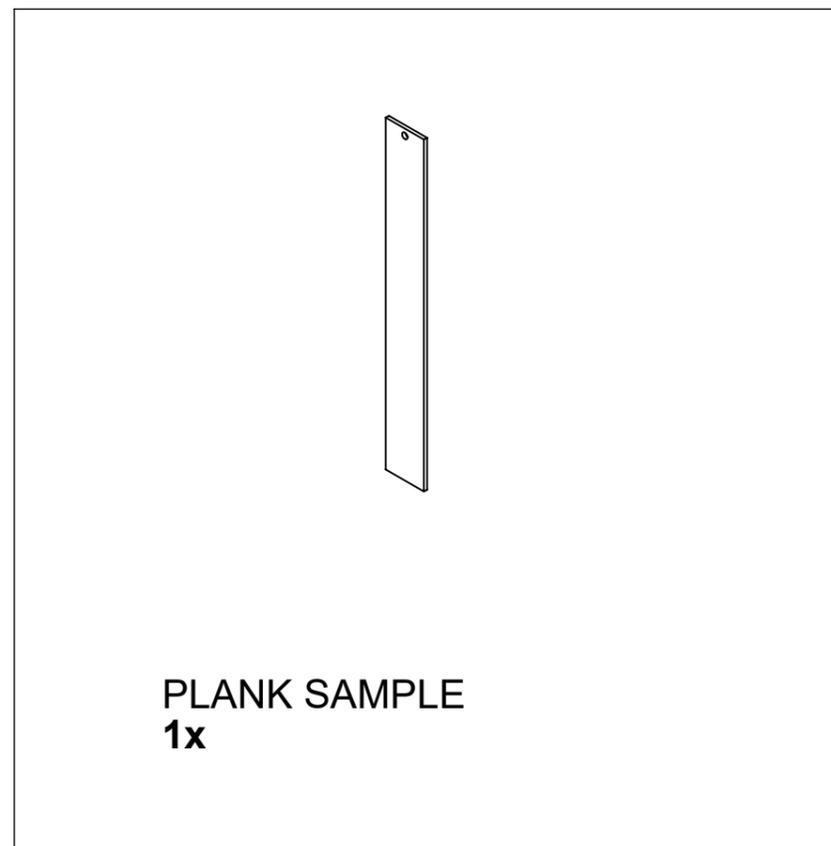

Step 16

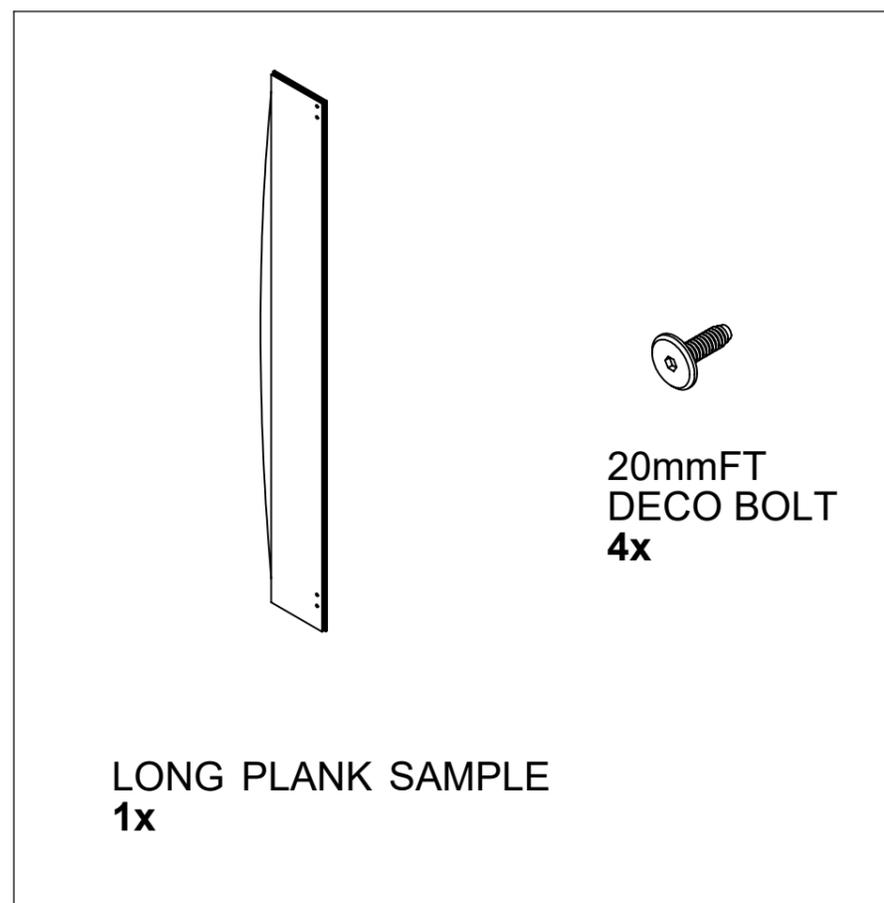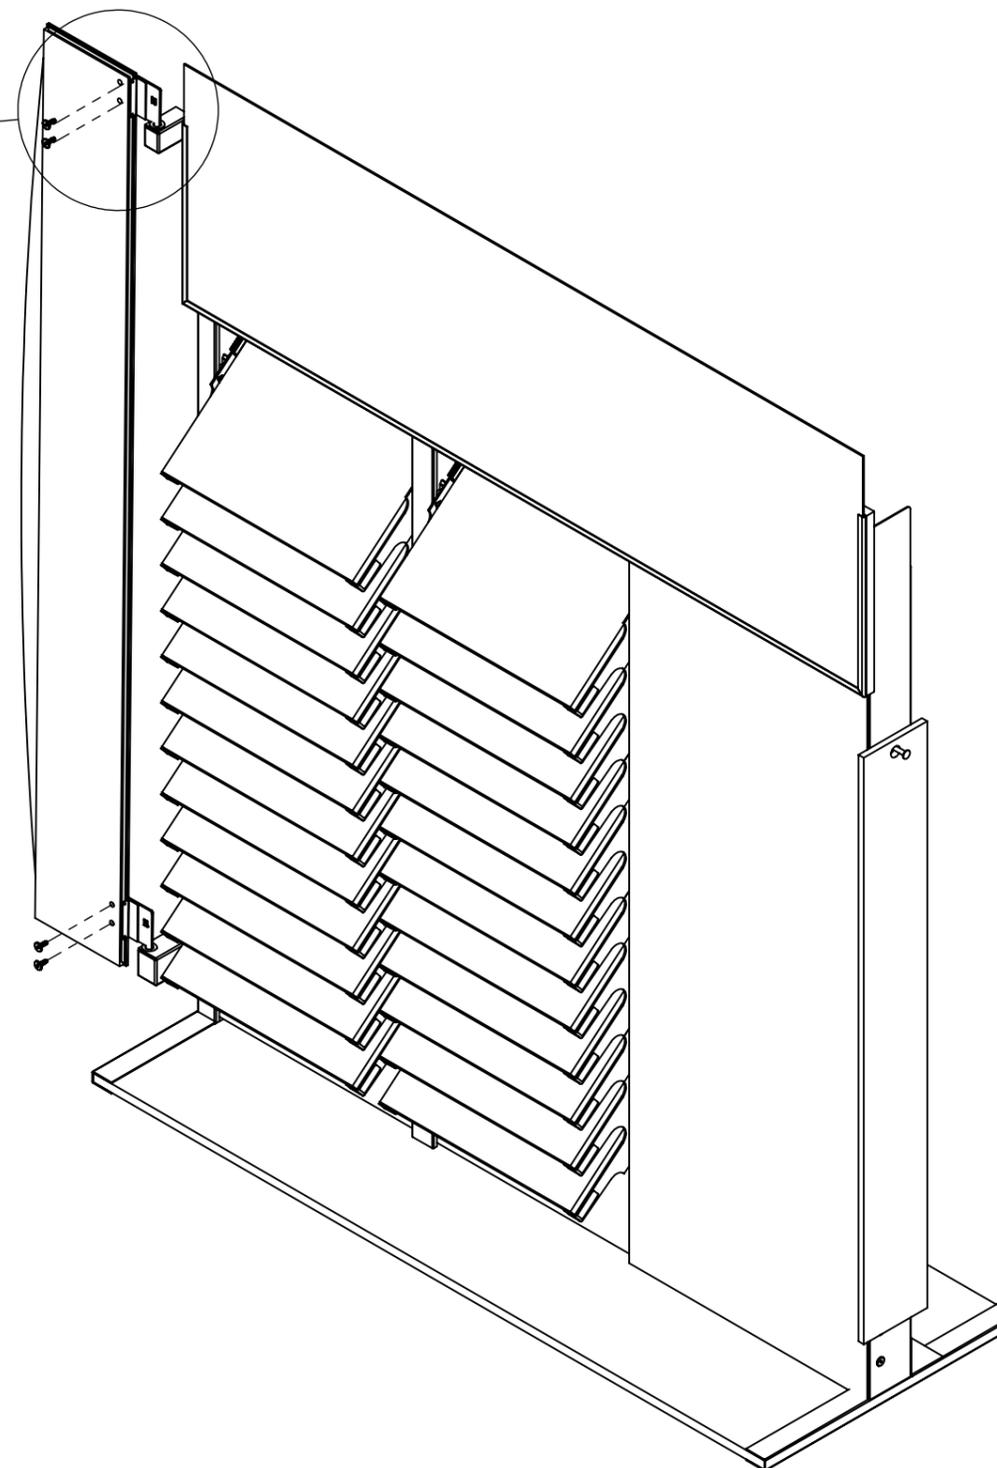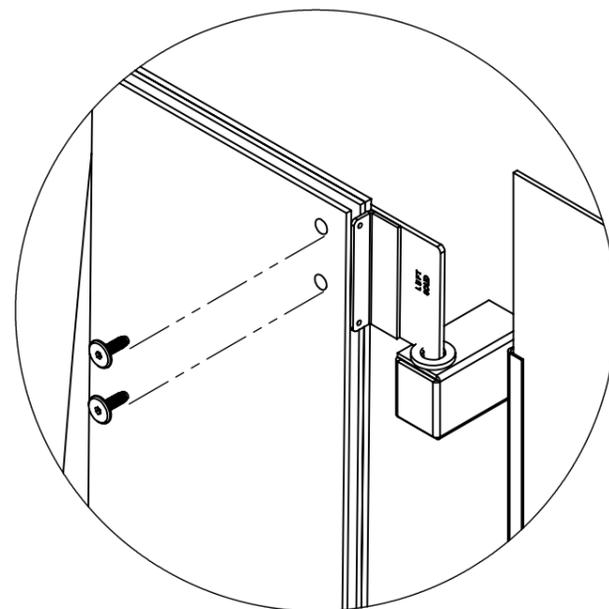

CONGRATULATIONS YOU HAVE SUCCESSFULLY ASSEMBLED APEX 3-TIER SMARTRAX DISPLAY

NEVER MOVE LOADED DISPLAY

MAKE SURE ALL FASTENERS ARE TIGHTENED