
THUMA


Let’s get together.

Classic Headboard Cushion


www.thuma.co

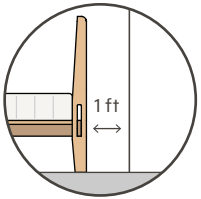


Step 1
Shift the Classic Bed + Headboard at least 1 foot away from the wall.

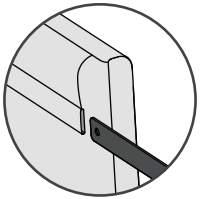


Step 2
Slide the metal plate through the fabric loop of the headboard cushion.

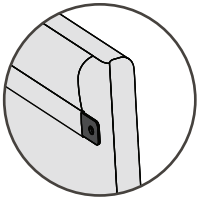


Step 3
Center the metal plate so that holes are visible on each side of the headboard cushion.

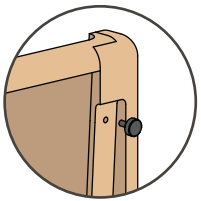

Step 4
Unscrew the two top short screws at the back of the headboard.

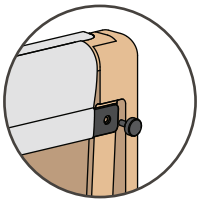

Step 5
Align the holes of the metal plate with those of the headboard.

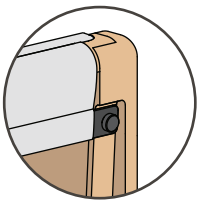

Step 6
Screw the two short screws back into the top holes of the headboard, tightening by hand. Enjoy.