THUMA

# Let’s get together.

Cove Frame

www.thuma.co


Take care during assembly. Do not dispose of any packaging or contents of the shipping carton until assembly is complete. Avoid balancing unsupported pieces and do not bend over near unsecured pieces. Keep children out of the way during assembly.

When wall mounting, stud mounting is strongly recommended. Check with a professional to ensure your wall can tolerate a fixture weighing 8 lb (3.7 kg) for the Medium Cove Frame or 5 lb (2.3 kg) for the Small Cove Frame. Professional installation required when mounting on a tile or stone surface.

## Pieces

Number of pieces included is determined by the product configuration purchased.

**Cove Frame**

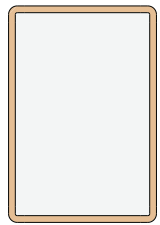

**Z-bar**



**Screws**




**Wall anchors**



## Step 1

**Draw a Level Line**

Use a pencil and leveler to draw a straight, horizontal line  on your wall where the Z-bar will be mounted. Use a pencil to lightly mark through the bracket holes in the Z-bar indicating where to drill.

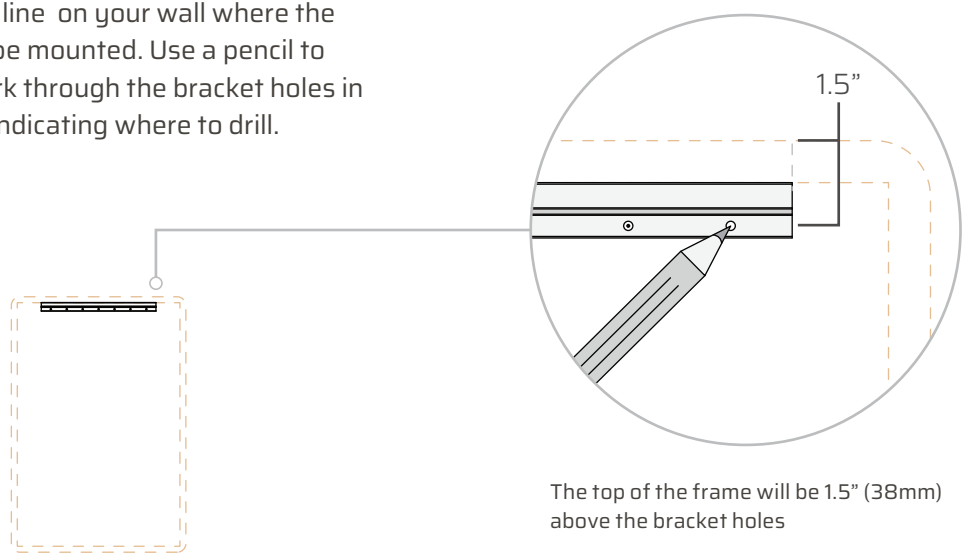




The top of the frame will be 1.5” (38mm) above the bracket holes

## Step 2

**Secure the Z-Bar**

Double-check that the Z-bar is centered where you want the frame to hang. Use all of the screws provided to attach the Z-bar to the wall. Evenly space screws along the Z-bar and use wall anchors (if needed). Make sure all screws are firmly tightened for secure mounting.

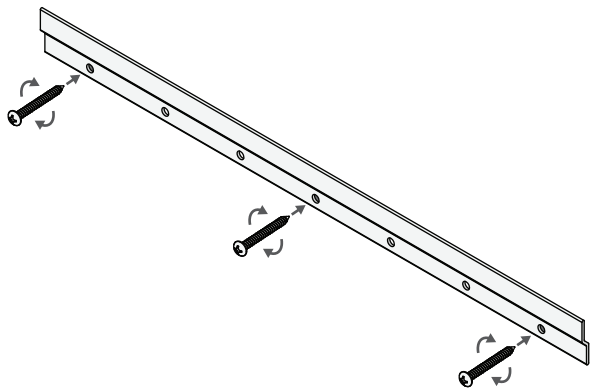


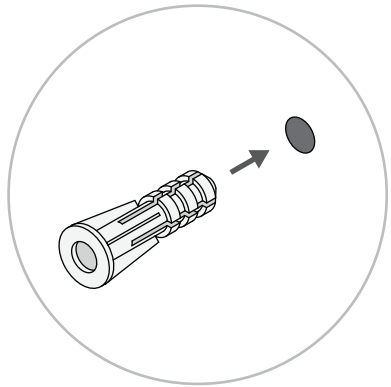


Use wall anchors if needed

## Step 3

**Align the Frame**
Hold the frame with the Z-bar on its back slightly above the Z-bar mounted on the wall.

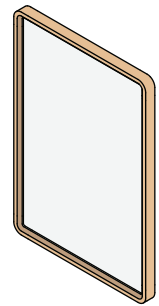

**Engage the Z-Bars**
Lower the frame gently, ensuring the two Z-bars interlock securely. Double-check that the frame is straight with a level and firmly in place.

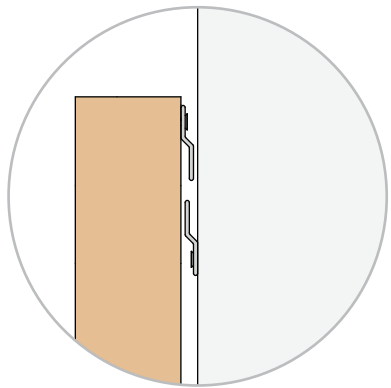

# Enjoy.

Light a candle, play some jams, pour a refreshment.
Share moments of oasis @thuma.co.

For help and more to love, scan the QR code below.