

THUMA

Let's get together.

Storage Bed Slats

www.thuma.co

Assemble with two people for a safe, efficient setup.

Take care during assembly. Do not dispose of any packaging or contents of the shipping carton until assembly is complete. Avoid balancing unsupported pieces and do not bend over near unsecured pieces. Keep children out of the way during assembly.


 WARNING

Pinch hazard. Keep hands and fingers clear of hinge and lift mechanism. Failure to do so may result in serious injury.


Before closing, ensure that people, pets, and objects are clear of the storage compartment and closing path. Periodically inspect all fasteners and hardware. Tighten any loose fasteners before use.

Pieces


Slats x1

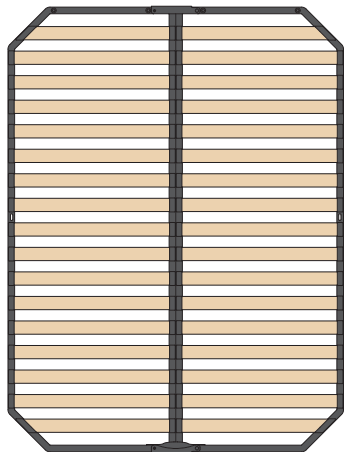

Left Arm x1

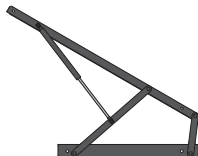

Right Arm x1

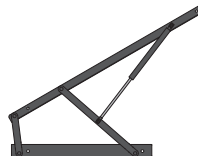

Mattress Stopper x2



Short Screw x4



Long Screw x6



Support Block x2


Located in the bed frame box




Step 1

Clear a large assembly area before opening the product. Use a soft surface as an underlay during assembly to protect from damage. Hold the frame to lift and move slats. Do not lift by the wood slats.

- A. Rotate the “U” bracket perpendicular to the **slats**.



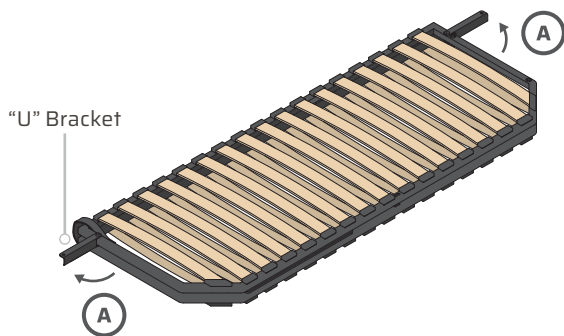


- B. Unfold one half of the slats. Remove **left arm**, **right arm**, and **mattress stoppers**.

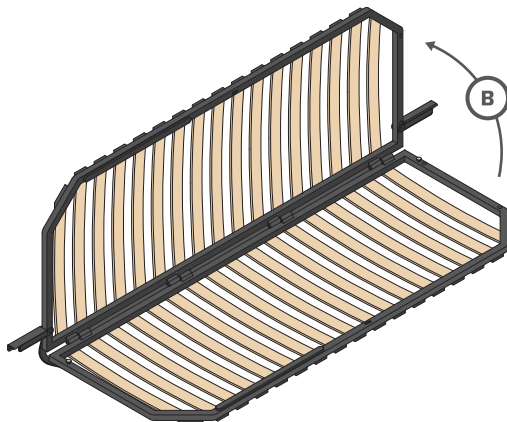

Step 2


Pull up the locking pin and rotate the “U” bracket parallel to slats.
Release locking pin to lock into place.

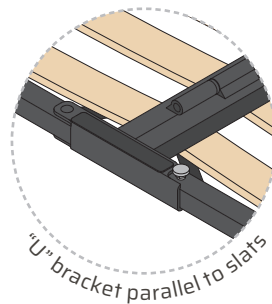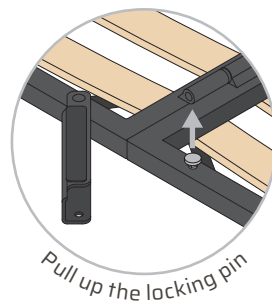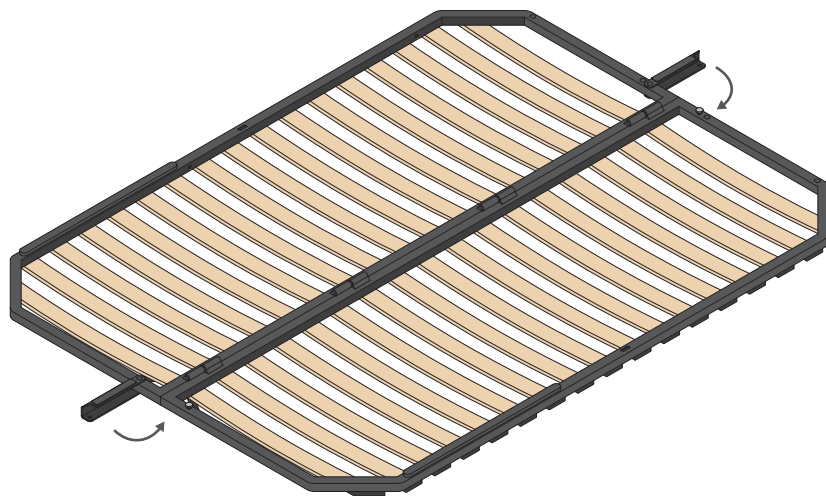

Step 3


- A. Carefully flip the slats over.
- B. Align the mattress stoppers with the mattress stopper receivers on the slats.
- C. Press firmly to attach.

Do not use mattress stoppers as lifting handles.

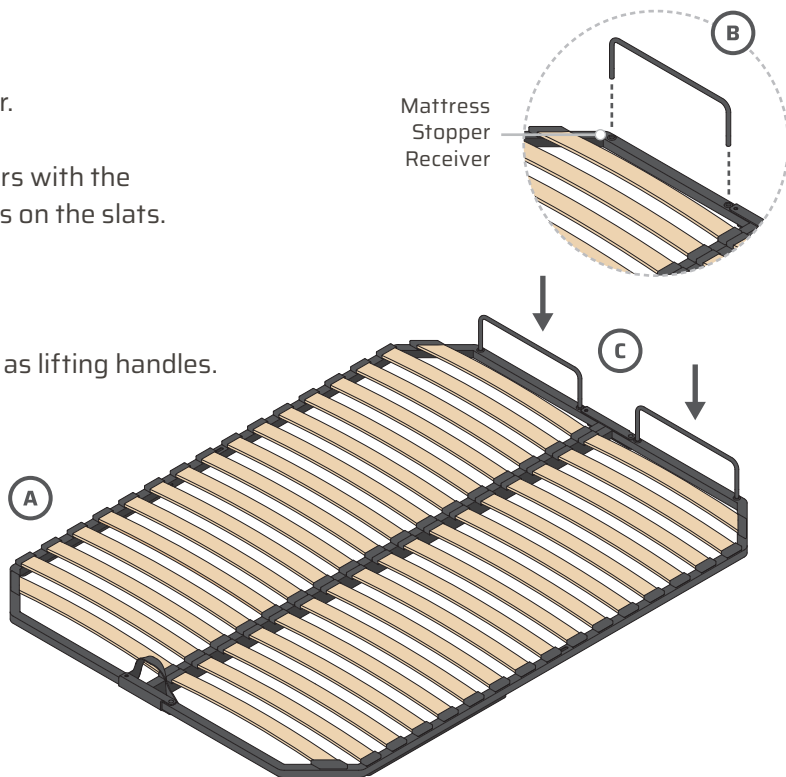


Step 4

A. Align the **support blocks** with the horseshoes on the short rails. Press firmly to attach.

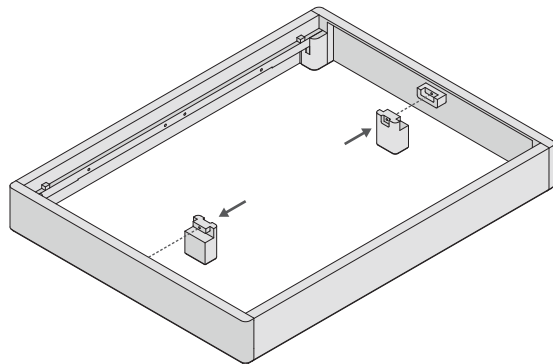


B. Secure the support block to the short rail with two **long screws**. Tighten by hand.

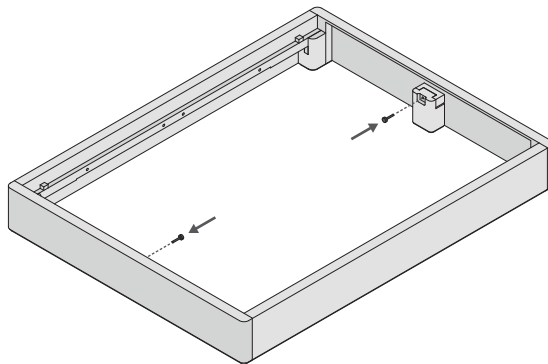


Step 5

- A. Align left arm with alignment groove under the long rail closest to the head of the bed. Press firmly to attach.
- B. Secure with two long screws. Tighten by hand.

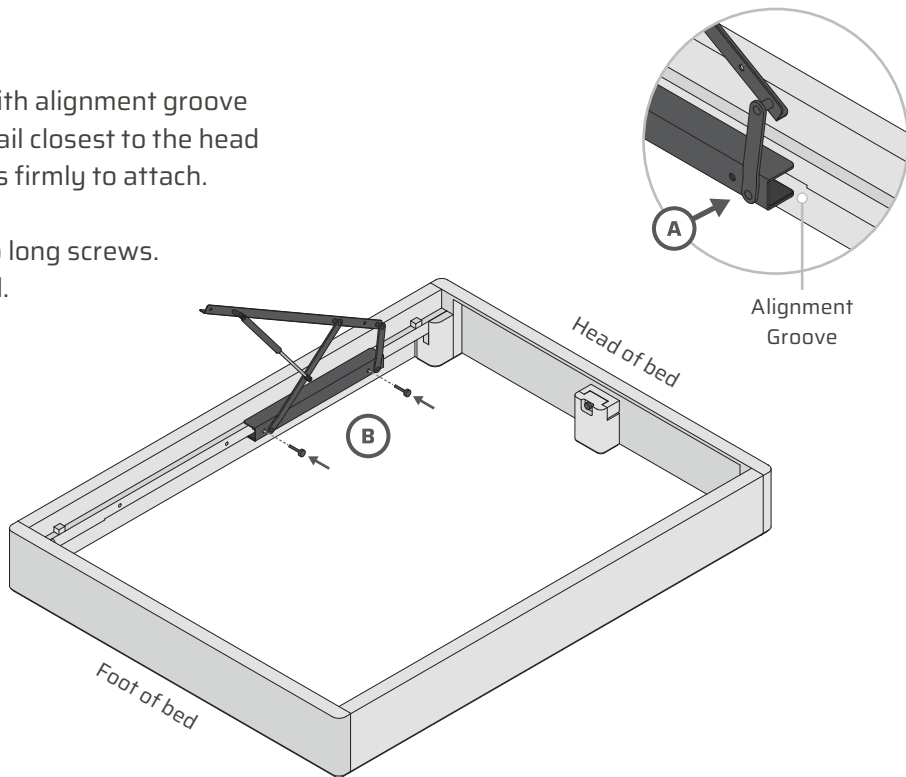

Step 6




- A. Align right arm with alignment groove under the long rail closest to the head of the bed. Press firmly to attach.
- B. Secure with two long screws. Tighten by hand.

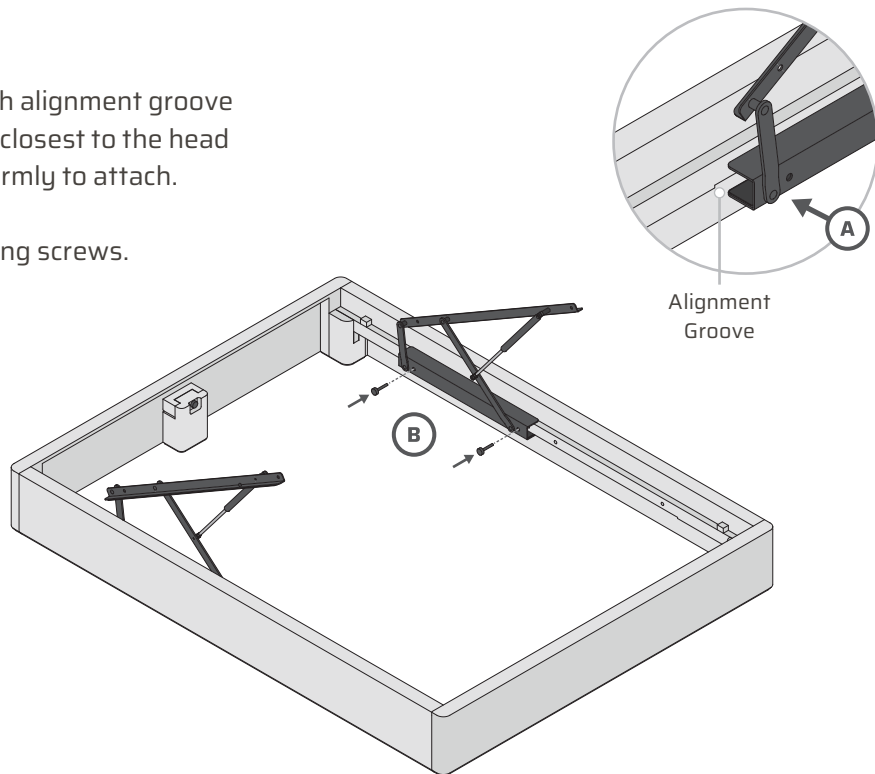

Step 7


Align pill-shaped openings on the slats with alignment pins on the left and right arms.

Place slats onto the arms.

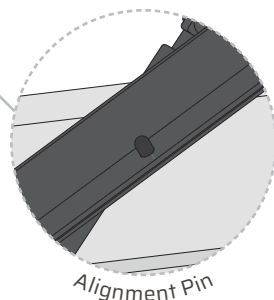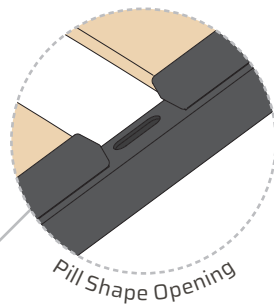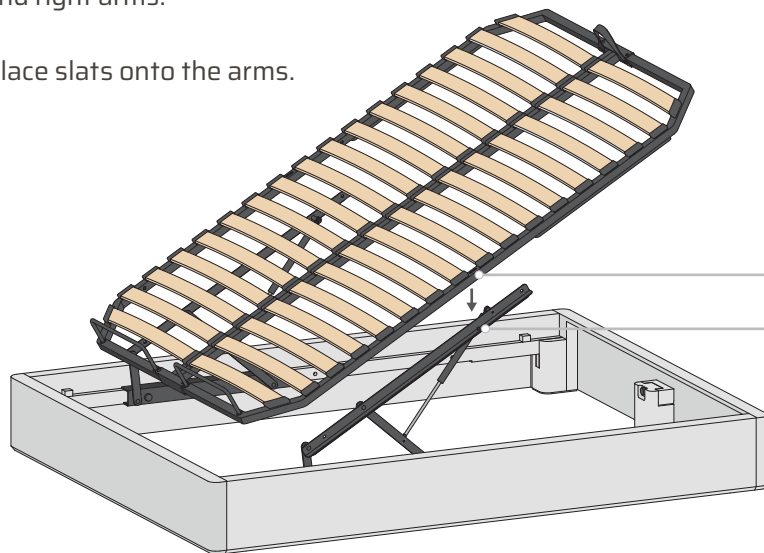


Step 8

Secure slats to the arms with four **short screws**.
Tighten by hand.

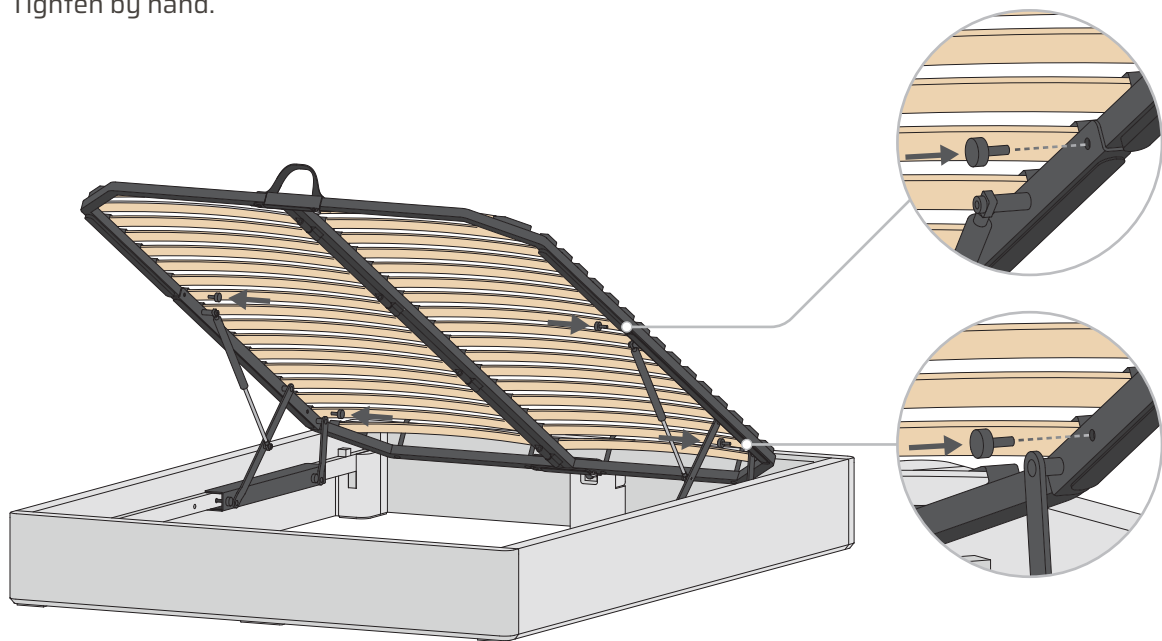


Step 9

Close slats by pressing down near the handle. Without the weight of a mattress and bedding, additional pressure may be required. Keep hands on top of slats and clear of moving parts.

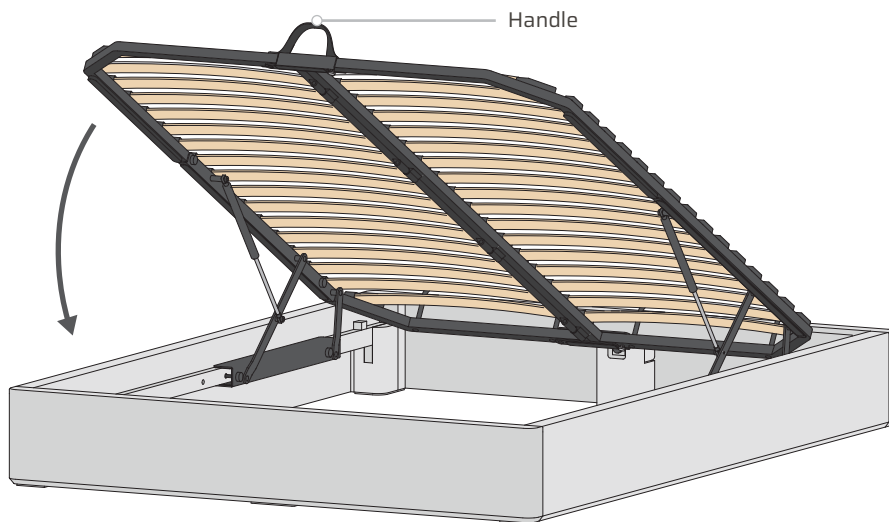


Step 10

Place mattress on slats.

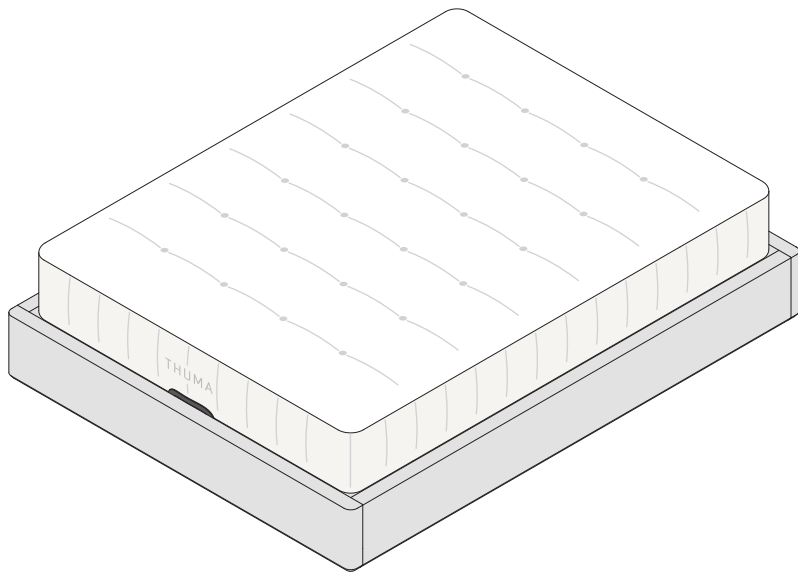


Step 11

To access storage, lift using the handle.

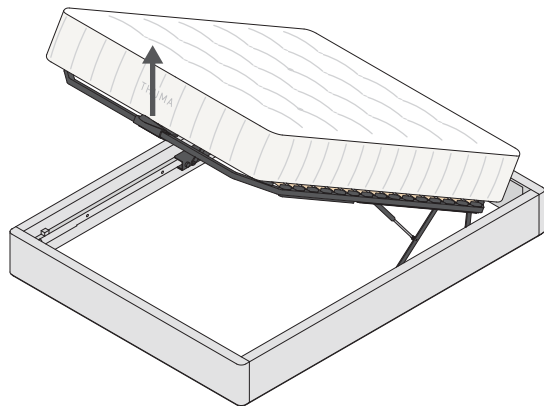

To close storage, press down on the mattress until fully closed. Keep hands on top of mattress and clear of moving parts.

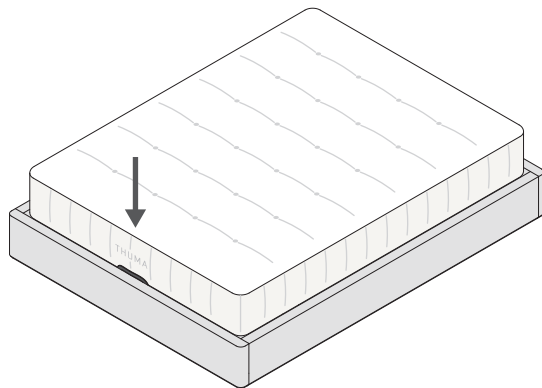

Enjoy.

Light a candle, play some jams, pour a refreshment.
Share moments of oasis @thuma.co

For help and more to love, scan the QR code below.



