



INSTALLATION INSTRUCTIONS FOR DEADBOLTS



Your latch is factory pre-set for 2-3/8" (60 mm) backset. If your door requires a 2-3/4" (70 mm) latch, follow these steps:
A. Hold latch in your right hand so you can see adjustment holes. With left hand, turn latchplate in clockwise direction then pull latchplate out as far as it will go.
B. Turn back and lock into 70 mm position.


1. INSTALL LATCH

CAUTION: Use manual tools or lowest torque setting on drill.

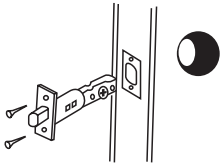

1. Install deadbolt latch in "up" position into door hole.
2. Insert and secure with wood screws.

2. INSTALL EXTERIOR ASSEMBLY

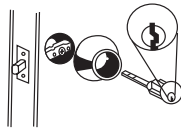

1. Place cylinder assembly through outside cylinder guard and on door making sure torque blade is properly positioned into the latch crank.
 2. Insert key into cylinder and turn until deadbolt is exposed.
- Note:** Keyhole must be in the "down" position as shown.

3. INSTALL INTERIOR ASSEMBLY



Make sure deadbolt is in un-locked position. Place thumb turn assembly onto torque blade and line up screw holes. The thumb turn must be in vertical position so that you see the screwholes. Secure with long machine screws.

INSTALLATION TEMPLATE

