



Tissue Management Kit

1.800.552.5512
www.ultradent.com

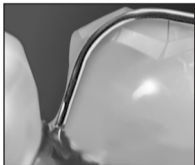


1. Rub ViscoStat[®] hemostatic firmly against bleeding tissues.

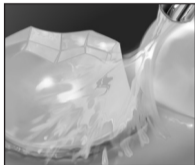


2. Firm air/water spray. Repeat step #1 if needed.



3. Pack Ultrapak[®] cord soaked in ViscoStat.

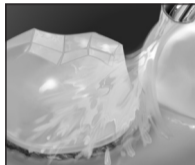

4. Firm air/water spray.

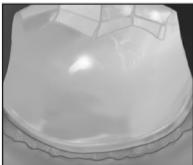

5. Remove cord. Firm air/water spray. Air dry. Make impression.



Ultrapak[®] Cord