


HITCH SOLUTIONS FOR THRU AXLES



(1:1) CHECK THE LENGTH OF YOUR AXLE TO FIND THE RIGHT LENGTH

CHECK THE THREAD OF YOUR THRU AXLE TO FIND OUT THE RIGHT THREAD PITCH

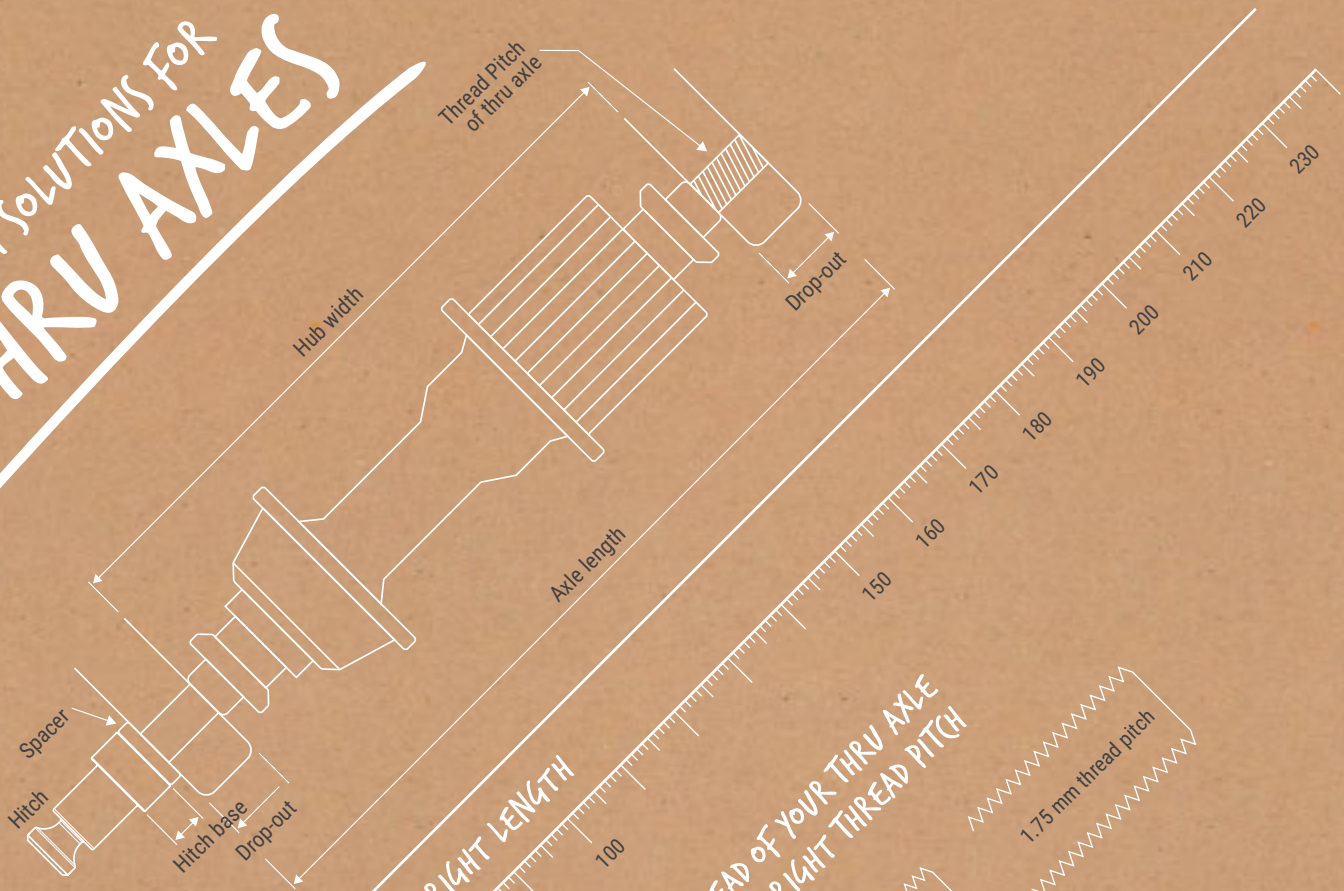

(1:1)

FURTHER INFORMATION AT WWW.CROOZER.COM

THRU AXLE HITCHES / THRU AXLE ADAPTERS

∅	THREAD PITCH	FOR AXLE LENGTHS	FOR HUB WIDTHS	HITCH / ADAPTER	PRODUCT CODE	ART.
12 mm	1.0 mm	L = 161 mm (incl. spacer)	e.g. Syntace 142/148 mm	Click & Crooz® XL (hitch base 20 mm)	12 - 167 - 1.00 XL	122501918
		L = 167 mm		Adapter for Universal hitch	12 - 167 - 100 A	122530118
		L = 217 mm	e.g. Syntace / Fatbike 197 mm	Click & Crooz® XL (hitch base 20 mm)	12 - 217 - 1.00 XL	122502018
				Adapter for Universal hitch	12 - 217 - 1.00 A	122530218
12 mm	1.5 mm	L = 165 mm	e.g. Shimano 135 mm	Click & Crooz® N (hitch base 10 mm)	12 - 165 - 1.50 N	122500318
				Click & Crooz® XL (hitch base 20 mm)	12 - 165 - 1.50 XL	122502118
				Adapter for Universal hitch	12 - 165 - 1.50 A	122530318
		L = 172 mm (incl. spacer)	e.g. Shimano 142/148 mm	Click & Crooz® N (hitch base 10 mm)	12 - 178 - 1.50 N	122500418
				Click & Crooz® XL (hitch base 20 mm)	12 - 178 - 1.50 XL	122501118
		L = 178 mm		Adapter for Universal hitch	12 - 178 - 1.50 A	122530518
		L = 209 mm	e.g. Shimano 177 mm	Click & Crooz® N (hitch base 10 mm)	12 - 209 - 1.50 N	122500518
				Click & Crooz® XL (hitch base 20 mm)	12 - 209 - 1.50 XL	122501218
				Adapter for Universal hitch	12 - 209 - 1.50 A	122530618
		L = 229 mm	e.g. Shimano / Fatbike 197 mm	Click & Crooz® N (hitch base 10 mm)	12 - 229 - 1.50 N	122500618
				Click & Crooz® XL (hitch base 20 mm)	12 - 229 - 1.50 XL	122501318
				Adapter for Universal hitch	12 - 229 - 1.50 A	122530718
12 mm	1.75 mm	L = 174 (incl. spacer)	e.g. Maxle 142/148 mm	Click & Crooz® N (hitch base 10 mm)	12 - 180 - 1.75 N	122500718
				Click & Crooz® XL (hitch base 20 mm)	12 - 180 - 1.75 XL	122501418
		Adapter for Universal hitch		12 - 180 - 1.75 A	122530818	
		L = 180 mm	e.g. Trek 142/148 mm	Click & Crooz® N (hitch base 10 mm)	12 - 198 - 1.75 N	122500818
				Click & Crooz® XL (hitch base 20 mm)	12 - 198 - 1.75 XL	122501518
		L = 192 mm (incl. spacer)		Adapter for Universal hitch	12 - 198 - 1.75 A	122530918
		L = 198 mm	e.g. Maxle 177 mm	Click & Crooz® N (hitch base 10 mm)	12 - 209 - 1.75 N	122500918
				Click & Crooz® XL (hitch base 20 mm)	12 - 209 - 1.75 XL	122501618
		L = 209 mm		Adapter for Universal hitch	12 - 209 - 1.75 A	122531118
		L = 229 mm	e.g. Maxle / Fatbike 197 mm	Click & Crooz® N (hitch base 10 mm)	12 - 229 - 1.75 N	122501018
				Click & Crooz® XL (hitch base 20 mm)	12 - 229 - 1.75 XL	122501718
				Adapter for Universal hitch	12 - 229 - 1.75 A	122531018

READ THE TABLE FROM LEFT TO RIGHT TO FIND YOUR HITCH