Maverick Sconce

Assembly Instructions

URBAN OUTFITTERS

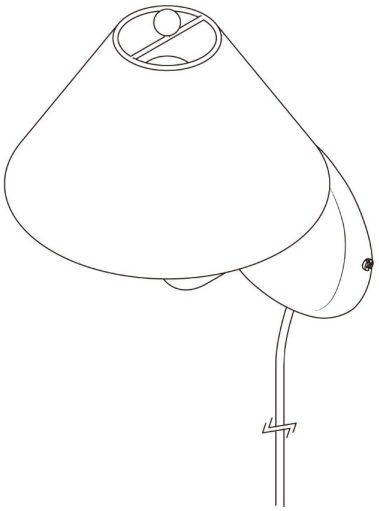

TOOLS REQUIRED BUT NOT INCUDED:
Pencil, Drill, Screw driver, Level

WARNINGS:
Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.
Use a TYPE A 40W MAX BULB DO NOT EXCEED SPECIFIED WATTAGE

CARE INSTRUCTIONS:
Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

PARTS INCLUDED:

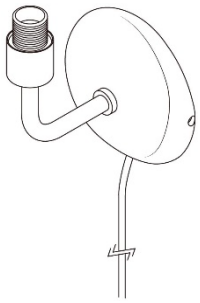

(A) Base

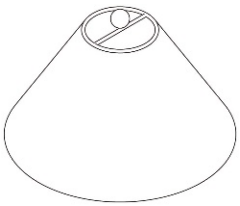

(B) Shade

(C) Socket ring

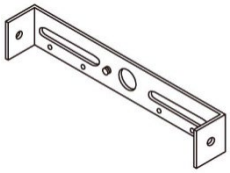

(D) Mounting Bracket

(E) Screw
[0.26” DIA X 0.79” L] x2

(F) Wall Screw
[0.30” DIA X 0.98” L] x2

(G) Wall Anchor
[0.31” DIA X 0.98” L] x2

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

Maverick Sconce

Assembly Instructions

URBAN OUTFITTERS

STEP 1

A) Locate the desired position of the sconce on the wall. Place the Mounting Bracket (D) on the wall and mark the location of the the holes in the bracket on the wall.
B) If attaching to drywall, Remove the Mounting Bracket (D) from the wall and pre-drill holes for the Wall anchors (G) with a drill and then insert the anchors.
C) Place the Mounting Bracket (D) back over the wall anchors. Insert the Screws (F) and tighten with a Phillips head screw driver or a drill.
D) If drilling into a stud, Place the Mounting Bracket (D) on the wall and insert Screws (F). through the bracket into the drywall. Tighten with a Phillips head screw driver or a drill.

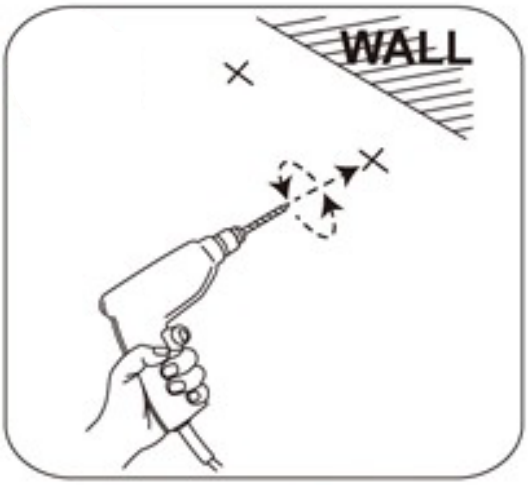

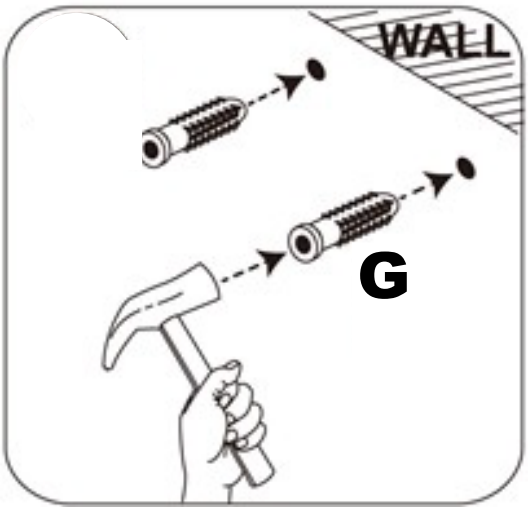

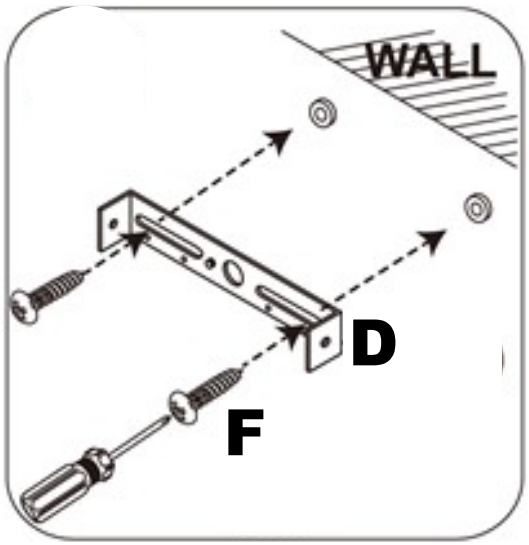

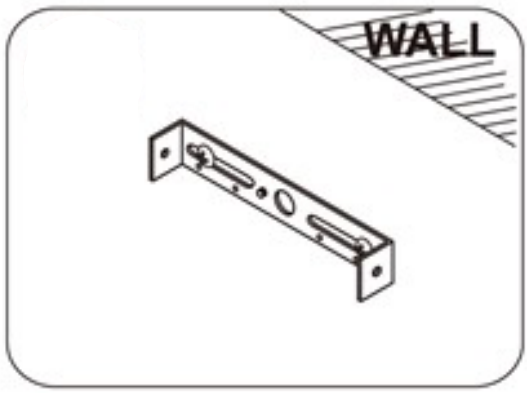

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO, Inc. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

STEP 2

Place the Base (A) over the Mounting Bracket (D) as shown. Insert the Screws (E) and tighten with a Phillips head screw driver. Screw a Type A 40W bulb into the Base (A). Plug in the sconce to complete assembly.

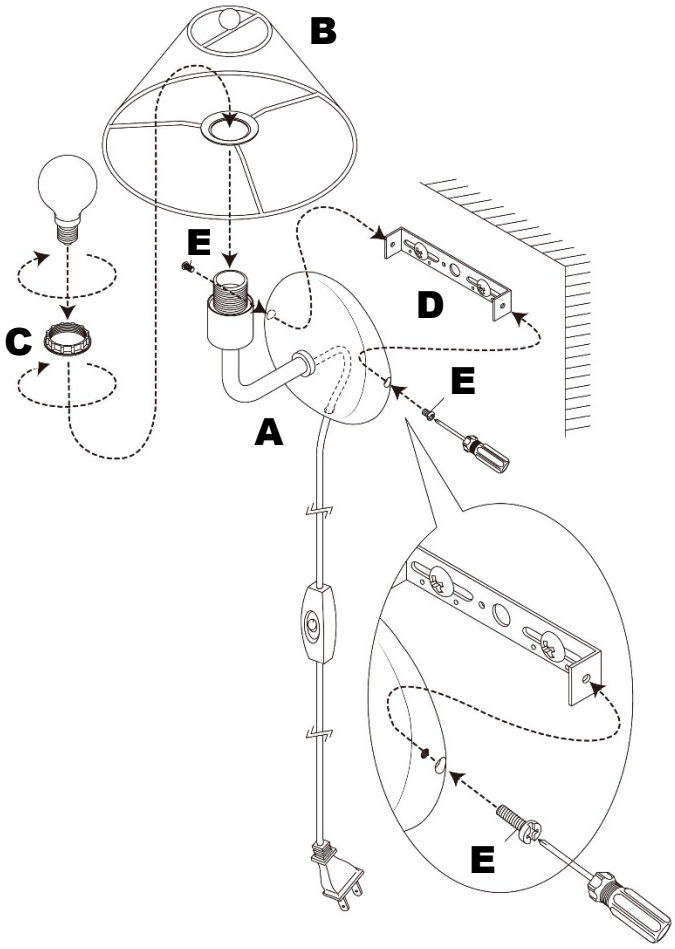

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF URBAN OUTFITTERS, INC.© 2017 UO,
Inc. All rights reserved, including all applicable copyright, design and patent rights.
Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.