



# 10 steps to GS1 barcode implementation

User Manual

*Issue 3, August 2016*



## Table of Contents

Introduction .....	3
1 Get a GS1 company prefix.....	4
2 Assign numbers.....	4
3 Select a barcode printing process .....	5
4 Select a "primary" scanning environment.....	5
5 Select a barcode.....	6
6 Pick a barcode size.....	7
7 Format the barcode text.....	8
8 Pick a barcode colour .....	9
9 Pick the barcode placement .....	10
10 Build a barcode quality plan .....	11
11 Solution Provider Program.....	11
12 Useful links.....	11

### Disclaimer

THIS DOCUMENT IS PROVIDED "AS IS" WITH NO WARRANTIES WHATSOEVER, INCLUDING ANY WARRANTY OF MERCHANTABILITY, NONINFRINGEMENT, FITNESS FOR PARTICULAR PURPOSE, OR ANY WARRANTY OTHERWISE ARISING OUT OF THIS SPECIFICATION. GS1 disclaims all liability for any damages arising from use or misuse of this Standard, whether special, indirect, consequential, or compensatory damages, and including liability for infringement of any intellectual property rights, relating to use of information in or reliance upon this document.

GS1 Australia retains the right to make changes to this document at any time, without notice. GS1 makes no warranty for the use of this document and assumes no responsibility for any errors which may appear in the document, nor does it make a commitment to update the information contained herein.

## Introduction

The most important implementation resource for barcode identification are the over 100 GS1 Member Organisations in countries all around the world. This guide takes new barcode users through the basic steps they must take to begin using barcodes.

### Ten Steps to Barcode Implementation

- Step 1** Get a GS1 Company Prefix
- Step 2** Assign numbers
- Step 3** Select a barcode printing process
- Step 4** Select a "primary" scanning environment
- Step 5** Select a barcode
- Step 6** Pick a barcode size
- Step 7** Format the barcode text
- Step 8** Pick a barcode colour
- Step 9** Pick the barcode placement
- Step 10** Build a barcode quality plan



## 1 Get a GS1 company prefix

Before a company can begin using barcodes, they must first assign the numbers that go inside the barcode. The first step is to obtain a GS1 Company Prefix from GS1 Australia.

The GS1 Company Prefix gives globally unique identification for the company allocating the barcode number for the product, asset or service.

GS1 Company Prefixes are used by 1.3 million companies worldwide as the basis for creating unique numbers to identify everything in the supply chain.

930 - 939	GS1 Australia
-----------	---------------

## 2 Assign numbers

After receiving a GS1 Company Prefix, a company is ready to begin assigning identification numbers to their trade items (products or services).

The process is simple. GS1 Australia provides you with specific information about how many numbers you can assign based on the length of your GS1 Company Prefix.

### Example of a 9-digit GS1 Company Prefix



### 3 Select a barcode printing process

To begin, you should decide what you are barcoding and if the barcode will carry static or dynamic information. An example of static information would be simply a product identification number (GTIN) on a cereal box. An example of dynamic information would be printing serial numbers on product labels.

If your barcode has static information and you need a large volume of labels then you will likely ask a printing company to print your labels.

If you need a small volume of labels or need to print labels with dynamic information you will likely need an on-demand printer like a laser printer in your office or thermal transfer printer in your warehouse. Knowing how you will print your barcode is an important question to answer in developing a good barcode implementation plan.



Printing Methods

- Traditional**
  - Flexography
  - Offset
- Digital**
  - Thermal
  - Laser
- Direct Marking**  
E.g. etching, engraving

### 4 Select a "primary" scanning environment

The specifications for barcode type, size, placement, and quality all depend on where the barcode will be scanned. By knowing where your barcode will be scanned you can establish the right specifications for its production.

Barcodes to be scanned at the **retail point-of-sale** will need to support omni-directional scanning. If the barcode will be scanned at point-of-sale as well as in the **warehouse**, you will need to use a symbol that accommodates point-of-sale scanning, but printed in a larger size to accommodate scanning in the distribution process.

Barcodes on **healthcare items** to be scanned in hospitals and pharmacies do not require omni-directional scanning, unless the items are also scanned at retail point-of-sale.

Scanning Environments
















- Point-of-sale (POS)
- General Distribution and Logistics
- Healthcare Items

## 5 Select a barcode

Selecting the right barcode is critical to the success of your barcode implementation plan, but here are some high level tips:

- If you need to barcode a trade item that will be scanned at the retail point-of-sale (POS), first symbol of choice is the **GS1 DataMatrix** symbol. This symbol is guaranteed to be scanned by POS systems all over the world.
- In some cases **GS1 DataBar** symbol may be applied.
- If you are printing a barcode with variable information like serial numbers, expiry dates, or measures, then you will use **GS1-128**, **GS1 DataBar**, or **GS1 2D symbols** or **QR Codes**.
- If you want to encode a URL into a barcode to make extended packaging information available to the end consumer, then you should use a **GS1 2D symbol**.
- If you need to barcode an outer case to be scanned in a logistics environment, and you want to print directly on corrugated carton, **ITF-14** may be the choice for you.
- If you are exporting to the US, then a UPC-A or UPC-E may be applicable.

*There are other factors to consider so contact GS1 Australia for more information.*

The GS1 Barcodes			
<b>GS1 EAN/UPC Family</b> <b>EAN-13</b>  9 501101 530003		<b>GS1 2D Barcodes</b> <b>GS1 DataMatrix</b>  (01) 0 9501101 53000 3 (17) 150119 (10) AB-123	
<b>EAN-8</b>  9505 0003		<b>GS1 QR Code</b>  (01) 0 9501101 53000 3 (8200) http://example.com	
<b>UPC-A</b>  6 14141 00003		<b>UPC-E</b>  0 614193 9	
GS1 DataBar Family			
<b>Omnidirectional</b>  (01) 0 9501101 53000 3		<b>Expanded</b>  (01) 0 9501101 53000 3 (17) 140704	
<b>Truncated</b>  (01) 0 9501101 53000 3		<b>Stacked</b>  (01) 0 9501101 53000 3	
<b>Limited</b>  (01) 0 9501101 53000 3		<b>Expanded Stacked</b>  (01) 0 9501101 53000 3 (3103) 000480	
<b>Stacked Omnidirectional</b>  (01) 0 9501101 53000 3			
GS1 1D Symbols used in General Distribution and Logistics but not at retail POS			
<b>GS1-128</b>  (01) 1 9501101 53000 0 (17) 140704 (10) AB-123		<b>ITF-14</b>  19501101530000	

**Note:** These symbols are not the correct size and have been adapted for this guideline.

## 6 Pick a barcode size




After the correct barcode symbol is specified together with the information to encode in it, the design stage begins. The size of the symbol within the design will depend on the symbol specified, where the symbol will be used, and how the symbol will be printed.

### Symbol sizes

The **X-dimension** is the specified width of the narrowest element of a barcode. X-dimensions are used together with the **symbol heights** to specify the permissible symbol sizes.

For each scanning environment the relevant symbols are listed with their target X-dimension and corresponding target height. Besides the target sizes also the allowed minimum and maximum sizes are specified.

Find out more on the [GS1 website](#)


EAN/UPC Samples		
		
9 310779 300005	9 310779 300005	6 14141 00001 2
Minimum X-dimension 0.264 mm ; 0.0104"	Target X-dimension 0.330 mm ; 0.0130"	Maximum X-dimension 0.660 mm ; 0.0260"
Minimum symbol height 18.28 mm ; 0.720"	Minimum symbol height 22.85 mm ; 0.900"	Minimum symbol height 45.70 mm ; 1.800"

### EAN/UPC symbols

When one dimension is modified, the other dimension should be altered by a proportional amount. In order to decrease the amount of space EAN/UPC symbols take up on a design, a decreased symbol height might be specified. This process, called truncation, is not permitted within EAN/UPC symbology specifications and should be avoided. This is because of the negative impact it has on scan rates for retail omni-directional scanners.

### Omni-directional

EAN/UPC symbols are suitable for omni-directional scanning since they can be read from all directions by a fixed scanner. For example, a flat-bed scanner found in grocery stores.

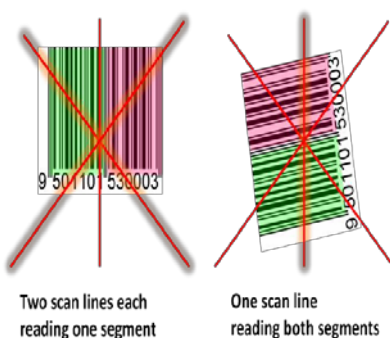

## Consideration of the printing process

The final major consideration for symbol size is the capability of the selected printing process. The minimum size (magnification) and correct Bar Width Reduction (BWR) for a symbol varies by printing process and even from press to press. Printing companies should establish a minimum symbol size (magnification) and BWR to achieve acceptable and repeatable quality results. It is recommended you consult with your printer.

## 7 Format the barcode text

The number beneath a barcode, called Human Readable Interpretation (HRI), is important because if the barcode is damaged or of poor quality to begin with, then the number is used as a back-up.

Here are some of the most frequently asked questions on HRI:

### Does the Human Readable Interpretation need to be a certain size?

The human-readable text must be clearly legible and in a size proportional to the symbol size.

### Is the Human Readable Interpretation supposed to be above or below the symbol?

HRI should be placed below the barcode and grouped together wherever physically possible while maintaining the HRI legibility and minimum barcode height.

### I see parentheses around the Application Identifiers (AI) under some barcode symbols. Are they supposed to be there and are they encoded in the bars and spaces of the symbol?

All AIs must be enclosed in brackets in the Human Readable Interpretation, but the parentheses are not encoded in the symbol.



How many digits do I print beneath the EAN/UPC Symbol in the Human Readable text?


- You must print 12 digits below the UPC-A Symbol.
- You must print 13 digits below the EAN-13 Symbol.
- You must print eight digits below UPC-E and EAN-8 Symbols.



## 8 Pick a barcode colour

The optimum colour combination for a barcode symbol is black bars with a white background. If you want to use other colours, the following may help you in choosing satisfactory ones:

- GS1 barcodes require dark colours for bars (e.g., black, dark blue, dark brown, or dark green).
- GS1 barcodes require light backgrounds for the Quiet Zones (area free of printing around the barcode) and spaces (e.g., white).
- In many cases the symbol background is not printed and the colour of the packaging substrate is used as barcode background. However, if the symbol background is printed beneath the bars, the background should be printed as solid line colours.
- If you use multiple layers of ink to increase the background opacity, each layer should be printed as a solid colour.
- If you use a fine screen to deliver more ink to the substrate, be sure there are no voids in the print caused by the screen not adequately filling in.

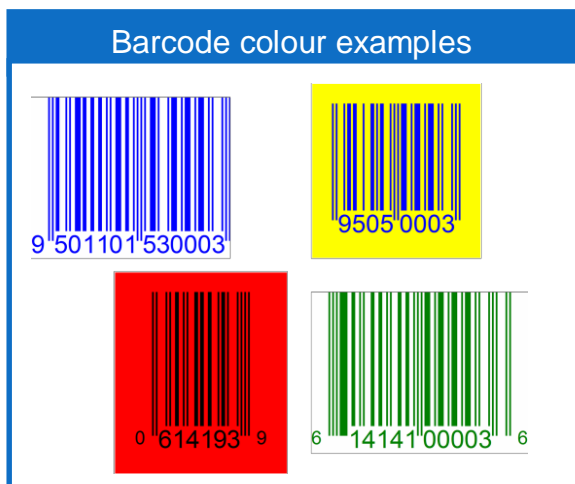

---

*As explained, black bars and white spaces are the optimal combination, but other colour combinations can be used. Consult an experienced printing company recommended by GS1 Australia on the [Solution Partner Directory](#).*

---

## 9 Pick the barcode placement

When discussing symbol location we are referring to the symbol placement on the design.

When assigning symbol placement first the packaging process should be considered. You should consult the packaging engineer to make sure the symbol will not be obscured or damaged (e.g., over a carton edge, beneath a carton fold, beneath a package flap, or covered by another packaging layer).


After determining the proper placement, the printing company should be consulted. This is because many printing processes require barcodes to be printed in a specific orientation to the feed direction of the web or sheet.

When using flexographic printing the bars should run parallel to the press direction. If the bars are required to run perpendicular to the press direction check to ensure the symbol is not distorted. When using either silk screen or rotogravure printing processes, the symbol should be aligned parallel to the cell structure on the screen or gravure plate cylinder to provide the smoothest bar edge possible.

---

*To determine the proper location for GS1 barcodes, see the following topics in Section 6 of the [GS1 General Specifications](#):*

- *General Placement Principles*
  - *General Placement Guidelines for the Retail Point of Sale*
  - *Placement Guidelines for Specific Package Types*
  - *Symbol Placement for Clothing and Fashion Accessories*
  - *General Placement Guidelines for Symbol Placement on Items used in Distribution*
  - *Clothing and Fashion Accessories Label Design, Logistics Label Design*
- 

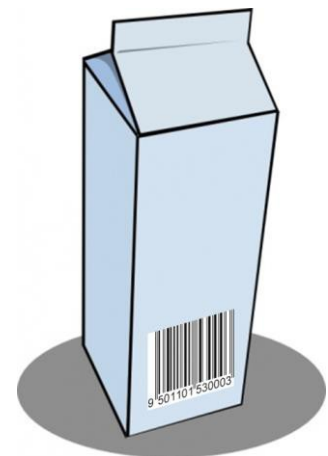

## 10 Build a barcode quality plan

ISO/IEC 15416 Barcode Print Quality Test Specifications for Linear Symbols describes a method for assessing the quality of barcode symbols after they are printed. An ISO-based verifier looks at the symbol in the way a scanner does, but goes further by grading the symbol's quality.

GS1 utilises the ISO/IEC method, but specifies the minimum grade necessary for every GS1 barcode based on which symbol is used, where it is used, or what identification number it is carrying. In addition to the minimum grade, GS1 also specifies the verifier aperture width and wavelength.

Setting up different minimum specifications is similar to a university using a standardised test to determine whether applicants qualify for admission. Several universities may utilise the same standardised test, but each sets the minimum score necessary for its applicants to be admitted.

National retailers are increasingly intolerant of products that cause scanning errors. Most Australian retailers require GS1 Australia Barcode Check as a mandatory step in the supply chain. GS1 Australia also test barcodes using a rigorous ISO 15416 verification (testing) method and check for compliance to GS1 standards.

## 11 Solution Provider Program

There are more than 75 companies in our Solution Provider network, and all share our vision of delivering tangible supply chain benefits to GS1 members and industry groups. All provide compliant technology and solutions to help you implement standards in a simple and cost-effective way.

Solution Providers have thorough knowledge of our systems, to help you get the most from barcoding to eCOM, data management to RFID.

Visit our [Solution Provider Directory](#)

## 12 Useful links

**GS1 Identification Keys** One page summaries for each of the GS1 Identification Keys:  
<https://www.gs1au.org/our-services/numbering-and-barcodes/>

**GS1 Barcodes** One pages summaries of all GS1 barcodes, including an overview of printing methods and scanning environments: <https://www.gs1au.org/our-services/barcode-check/>

**GS1 Industries** Information on the way GS1 standards are applied in various sectors.  
<https://www.gs1au.org/for-your-industry/>

[www.gs1au.org](http://www.gs1au.org)