

DESIGN & SPECIFICATION CONSIDERATIONS

CURVED BRICKWORK USING STANDARD FORMAT BRICKS

To create curved brickwork with standard format bricks the mortar joints need to be tapered. This will create a degree of faceting depending on the curvature required. The perpend joints will also overhang the stretcher face below casting a shadow. The acceptability of appearance hinges on how pronounced the overhang looks with the desired radius.



The type of finish the bricks possess also affects visual acceptability, bricks with a multi-colour and rugged texture are more likely to soften the effect compared to straight arised smooth finishes.


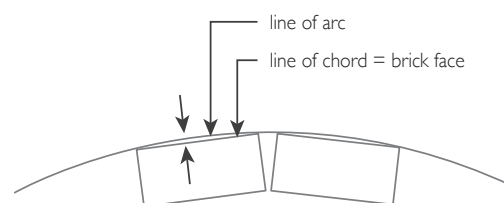


Figure 1 Faceting due to difference of arc and chord.

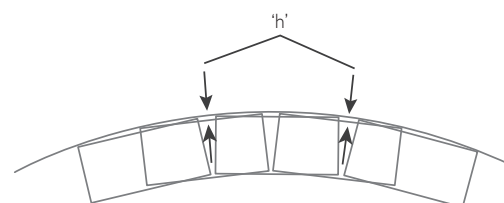

The bond pattern can also affect the successful appearance of the curve. Curves of a smaller radii can be achieved using Flemish bond or Header bond rather than Stretcher bond. Stack bond eliminates the overhang effect however it accentuates faceting and has no structural integrity.

An acceptable appearance using stretchers can usually be achieved for radii down to 3.5 to 4m and for header bond, radii down to 2.5 to 3m.

Mortar cross-joint widths can be visually acceptable between 6mm and 15mm however to minimise water penetration it is most important that wider joints have the correct specification of mortar; are solidly filled and the bond between brick and mortar is good.


If necessary, maintain a minimum 4mm cross joint width on concave non fair-faced brickwork. Joint finishing is also important as it will have an overriding influence on the appearance of finished brickwork.

BS EN 771-1 classifies bricks into 3 main size tolerances and, even if the product falls into the tightest tolerance bracket, variances occur when

compared to each other, within consignments and between consignments. As the cross-joints in curved brickwork are subject to more extreme scrutiny by deviating from the normal nominal 10mm, consideration of the brick tolerance is advised. Workmanship on site also contributes to the joint widths so extra care is needed especially setting out, mixing bricks from multiple packs and checking plumb of perpend. As string lines cannot be used, frequent checks are needed with spirit level, gauge rod and templates which will be time consuming and should be allowed for.

Movement

Consider increased provision for movement in curved walling.

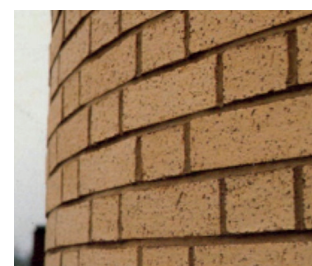

Flemish bond.



DESIGN & SPECIFICATION CONSIDERATIONS

CURVED BRICKWORK USING STANDARD FORMAT BRICKS

CALCULATING JOINT WIDTHS AND BRICK NUMBERS

To calculate the internal radius of a curve from the external radius:

$$r = R - W *$$

External Radius of brickwork minus the **W**idth of unit*.

i.e for 1 brick thick stretcher bond if the external radius is 4m, $r = 4000 - 215 = 3785\text{mm}$ internal.

(or for vice versa $r = R + W$)

**The term 'unit' refers to a group of up to 3 bricks depending on the bonding pattern adopted.*

To calculate by how much the width of a cross joint on the convex side of a curved wall will exceed that of the concave side:

$$X = \frac{(L \times W)}{(p \times r)}$$

(Length of unit x unit **W**idth (÷ (bonding factor 'p' # x internal radius of wall).

i.e. for 1 brick thick stretcher bond if external radius is 4m, $X = (215 \times 215) \div (1 \times 3785) = 12.2\text{mm}$ difference.

If both sides are fair face external joint could measure 17.5mm and internal 5mm.

The narrow internal joint thickness and brick type used may not be visually acceptable and special shape radial units should be considered in this instance.

To calculate the **N**umber of bricks in a complete 360° ring:

$$N = \frac{2\pi r}{(L + [p \times d])} \times n$$

$2 \times 3.14 \times \text{internal radius mm} \div (\text{Unit length} + [\text{bonding factor 'p' \#} \times \text{width of cross joint on concave side mm}]) \times \text{number of bricks per unit.}$

i.e for 1 brick thick stretcher bond if external radius is 4m, $(2 \times 3.14 \times 3785) \div (215 + [1 \times 5]) = 108 \times 2 = 216$ bricks

Factor 'p' is also dependant on the bonding pattern. The appropriate values are:

	'L' Length of unit (mm)	'W' Width of unit (mm)	'n' number of bricks per unit	'p' factor
Half brick wall (102mm) Stretcher bond	215	102	1	1
One brick wall (215mm) Stretcher bond	215	215	2	1
One brick wall Flemish bond	317	215	3	2
One brick wall Header bond	102	215	1	1

For curved brickwork requiring Special Shapes a range of radial headers and stretchers are available from Ibstock, also transition bricks for areas where curved sections lead into straight.

Refer to the BDA Design Note 12, 'The Design of Curved Brickwork' for more detailed information.

Although the instructions contained in this publication and any other information published by Ibstock Brick Ltd are believed to be accurate at the date of publication, they are strictly for guidance only and Ibstock Brick Ltd accepts no liability in relation to their use or for any losses, howsoever caused. You are responsible for taking all reasonable steps to ensure your use of the product conforms to all applicable health and safety requirements from time to time. If in doubt, please consult appropriately qualified persons. All products sold by Ibstock are sold subject to Ibstock's Terms and Conditions of Sale, a copy of which is available on request.