

# 1.2 & 3 Gal Planter Assembly Manual

The Ez-Pz Planter™



**The WEIGHT is over!**

THE **Bucket+** Company®

## THE Medical+ Planter

FIRST EVER PLANTER MADE WITH FDA & EPA APPROVED PLASTIC.





ELIMINATE

- ✓ E-COLI
- ✓ MOLD
- ✓ ALGAE

NO MORE

- ✓ DRAIN PANS
- ✓ WET VAC SPILLS

Learn more at [THEBucket+Company.com](http://THEBucket+Company.com)

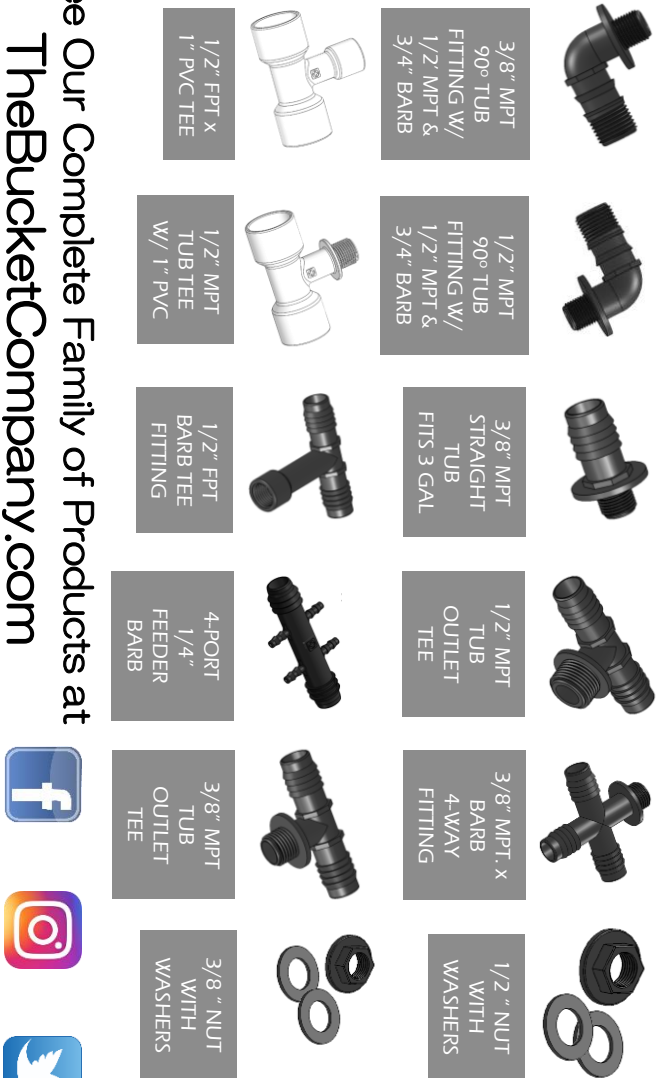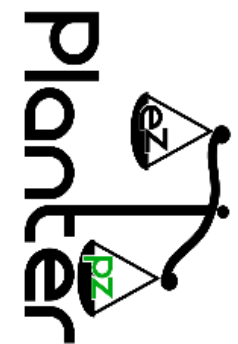


See Our Complete Family of Products at [TheBucketCompany.com](http://TheBucketCompany.com)




## Drainage Setup

**1** STEP 1: Insert Four (4) 1/2" PVC Legs into the bottom slips of your planter.

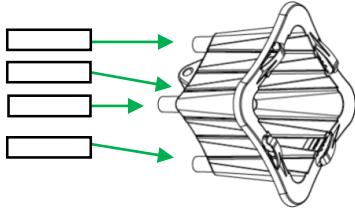


**2** STEP 2: Insert 90-degree Elbow and insert into drain of the planter. Put one washer on the outside and one on the inside and screw in the fitting with the nut.

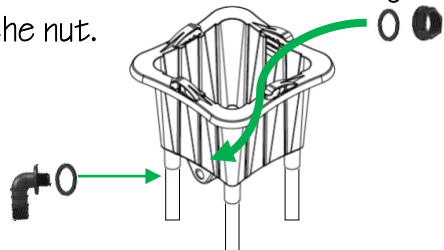

## Optional

Screw FPT Drop Down Tee into the 90 Degree Elbow. This will assist with drainage but is not necessary.

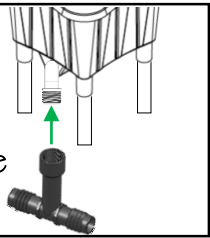

**3** STEP 3: Cut the 3/4" Hose to desired lengths for your set up. Slide hose onto your drainage barb fitting. Do this w/ all of your planters to set up your drainage line.



NOTE: Start the Drainage line with your 90 deg elbows inside of the planters furthest from the exit of your drainage in order to create a gravitational drop to the rest of your drainage line.

# THE Bucket+Company®

## The WEIGHT is over!

## Irrigation Setup

**1** STEP 1: Get the rest of your 3/4" hose & cut it to your desired length for irrigation set up. Insert them into the 6-Way 3/4"-1/4" reducing connector.




NOTE: Set up One (1) Connector for every two planters. You will have two 1/4" feeding lines per planter.

**2** STEP 2: Once you set up your Connectors with the 3/4" lines take the 1/4" roll of hose, cut it to desired lengths for irrigation and slide onto the 1/4" ports. Next insert the 1/4" valve into the end of your feeding line.




NOTE: Use 3/4" End Cap at end of your feeding line.

**3** STEP 3: Use the Caps to close the 1/4" ports that are not being used for irrigation lines.

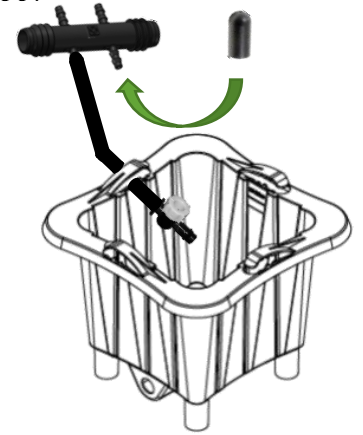

**4** STEP 4: Place the reusable inserts inside of your planters. Grab the handles and slide the clips of the planters not being used for the 1/4" line.

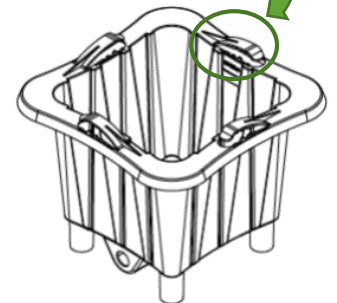

**Complete**