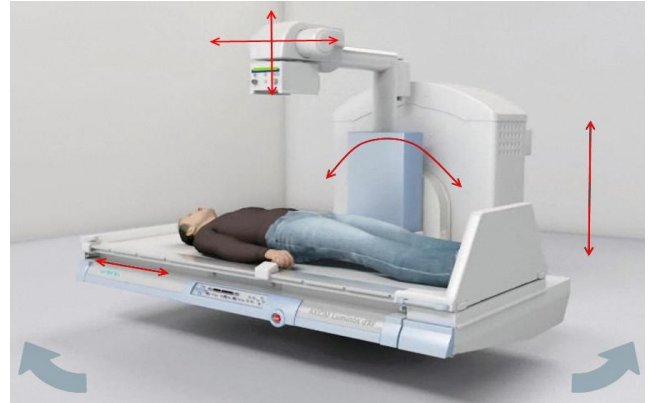


RADIOGRAPHY AND FLUOROSCOPY SYSTEMS

**Machine Category:**

System for both fluoroscopy and radiography
Positioning of patients

Industry: Medical Equipment

Country: Germany

Product Series:
MCD

Specification:

IP54, Hollow shaft, Motor feedback,
SSI Interface

Competing Technical Solution:

Similar to Baumer Encoder

Benefits of Technical Solution

The encoder is used to monitor the position of the t, table in several directions. Similar replacement to existing product

Reasons For Choosing POSITAL

Good customer access based on preexisting business, best price among competitors, short reaction times

Author: Lucien Scholten

lucien.scholten@posital.com



PHILIPS
Philips Healthcare
SIEMENS

Confidential! For internal use and training of authorized sales partners of POSITAL only.
Information may not be disclosed to third parties!


AMERICAS
FRABA Inc.
1800 East State Street, Suite 148
Hamilton, NJ 08609-2020, USA
T +1 609 750-8705, F +1 609 750-8703
www.posital.com, info@posital.com

EUROPE
POSITAL GmbH
Carlswerkstrasse 13c
D-51063 Köln, GERMANY
T +49 221 96213-0, F +49 221 96213-20
www.posital.eu, info@posital.eu

ASIA
FRABA Pte. Ltd.
60 Alexandra Terrace,
#02-05 The Comtech, SINGAPORE 118502
T +65 6514 8880, F +65 6271 1792
www.posital.sg, info@posital.sg

POSITAL

FRABA

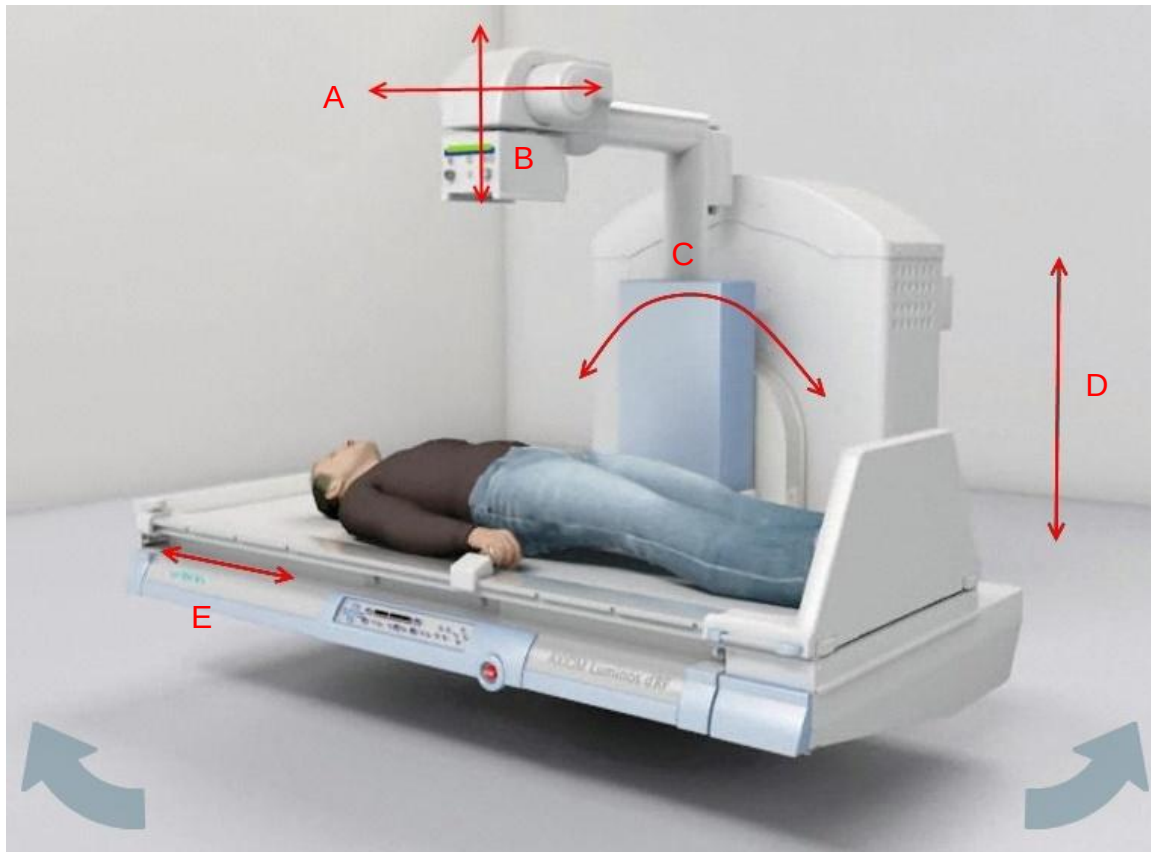

Encoders can be used in several drives in radiography table:

- A. Horizontal position of radiography head mostly with draw wire sensor
- B. Vertical positioning of Radiography head mostly with draw wire sensor
- C. Inclination of patient table mostly hollow shaft Encoder as Motor feedback
- D. Vertical positioning of table mostly hollow shaft Encoder as Motor feedback
- E. Horizontal positioning on table mostly motor feedback or draw wire sensor.

ACTUATORS / VALVES FOR WATERWORK

CONFIDENTIAL!



PHILIPS
Philips Healthcare
SIEMENS

Confidential! For internal use and training of authorized sales partners of POSITAL only.
Information may not be disclosed to third parties!

AMERICAS
FRABA Inc.
1800 East State Street, Suite 148
Hamilton, NJ 08609-2020, USA
T +1 609 750-8705, F +1 609 750-8703
www.posital.com, info@posital.com

EUROPE
POSITAL GmbH
Carlswerkstrasse 13c
D-51063 Köln, GERMANY
T +49 221 96213-0, F +49 221 96213-20
www.posital.eu, info@posital.eu

ASIA
FRABA Pte. Ltd.
60 Alexandra Terrace,
#02-05 The Comtech, SINGAPORE 118502
T +65 6514 8880, F +65 6271 1792
www.posital.sg, info@posital.sg