

Step-by-Step Battery Replacement Instructions



SMART HOME MONITORING

Before you begin

Everything you need to know is right here in this simple guide.

Why a new battery?

The following devices connect wirelessly to your Smart Home Monitoring system and are powered by internal batteries:

- Sensors: Door/window, motion, smoke, Carbon Monoxide, water leak, glass break, and virtual curtain
- Thermostats
- Door Locks
- Key Fobs and Keypads

The batteries inside these devices, much like a car's battery, must be replaced from time to time due to age and usage. We've included instructions (and the only tools you need) to help you safely remove and replace the low battery/batteries.

Two important notes before you begin:

1. Please be sure to put your Smart Home Monitoring system in disarm mode prior to changing the battery in any of your system's devices.
2. Before attempting to replace the battery in your carbon monoxide or smoke detector, please contact the Rogers Central Monitoring Station at 1-888-578-1777.

* The monitoring station agent will ask for your verbal passphrase in order to authenticate you before proceeding with the next steps.

- Tell the agent you will be replacing your sensor battery.
- The agent will put your system into "test" mode so no emergency service is dispatched.
- Once you've replaced the battery, call the Rogers Central Monitoring Station again to restore your system back online.

Note: Please be aware that any damage caused to SHM equipment due as a result of battery replacement is not covered under Rogers Smart Home Monitoring Limited Equipment Warranty.

Questions? Contact our Support Center at 1-855-381-7840.


WARNING: Batteries can EXPLODE, CATCH FIRE, and/or CAUSE BURNS if disassembled, punctured, cut, crushed, short-circuited, incinerated, recharged (disposable cells only), or exposed to water, fire, or high temperatures. Please adhere to the following guidelines when working with batteries:

- Replace the batteries with the same type listed in this guide only. Replacing the battery incorrectly might result in damage to the equipment.
- Store batteries in a cool, dry, well-ventilated area. DO NOT store batteries with hazardous or combustible material.
- Keep batteries away from children at all times.
- Replace all batteries in one device at the same time and do not load batteries backwards.

Motion Sensor

Visonic® NEXT K9-85

 CR123A 3V Lithium

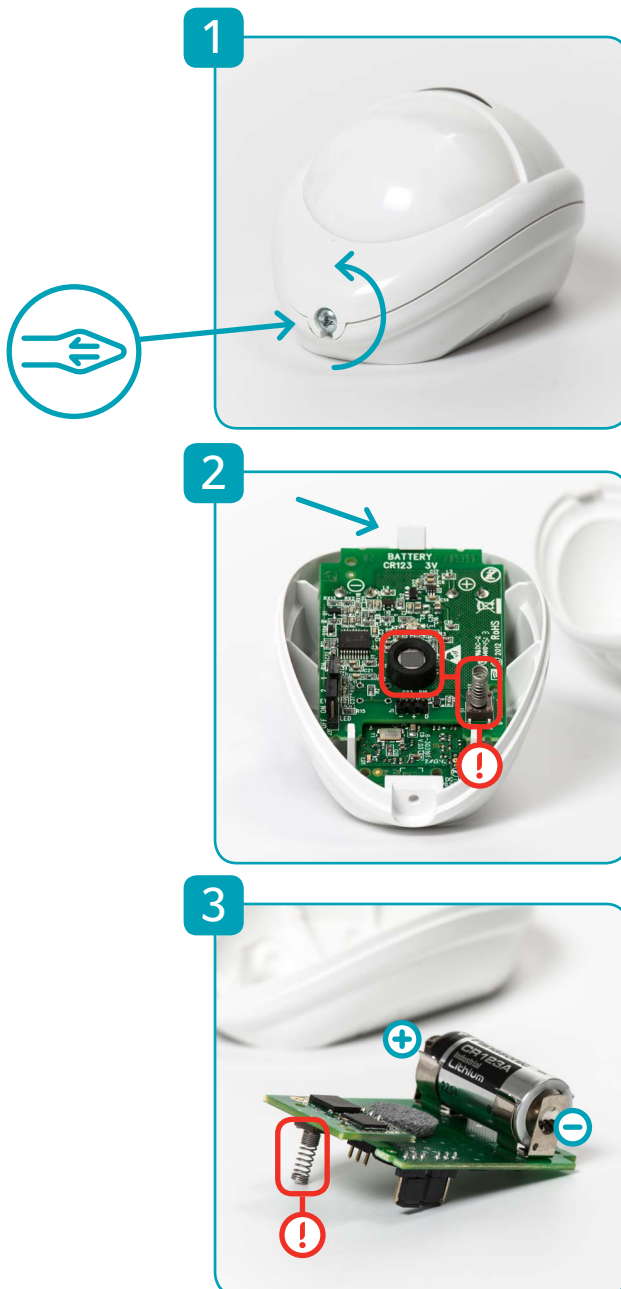

1. Loosen bottom screw with a Phillips screwdriver until cover pops off.
2. A green board is held at the top by a catch tab. Gently pull this tab up.
3. Gently remove board from sensor by pulling section closest to catch tab first.

⚠ Note: The Motion Sensor and tamper are exposed once you remove the cover (the red squares). Take care not to touch them. Repeated contact with the Sensor may compromise the functionality of your device and pressing down on the tamper will reset the Sensor to the factory settings.

4. Remove battery and wait one minute before replacing with new battery.
5. Reinsert board's tab-like bottom back into the sensor until tab clicks into place.
6. Reconnect sensor and cover, and replace/tighten screw.