
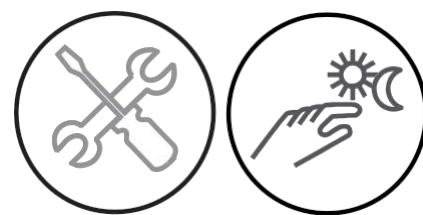


# NAVISTEM B3000

FR DE ES IT EN NL

## Boiler controller

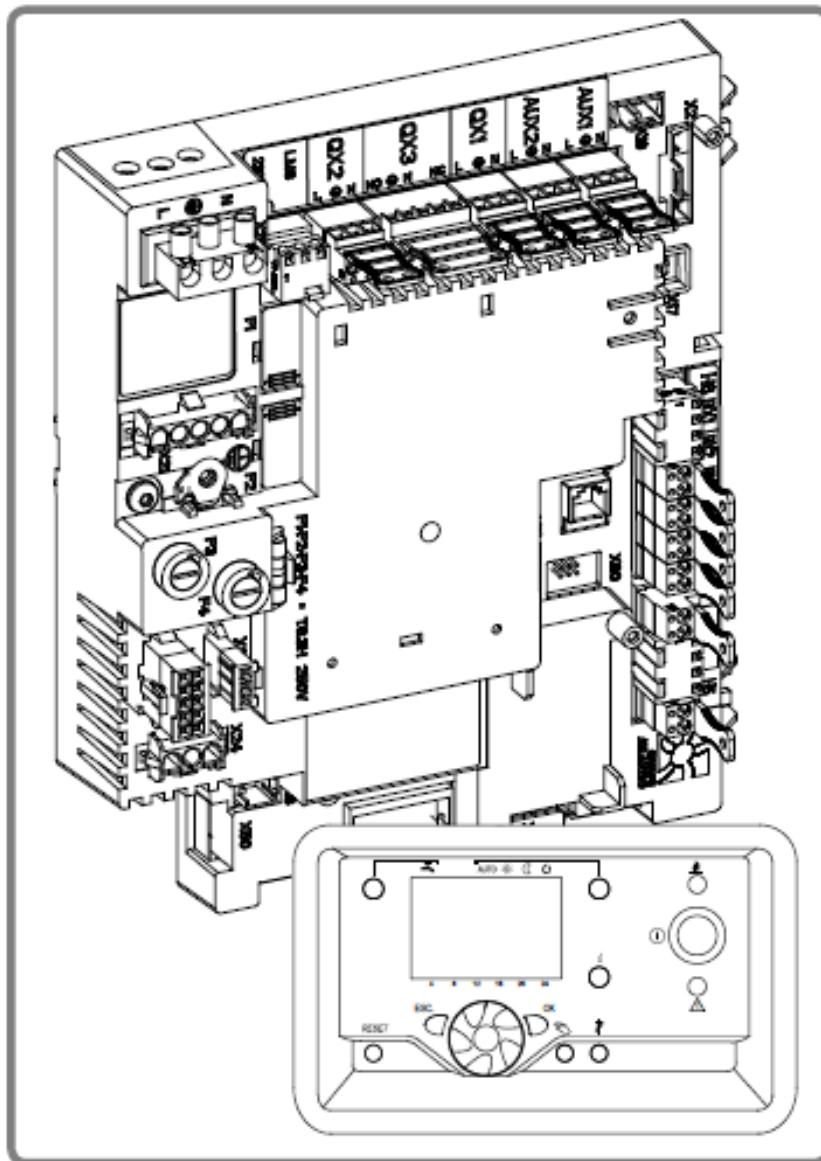

## Installation and User Manual

**Customer Service Centre**  
Hamworthy Heating Limited,  
Wessex House, Stinsford Road,  
New Fields Business Park,  
Poole, Dorset BH17 0NF  
Telephone: 01202 662500  
Fax: 01202 662522  
Email: [service@hamworthy-heating.com](mailto:service@hamworthy-heating.com)  
Website: [www.hamworthy-heating.com](http://www.hamworthy-heating.com)



Hamworthy reserves the right to make changes and improvements which may necessitate alteration to the specification without prior notice.



# SIMPLIFIED USE GUIDE

This section gives a list of parameters to be programmed for a basic boiler installation.

## Navigation between the various screens

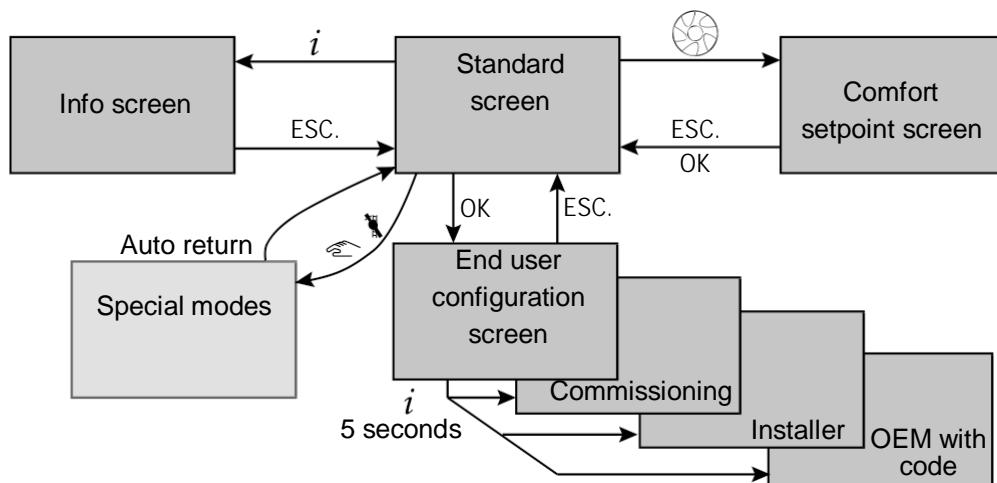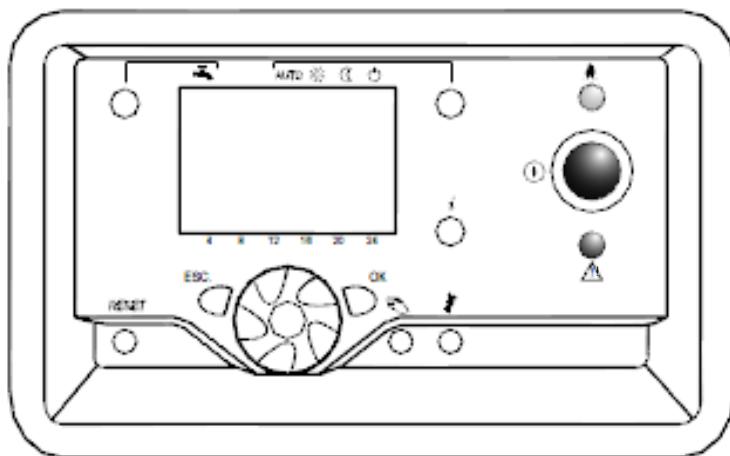

## Main parameters

All the parameters below are accessible from the "End user" level.

Date and time		
1	Hour minutes	See paragraph 6.1, page 36
2	Day month	See paragraph 6.1, page 36
3	Years	See paragraph 6.1, page 36
Time schedule program for heating circuits 1, 2 and 3		
5xx	Adjustment of energy saving time schedules	See paragraph 7.1.2, page 40
Heating circuits 1, 2 and 3		
710 - 1010 - 1310	Comfort setpoint	See paragraph 7.1.4, page 41
712 - 1012 - 1312	Reduced setpoint	See paragraph 7.1.4, page 41
720 - 1020 - 1320	Slope of curve	See paragraph 7.1.5, page 41
Domestic hot water		
1610	Comfort setpoint	See paragraph 8.1.1, page 54
Error		
Current error diagnostic code		See chapter 16, page 96

# SUMMARY

<b>SIMPLIFIED USE GUIDE.....</b>	<b>3</b>
Navigation between the various screens.....	3
Main parameters .....	3
<b>1. WARNINGS AND RECOMMENDATIONS.....</b>	<b>8</b>
1.1. Symbols used in this document .....	8
1.2. Qualification of personnel for installation and maintenance.....	8
1.3. Safety guidelines.....	8
<b>2. ELECTRICAL CONNECTION.....</b>	<b>9</b>
2.1. Characteristics of electrical power supply .....	9
2.2. Cable cross-section.....	9
2.3. Electrical connections on terminal strips .....	10
2.3.1. Power and high power terminal strips.....	10
2.3.2. Signal terminal strips .....	10
2.4. Fuses .....	11
<b>3. USER INTERFACE .....</b>	<b>12</b>
3.1. Presentation of interface: .....	12
3.2. Display .....	12
3.2.1. Predefined basic display.....	13
3.2.2. Display of a fault .....	13
3.3. Operating modes.....	14
3.3.1. Heating mode .....	14
3.3.2. DHW mode .....	14
3.3.3. Manual temperature mode.....	15
3.3.4. Manual power mode .....	15
3.3.5. Cleaning mode.....	16
3.3.6. Purge mode .....	16
3.4. Adjustment of setpoints.....	16
3.4.1. Heating setpoint adjustment .....	16
3.4.2. Adjustment of DHW setpoint.....	17
3.5. Boiler states .....	17
3.6. Parameter configurations.....	18
3.6.1. "End user" parameter configurations .....	18
3.6.2. "Configuration" and "specialist" parameter configurations.....	18
3.6.3. Setting the various parameters.....	18
<b>4. OPERATING CYCLES.....</b>	<b>19</b>
<b>5. LIST OF PARAMETERS.....</b>	<b>20</b>
<b>6. "USER INTERFACE" PARAMETERS.....</b>	<b>36</b>
6.1. Setting the time .....	36
6.2. User interface.....	36
6.3. Heating circuit assignment.....	37
6.4. Software version .....	38

<b>7. "HEATING CIRCUITS" PARAMETERS .....</b>	<b>39</b>
7.1. Basic settings .....	39
7.1.1. Operating mode .....	39
7.1.2. Time schedule program (heating circuits 1, 2 and 3, DHW, 5) .....	40
7.1.3. Vacation (heating circuits 1, 2 and 3) .....	40
7.1.4. Setpoint values .....	41
7.1.5. Heating curve .....	41
7.1.6. Flow temperature setpoint .....	43
7.1.7. Flow temperature setpoint for room thermostat .....	43
7.1.8. Heat request delay .....	43
7.2. Optimisation .....	43
7.2.1. ECO functions .....	43
7.2.2. Influence of ambient temperature .....	45
7.2.3. Limitation of ambient temperature .....	46
7.2.4. Accelerated heating .....	46
7.2.5. Accelerated lowering of heating .....	46
7.2.6. Optimisation on startup and stop .....	47
7.2.7. Increase of reduced setpoint .....	47
7.2.8. Protection pump circuit overheat .....	48
7.2.9. Evacuation of surplus heat .....	48
7.2.10. Storage tank / primary regulator .....	48
7.2.11. Temperature level switchover .....	49
7.2.12. Operating mode changeover .....	49
7.3. Control of actuators .....	49
7.3.1. Uninterrupted operation of pumps .....	49
7.3.2. Control by mixing valve .....	50
7.3.3. Speed-controlled pump .....	50
7.4. Controlled slab drying .....	51
<b>8. « DOMESTIC HOT WATER » PARAMETERS .....</b>	<b>54</b>
8.1. Basic settings .....	54
8.1.1. Setpoint value .....	54
8.1.2. Release .....	55
8.1.3. Priority .....	55
8.2. Anti-legionella function .....	56
8.3. Loop pump Q4 .....	58
8.4. Mode switching .....	58
<b>9. "CONSUMER CIRCUITS" PARAMETERS .....</b>	<b>59</b>
9.1. Outlet setpoint .....	59
9.2. Override signal / blocking signal .....	59
9.3. Storage tank / primary regulator .....	59
<b>10. "POOL" PARAMETERS .....</b>	<b>60</b>
10.1. Heating setpoint .....	60
10.2. Load priority .....	60
10.3. Solar integration .....	60

<b>11. « BOILER » PARAMETERS.....</b>	<b>61</b>
11.1. Operating mode .....	61
11.2. Operating limits .....	61
11.2.1. Min. and max. setpoints.....	61
11.2.2. Manual mode .....	62
11.2.3. Frost protection setpoint .....	62
11.2.4. Minimum return setpoint .....	62
11.3. Optimisation .....	63
11.3.1. Burner control .....	63
11.3.2. Timing of pumps .....	63
11.4. Regulation of heating and DHW.....	64
11.4.1. Fan.....	64
11.3.3. Burner startup time delay.....	64
11.3.4. Boiler power.....	64
11.4.2. Differentials.....	65
<b>12. « CASCADE » PARAMETERS.....</b>	<b>66</b>
12.1. Operating mode .....	68
12.2. Regulation .....	68
12.3. Boiler sequence .....	69
12.4. Return temperature min. limitation.....	70
<b>13. "DHW TANK" PARAMETERS.....</b>	<b>71</b>
13.1. Load regulation .....	71
13.2. Protection against overheating.....	72
13.3. DHW tank frost protection .....	72
13.4. Adiabatic cooling .....	72
13.5. Electrical immersion heater.....	72
13.6. Evacuation of surplus heat.....	73
13.7. Installation hydraulic system .....	73
13.8. Speed-controlled pump .....	73
<b>14. « CONFIGURATION » PARAMETERS.....</b>	<b>74</b>
14.1. Hydraulic configuration .....	75
14.1.1. Presetting.....	75
14.1.2. Heating and cooling circuits.....	75
14.1.3. DHW tank .....	75
14.1.4. Separation .....	77
14.1.5. Boiler.....	78
14.1.6. Solar .....	79
14.1.7. Storage tank .....	79
14.2. Configuration of boiler controller inputs / outputs.....	79
14.2.1. Output, relay QX .....	79
14.2.2. Sensor input BX.....	80
14.2.3. Inputs H1 / H5.....	81
14.3. Extension module configuration .....	83
14.3.1. Extension module EX 1 / 2 / 3 .....	84
14.3.2. Extension module QX 1 / 2 / 3 .....	84
14.3.3. Extension module BX .....	85
14.3.4. Extension module H2 1 / 2 / 3.....	85

14.4. System configuration.....	86
14.4.1. Type of sensor / corrections.....	86
14.4.2. Building and ambient temperature model.....	86
14.4.3. Setpoint control.....	86
14.4.4. Frost protection.....	87
14.4.5. Pump / valve degumming .....	87
14.4.6. Register sensor.....	87
14.5. Information .....	88
14.5.1. Installation diagram.....	88
14.5.2. Characteristics of device.....	89
<b>15. "LPB SYSTEM" PARAMETERS .....</b>	<b>90</b>
15.1. LPB address.....	90
15.2. Bus supply function .....	90
15.3. Bus power supply status .....	90
15.4. Centralised functions.....	91
15.5. Clock .....	94
15.6. Outdoor temperature.....	95
<b>16. "ERROR" PARAMETERS .....</b>	<b>96</b>
16.1. Information message.....	96
16.2. Reset.....	96
16.3. Fault indication function .....	96
16.4. History .....	97
<b>17. "MAINTENANCE / SPECIAL MODE" PARAMETERS .....</b>	<b>98</b>
17.1. Maintenance function.....	98
17.2. Cleaning.....	99
17.3. Maintenance function.....	99
17.4. Service .....	101
<b>18. "INPUT / OUTPUT TEST" PARAMETERS .....</b>	<b>102</b>
18.1. Relay output test .....	102
18.2. Sensor inputs test. ....	103
18.3. Test of inputs H1 / H2 / H3 / H4 / H5 / H6 / H7.....	103
18.4. Test of EX inputs (extension module).....	104
<b>19. "STATE" PARAMETERS.....</b>	<b>105</b>
<b>20. "DIAGNOSTICS" PARAMETERS .....</b>	<b>111</b>
20.1. Cascade diagnostic.....	111
20.2. Generator diagnostic.....	111
20.3. Consumer diagnostic .....	112
<b>21. "SAFETY UNIT" PARAMETERS.....</b>	<b>114</b>
21.1. Operation .....	114
21.2. Chimney drying function.....	114

## 1. WARNINGS AND RECOMMENDATIONS

---

### 1.1. Symbols used in this document

---



**INFORMATION:** This symbol refers to information.



**CAUTION:** Failure to observe these guidelines may result in damage to the installation or other systems.



**DANGER:** Failure to observe these guidelines can result in electrocution.

### 1.2. Qualification of personnel for installation and maintenance

---

Installation and maintenance of the unit must only be performed by qualified professional technicians in compliance with the applicable regulations and practices, in particular the applicable national and local standards relative to low voltage electrical installations.

### 1.3. Safety guidelines

---

Always shut down the boiler and close the main gas supply before performing any work on the boiler controller.

## 2. ELECTRICAL CONNECTION

**DANGER:**

Before any intervention, make sure the main electrical power supply is switched off.

**CAUTION:**

The ground conductor must be longer than the phase and neutral conductors.

**CAUTION:**

Observe the phase polarity - neutral for electrical connections.

### 2.1. Characteristics of electrical power supply

Electrical connections will only be made after other assembly operations (fixing, assembling,..) on the boiler will have been performed

The electrical installation must observe the CE standards relative to electrical connections and, in particular, the grounding connection.

This unit is designed to operate with a nominal voltage of 230 V, +10% / -15%, 50 Hz.

### 2.2. Cable cross-section


The cable cross-sections given below are given for information and do not release the installer from checking that they correspond to the needs and satisfy all applicable local and national standards.

If a cable is damaged, it must be replaced by the manufacturer, the manufacturer's after-sales service or any similar qualified person to avoid any danger.


Cable	Terminal strips	Copper conductor cross-section
<b>Power supply</b>	Power supply	3 x 1,5 mm <sup>2</sup>
<b>Power</b>	QX1, QX2, QX3, AUX1, AUX2	3 x 1,5 mm <sup>2</sup>
<b>Signals</b>	BX2, BX3, B3, B9, H1, H5, ambient temperature sensors	2 x 0,5 mm <sup>2</sup>

## 2.3. Electrical connections on terminal strips

### 2.3.1. Power and high power terminal strips

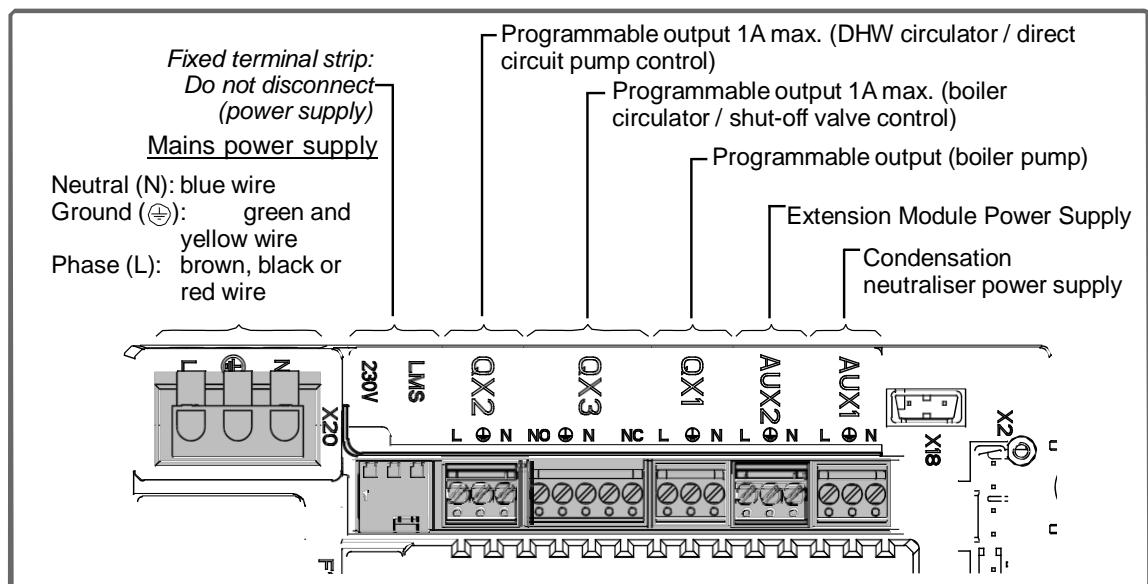


### 2.3.2. Signal terminal strips

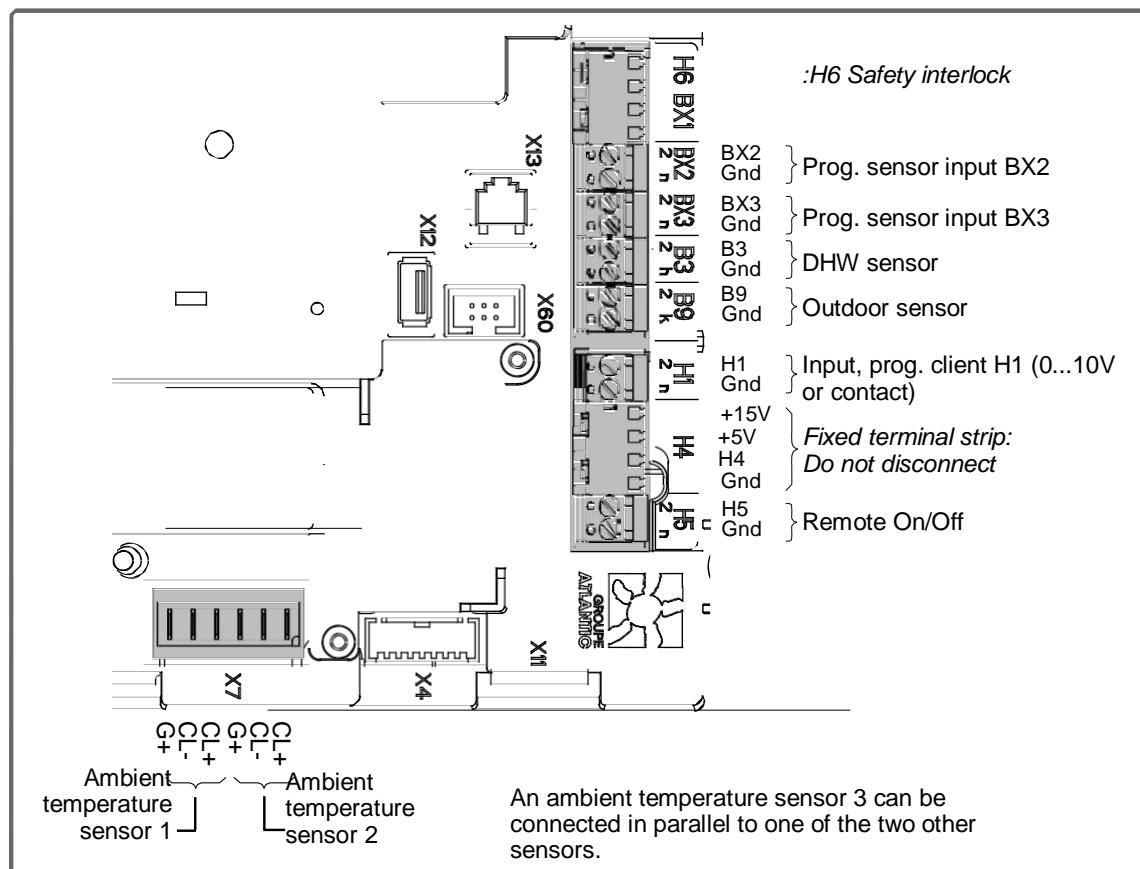

## 2.4. Fuses

The boiler controller is equipped with 4 identical fuses (T 6,3 H 250V - 5x20 ceramic). Each has a specific location and function:

Reference	Function
<b>F1 and F2</b>	Boiler controller protection
<b>F3</b>	Protection of AVS75 / Service power supply
<b>F4</b>	Boiler fan and circulator protection

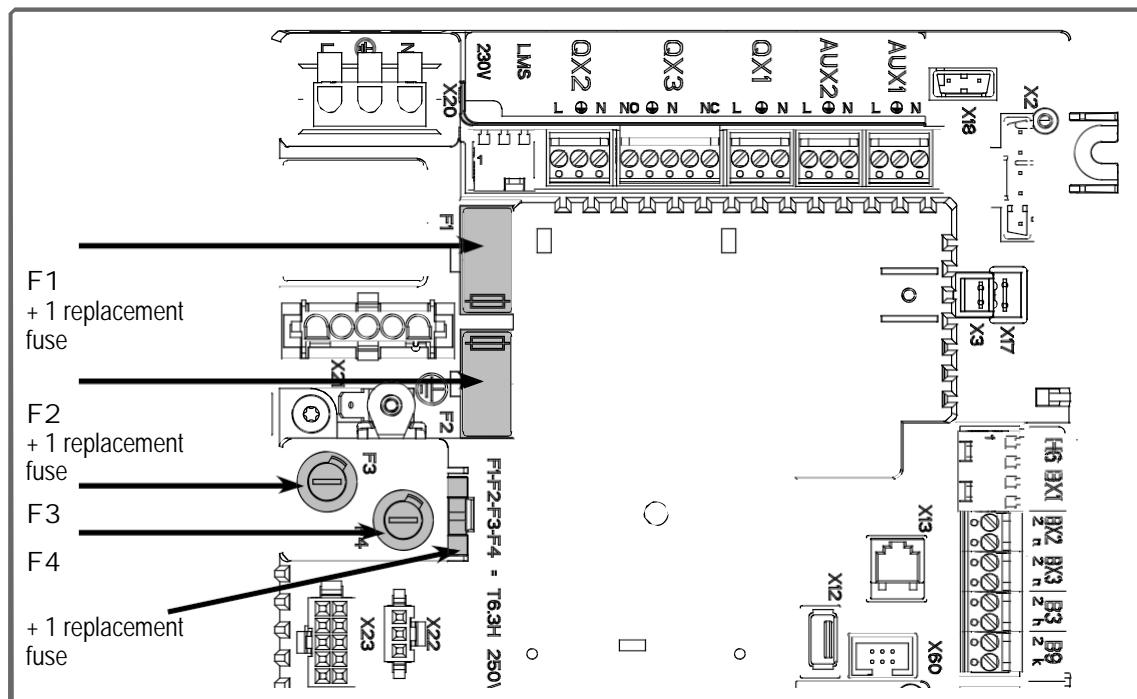

### 3. USER INTERFACE


#### 3.1. Presentation of interface:

- The boiler controller user interface comprises:
- a blue pushbutton (on/off),
- a backlit LCD display,
- 8 function keys,
- A rotary adjustment knob,
- A red LED:

The LED comes on steady when a non-blocking fault is detected (following correction, the LED goes off). The LED flashes when a blocking fault is detected (in this case, the LED goes off after the fault has been corrected and the reset button on the interface has been pressed),

- A green LED:

This LED comes on when the flame is present. All the customer settings and possible parameter definitions are made on this interface. It is also used to look up the information concerning operation of the boiler.

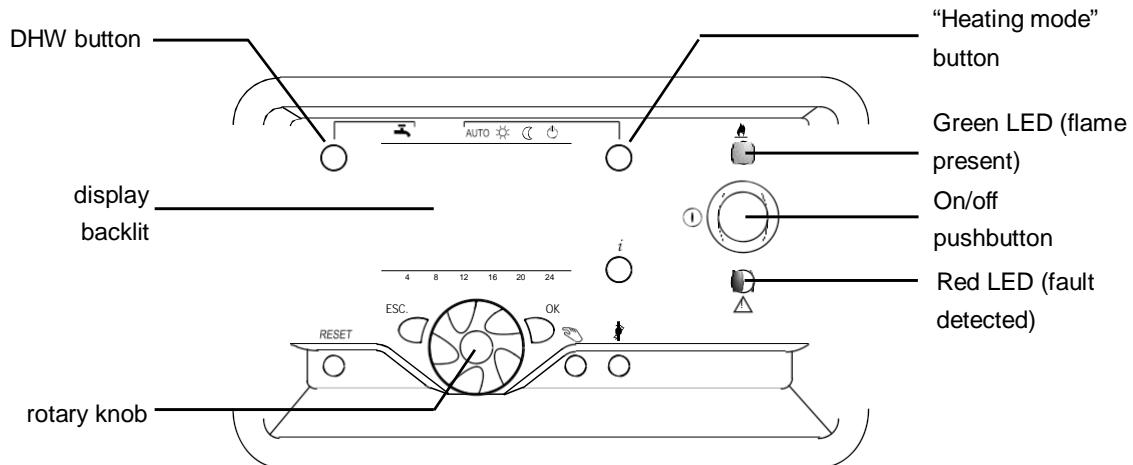


#### 3.2. Display

The screen summarises the state of the boiler: operating mode, time, time schedule, boiler temperature, flame present, possible fault.

##### Pictograms:



	Comfort mode	PROG
	Programming	
	Reduced mode function	ECO ECO
	Frost protection mode	Vacation mode
	Process in progress	1  2 Heating circuit
	Flame present	Maintenance
	Alarm	No. Parameter number
INFO	Information	

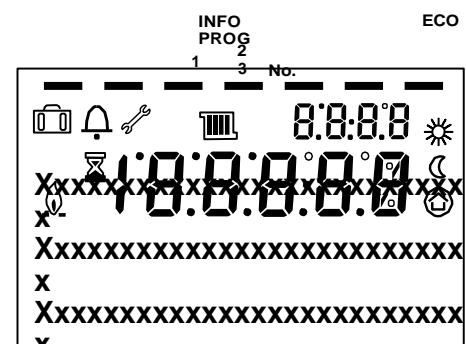

### 3.2.1. Predefined basic display


The basic display depends on the boiler operating mode chosen by the user:

- In constant boiler flow temperature mode, the boiler flow water temperature is displayed.
- In regulation mode as a function of outdoor temperature or as a function of the room temperature or both, the outdoor temperature is displayed.

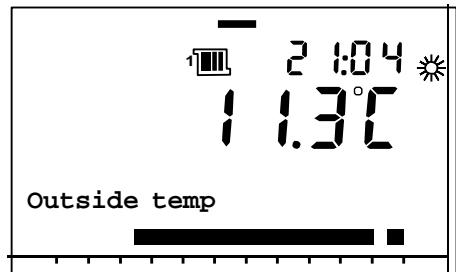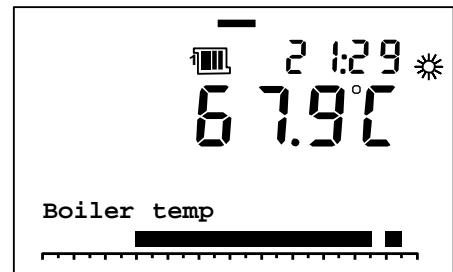

The bottom of the screen is displayed with a scale of 0 to 24 corresponding to the hours of a day.

The comfort setpoint request phases are represented by a black square above the scale. The other parts without square correspond to the reduced setpoint requests.

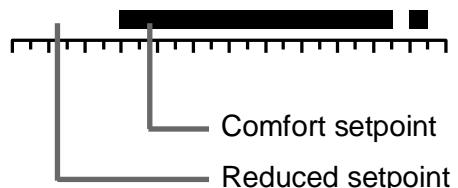


### 3.2.2. Display of a fault

When a non-blocking fault is detected, a small bell is displayed at the top left of the screen. To identify the fault, press the information key. *i*.


This type of fault does not result in a blocking safety lockout requiring manual intervention.

Once the source of the fault has been eliminated, the bell automatically disappears.

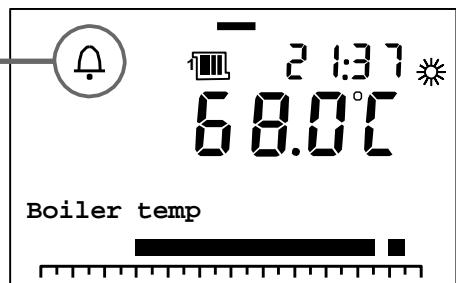

When the fault places the boiler in a safety lockout condition, the fault code and its text are displayed continuously on the screen. Similarly, a small bell appears at the top left of the screen.


To reset the boiler controller, eliminate the source of the fault, then press the reset button.

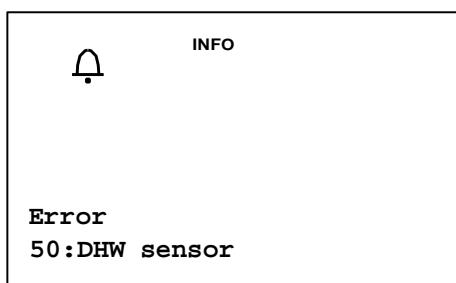

### 3.3. Operating modes

#### 3.3.1. Heating mode


This is used to select the heating mode among the Standby, Comfort, Eco and Auto modes.



**Note:**

Where 2 or 3 independently adjusted heating circuits are used, press once on the heating mode key, then select the concerned circuit using the rotary adjustment knob and validate by OK.

**Standby** No internal heat request is taken into account.



The frost protection function is active. The external heat requests (0-10 V or LPB bus) remain active except with cascade application.


**Comfort** Continuous "comfort" mode. The burner power is adapted to satisfy the heating setpoint.



**Eco** Permanent reduced mode. The burner power is adapted to satisfy the reduced heating setpoint.




**Auto** Depending on the time schedule programmed, the regulator alternates the comfort and eco modes. With a cascade application, engages the boiler in a cascade.



#### 3.2. DHW mode

Activates / Deactivates DHW production.



DHW production activated



DHW production deactivated



### 3.3.3. Manual temperature mode


This mode is used to run the boiler in accordance with a special setpoint temperature.

Sequence of keys to access the function:

Access	Setting	Exit
	 OK  OK	

The boiler regulates its power to achieve the defined setpoint.

While this function is active, an override signal<sup>1</sup> is generated to evacuate the calories.

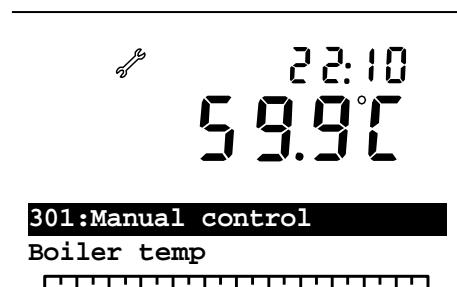

### 3.3.4. Manual power mode

This mode is used to manually define the burner heat release.


Sequence of keys to access the function:

Access	Setting	Exit
  3 seconds	 OK  OK	  3 seconds

The relative power setpoint of<sup>2</sup> the burner is displayed on the screen.

The rotary adjustment knob is used to adjust the value of the setpoint in steps of 1 %.

While this function is active, an override signal<sup>2</sup> is generated to evacuate the calories.

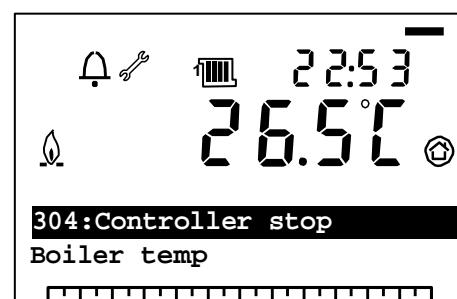

<sup>1</sup> Forcing signal: causes switching on of the pumps, and/or opening of the 3 way valves of the connected heating circuits to remove the heat

<sup>2</sup> Relative power: this is the effective power of the burner, referred to its modulation range.  
0% corresponds to minimum power, 100% corresponds to maximum burner power.

To calculate the burner load ratio (heat input percentage), the following formula is used:

$$\%Q_{cal} = \frac{Power_{relative} \cdot (100 - \%Q_{min})}{100} + \%Q_{min}$$

### 3.3.5. Cleaning mode


This mode is used to run the burner at full load.

Sequence of keys to access the function:

Access	Setting	Exit
	<i>i</i> OK	OK

The burner stops by cutout of the limiter electronic thermostat

While this function is active, an override signal<sup>1</sup> is generated to evacuate the calories.

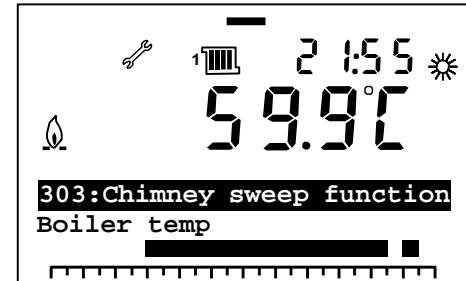

<sup>1</sup> Forcing signal: causes switching on of the pumps, and/or opening of the 3 way valves of the connected heating circuits to remove the heat.


### 3.3.6. Purge mode

This mode is used to facilitate purging the installation water side (example, after the first time the installation is filled with water).

Sequence of keys to access the function:

Access	Exit
3 seconds	automatic at end of purge or  3 seconds

The pumps are switched on and off several times.

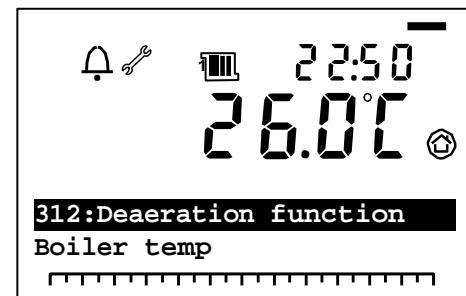

## 3.4. Adjustment of setpoints

### 3.4.1. Heating setpoint adjustment

The comfort temperature setpoint can be adjusted in 2 ways, either directly using the standard screen, or using the programming screen. The other temperature setpoints (reduced and frost protection) can only be adjusted using the programming screen.

1) Adjustment using standard screen:

Access	Setting	
OK	 OK choice of heating circuit	 OK adjustment of setpoint value

2) Adjustment using programming screen:

Access	Setting		
OK	 OK choice of heating circuit	 OK choice of setpoint to adjust	 OK adjustment of setpoint value

### 3.4.2. Adjustment of DHW setpoint

The DHW temperature setpoint can be adjusted using the programming screen between 40°C and 65°C.

Access	Setting	
OK	 OK Choice of Domestic Hot Water header	 OK adjustment of setpoint value



CAUTION:

The DHW setpoint must be defined in accordance with the applicable regulation to prevent any hazard with respect to legionella.

## 3.5. Boiler states

On the basic display, you can scroll basic information concerning the boiler (see list below).

1	Boiler temperature, heating circuit 1
2	Boiler temperature, heating circuit 2
3	Boiler temperature, heating circuit 3
4	Outdoor temperature
5	Min. outdoor temperature
6	Max. outdoor temperature
7	DHW temperature
8	State of heating circuit 1
9	State of heating circuit 2
10	State of heating circuit 3
11	DHW state
12	Heater status
13	Date
14	Customer service tel.

Access	Setting	Exit
<i>i</i>	 OK	ESC

## 3.6. Parameter configurations

Depending on the functions controlled, the access level to the settings is different. There are 3 access levels:

- U: End user,
- M: Commissioning (acceptance, startup),
- S: Specialist (technical level)


### 3.6.1. “End user” parameter configurations

The “end user” configuration mode is accessed on the standard display by pressing the OK key.

The « PROG » pictogram and the first 2 headers are displayed on the screen.

The rotary adjustment button is used to scroll the list of parameters. Once you have reached the parameter to be modified, press OK. The parameter value flashes. Adjust the value using the rotary knob.

The new value is validated by pressing OK

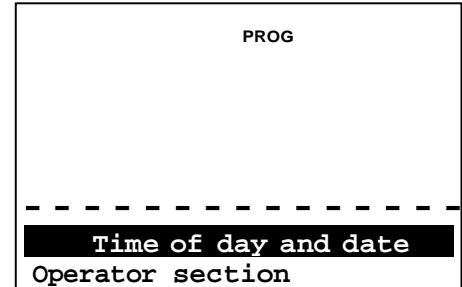

### 3.6.2. “Configuration” and “specialist” parameter configurations

The “Commissioning” and “Specialist” parameter configurations are accessed on the standard display by pressing the OK key, then on the information key for 5 seconds. *i*.

Use the rotary adjustment knob to reach the desired level: *Commissioning* or *Specialist*, then validate your selection by OK.

The Commissioning access level integrates the End User level . Similarly, the Specialist level integrates the “Commissioning” level.

### 3.6.3. Setting the various parameters

On the main menu, once you have obtained the desired level:

- Turn the control knob to scroll the menu.
- Once the desired menu appears, press OK to validate.
- Turn the control knob to adjust the setting.
- Press OK to validate the setting.

If no setting is performed during 8 minutes, the screen automatically returns to the basic display.

## 4. OPERATING CYCLES

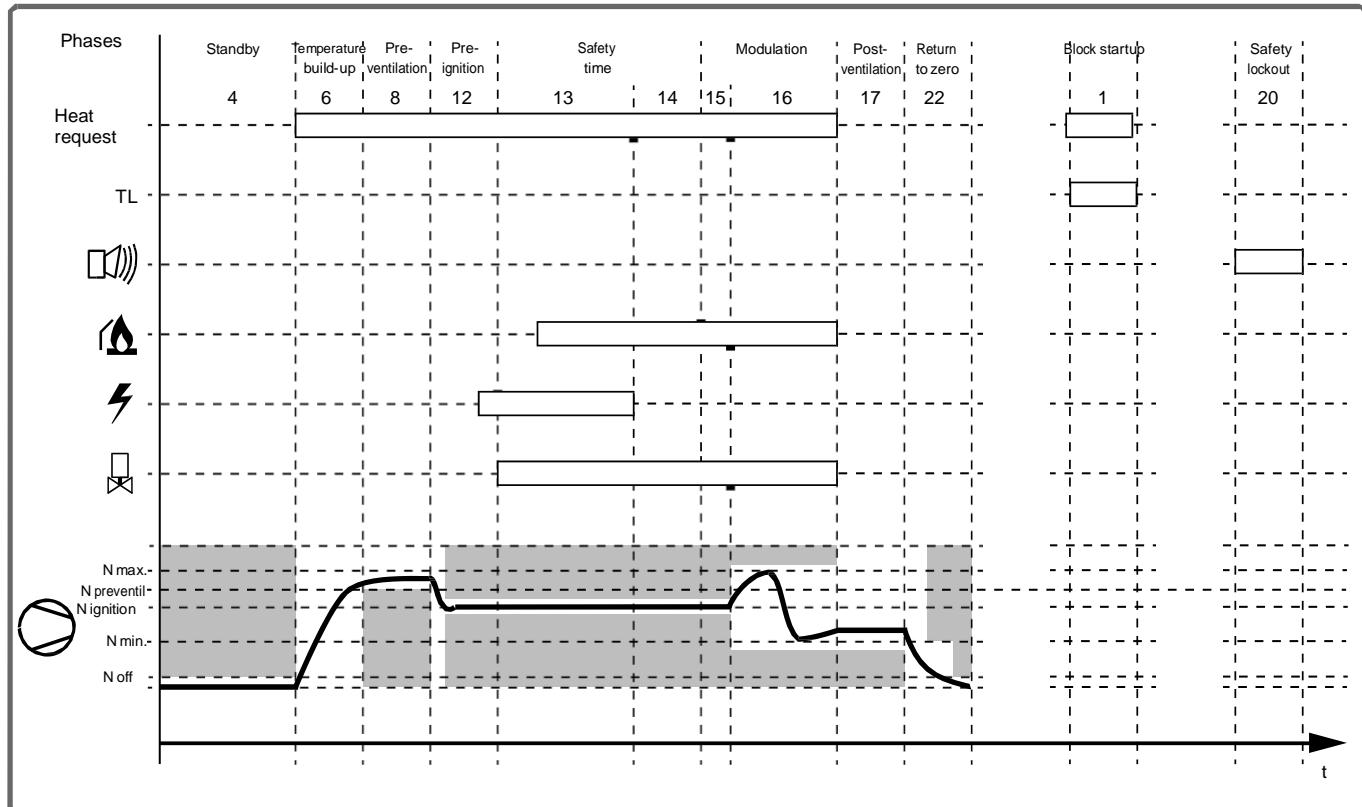


figure 1 - Cycles

### Key:

TL = Limiter thermostat

= Alarm

= Flame detection

= Ignition electrode

= Gas valve

= Fan

N max. = max. authorised speed

N preventil = preventilation speed

N ignition = ignition speed

N min. = min. authorised speed with modulation

N off = speed less than 200 rpm and therefore considered as null

} Fan speed

### Note:

In the event of failure, the boiler controller automatically initiates several startup attempts.

## 5. LIST OF PARAMETERS

**Note:** The “access” column indicates the level of accessibility to information or programming (E for end user, C for commissioning and S for specialist). The Commissioning accessibility level integrates the *End User* level. Similarly, the *Specialist* level integrates the *Commissioning*.

Line No.	Programming	Access	Setting range	See §..., page...
Time of day and date				
1	Hours / minutes	E	00:00 ... 23:59	§ 6.1, page 36
2	Day / month	E	01.01 ... 31.12	§ 6.1, page 36
3	Year	E	1900 ... 2099	§ 6.1, page 36
5	Start of summertime	C	01.01 ... 31.12	§ 6.1, page 36
6	End of summertime	C	01.01 ... 31.12	§ 6.1, page 36
Operator section				
20	Language	E	English   Deutsch   Français   Italiano   Nederlands   Español	§ 6.2, page 36
22	Info	C	Temporarily   Permanently	§ 6.2, page 36
26	Operation lock	C	Off   On	§ 6.2, page 36
27	Programming lock	C	Off   On	§ 6.2, page 36
28	Direct adjustment	C	Automatic storage   Storage with confirmation	§ 6.2, page 36
29	Units	E	°C, bar   °F, PSI	§ 6.2, page 36
42	Assignment device 1	C	Heating circuit 1   Heating circuits 1 and 2   Heating circuits 1 and 3   All heating circuits	§ 6.3, page 37
44	Operation HC2	C	Jointly with HC1   Independently	§ 6.3, page 37
46	Operation HC3/P	C	Jointly with HC1   Independently	§ 6.3, page 37
70	Software version	C		§ 6.4, page 38
Time prog heating circuit 1				
500	Preselection	E	Mo-Su   Mo-Fr   Sa-Su   Mo...Su	§ 7.1.2, page 40
501	First period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
502	First period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
503	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
504	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
505	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
506	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
516	Default values	E	No   Yes	§ 7.1.2, page 40
Time prog heating circuit 2				
520	Preselection	E	Mo-Su   Mo-Fr   Sa-Su   Mo...Su	§ 7.1.2, page 40
521	First period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
522	First period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
523	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
524	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
525	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
526	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
536	Default values	E	No   Yes	§ 7.1.2, page 40
Time prog heating circuit 3				
540	Preselection	E	Mo-Su   Mo-Fr   Sa-Su   Mo...Su	§ 7.1.2, page 40
541	First period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
542	First period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
543	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40

Line No.	Programming	Access	Setting range	See §..., page...
544	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
545	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
546	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
556	Default values	E	No   Yes	§ 7.1.2, page 40
Time program 4 / DHW				
560	Preselection	E	Mo-Su   Mo-Fr   Sa-Su   Mo...Su	§ 7.1.2, page 40
561	First period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
562	First period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
563	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
564	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
565	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
566	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
576	Default values	E	No   Yes	§ 7.1.2, page 40
Time program 5				
600	Preselection	E	Mo-Su   Mo-Fr   Sa-Su   Mo...Su	§ 7.1.2, page 40
601	First period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
602	First period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
603	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
604	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
605	Second period start time	E	00:00 ... 24:00	§ 7.1.2, page 40
606	Second period stop time	E	00:00 ... 24:00	§ 7.1.2, page 40
616	Default values	E	No   Yes	§ 7.1.2, page 40
Holidays heating circuit 1				
641	Preselection	E	Period 1   ...   Period 8	§ 7.1.3, page 40
642	Begin (dd.mm)	E	01.01 ... 31.12	§ 7.1.3, page 40
643	End (dd.mm)	E	01.01 ... 31.12	§ 7.1.3, page 40
648	Operating level	E	Frost protection   Reduced	§ 7.1.3, page 40
Holidays heating circuit 2				
651	Preselection	E	Period 1   ...   Period 8	§ 7.1.3, page 40
652	Begin (dd.mm)	E	01.01 ... 31.12	§ 7.1.3, page 40
653	End (dd.mm)	E	01.01 ... 31.12	§ 7.1.3, page 40
658	Operating level	E	Frost protection   Reduced	§ 7.1.3, page 40
Holidays heating circuit 3				
661	Preselection	E	Period 1   ...   Period 8	§ 7.1.3, page 40
662	Begin (dd.mm)	E	01.01 ... 31.12	§ 7.1.3, page 40
663	End (dd.mm)	E	01.01 ... 31.12	§ 7.1.3, page 40
668	Operating level	E	Frost protection   Reduced	§ 7.1.3, page 40
Heating circuit 1				
710	Comfort setpoint	E	4 ... 35 °C	§ 7.1.4, page 41
712	Reduced setpoint	E	4 ... 35 °C	§ 7.1.4, page 41
714	Frost protection setpoint	E	4 ... 35 °C	§ 7.1.4, page 41
716	Comfort setpoint max	S	4 ... 35 °C	§ 7.1.4, page 41
720	Heating curve slope	E	0.10 ... 4.00	§ 7.1.5, page 41
721	Heating curve displacement	S	-4,5 ... 4,5 °C	§ 7.1.5, page 41
726	Heating curve adaptation	S	Off   On	§ 7.1.5, page 41
730	Summer/winter heating limit	E	8 ... 30 °C	§ 7.2.1, page 43
732	24-hour heating limit	S	-10 ... 10 °C	§ 7.2.1, page 43
740	Flow temp setpoint min	C	8 ... 95 °C	§ 7.1.6, page 43

Line No.	Programming	Access	Setting range	See §..., page...
741	Flow temp setpoint max	C	8 ... 95 °C	§ 7.1.6, page 43
742	Flow temp setpoint room stat	S	8 ... 95 °C	§ 7.1.7, page 43
746	Delay heat request	C	0 ... 600 s	§ 7.1.8, page 43
750	Room influence	S	1 ... 100 %	§ 7.2.2, page 45
760	Room temp limitation	S	0,5 ... 4 °C	§ 7.2.3, page 46
770	Boost heating	S	0 ... 20 °C	§ 7.2.4, page 46
780	Quick setback	S	Off   Down to reduced setpoint   Down to frost prot setpoint	§ 7.2.5, page 46
790	Optimum start control max	S	00:00 ... 06:00	§ 7.2.6, page 47
791	Optimum stop control max	S	00:00 ... 06:00	§ 7.2.6, page 47
800	Reduced setp increase start	S	-30 ... 10 °C	§ 7.2.7, page 47
801	Reduced setp increase end	S	-30 ... 10 °C	§ 7.2.7, page 47
809	Continuous pump operation	S	No   Yes	§ 7.3.1, page 49
820	Overtemp prot pump circuit	S	Off   On	§ 7.2.8, page 48
830	Mixing valve boost	S	0 ... 50 °C	§ 7.3.2, page 50
832	Actuator type	S	2-position   3-position	§ 7.3.2, page 50
833	TOR Switching differential	S	0 ... 20 °C	§ 7.3.2, page 50
834	Actuator running time	S	30 ... 873 s	§ 7.3.2, page 50
850	Floor curing function	C	Off   Functional heating   Curing heating   Functional/ curing heating   Curing/functional heating   Manually	§ 7.4, page 51
851	Floor curing setp manually	C	0 ... 95 °C	§ 7.4, page 51
855	Floor curing setp current	E	0 ... 95 °C	§ 7.4, page 51
856	Floor curing day current	E	0 ... 32	§ 7.4, page 51
861	Excess heat draw	S	Off   Heating mode   Always	§ 7.2.9, page 48
870	With buffer	S	No   Yes	§ 7.2.10, page 48
872	With prim contr/system pump	S	No   Yes	§ 7.2.10, page 48
880	Pump speed reduction	S	Operating level   Characteristic	§ 7.3.3, page 50
882	Pump speed min	S	0 ... 100 %	§ 7.3.3, page 50
883	Pump speed max	S	0 ... 100 %	§ 7.3.3, page 50
888	Curve readj at 50% speed	S	0 ... 100 %	§ 7.3.3, page 50
889	Filter time const speed ctrl	S	0 ... 20 min	§ 7.3.3, page 50
890	Flow setp readj speed ctrl	S	No   Yes	§ 7.3.3, page 50
898	Operating level changeover	S	Frost protection   Reduced   Comfort	§ 7.2.11, page 49
900	Optg mode changeover	S	None   Protection   Reduced   Comfort   Automatic	§ 7.2.12, page 49
Circuito calefacción 2				
1010	Comfort setpoint	E	4 ... 35 °C	§ 7.1.4, page 41
1012	Reduced setpoint	E	4 ... 35 °C	§ 7.1.4, page 41
1014	Frost protection setpoint	E	4 ... 35 °C	§ 7.1.4, page 41
1016	Comfort setpoint max	S	4 ... 35 °C	§ 7.1.4, page 41
1020	Heating curve slope	E	0.10 ... 4.00	§ 7.1.5, page 41
1021	Heating curve displacement	S	-4,5 ... 4,5 °C	§ 7.1.5, page 41
1026	Heating curve adaptation	S	Off   On	§ 7.1.5, page 41
1030	Summer/winter heating limit	E	8 ... 30 °C	§ 7.2.1, page 43
1032	24-hour heating limit	S	-10 ... 10 °C	§ 7.2.1, page 43
1040	Flow temp setpoint min	C	8 ... 95 °C	§ 7.1.6, page 43
1041	Flow temp setpoint max	C	8 ... 95 °C	§ 7.1.6, page 43
1042	Flow temp setpoint room stat	S	8 ... 95 °C	§ 7.1.7, page 43
1046	Delay heat request	C	0 ... 600 s	§ 7.1.8, page 43
1050	Room influence	S	1 ... 100 %	§ 7.2.2, page 45

Line No.	Programming	Access	Setting range	See §..., page...
1060	Room temp limitation	S	0,5 ... 4 °C	§ 7.2.3, page 46
1070	Boost heating	S	0 ... 20 °C	§ 7.2.4, page 46
1080	Quick setback	S	Off   Down to reduced setpoint   Down to frost prot setpoint	§ 7.2.5, page 46
1090	Optimum start control max	S	00:00 ... 06:00	§ 7.2.6, page 47
1091	Optimum stop control max	S	00:00 ... 06:00	§ 7.2.6, page 47
1100	Reduced setp increase start	S	-30 ... 10 °C	§ 7.2.7, page 47
1101	Reduced setp increase end	S	-30 ... 10 °C	§ 7.2.7, page 47
1109	Continuous pump operation	S	No   Yes	§ 7.3.1, page 49
1120	Overtemp prot pump circuit	S	Off   On	§ 7.2.8, page 48
1130	Mixing valve boost	S	0 ... 50 °C	§ 7.3.2, page 50
1132	Actuator type	S	2-position   3-position	§ 7.3.2, page 50
1133	TOR Switching differential	S	0 ... 20 °C	§ 7.3.2, page 50
1134	Actuator running time	S	30 ... 873 s	§ 7.3.2, page 50
1150	Floor curing function	C	Off   Functional heating   Curing heating   Functional/ curing heating   Curing/functional heating   Manually	§ 7.4, page 51
1151	Floor curing setp manually	C	0 ... 95 °C	§ 7.4, page 51
1155	Floor curing setp current	E	0 ... 95 °C	§ 7.4, page 51
1156	Floor curing day current	E	0 ... 32	§ 7.4, page 51
1161	Excess heat draw	S	Off   Heating mode   Always	§ 7.2.9, page 48
1170	With buffer	S	No   Yes	§ 7.2.10, page 48
1172	With prim contr/system pump	S	No   Yes	§ 7.2.10, page 48
1180	Pump speed reduction	S	Operating level   Characteristic	§ 7.3.3, page 50
1182	Pump speed min	S	0 ... 100 %	§ 7.3.3, page 50
1183	Pump speed max	S	0 ... 100 %	§ 7.3.3, page 50
1188	Curve readj at 50% speed	S	0 ... 100 %	§ 7.3.3, page 50
1189	Filter time const speed ctrl	S	0 ... 20 min	§ 7.3.3, page 50
1190	Flow setp readj speed ctrl	S	No   Yes	§ 7.3.3, page 50
1198	Operating level changeover	S	Frost protection   Reduced   Comfort	§ 7.2.11, page 49
1200	Optg mode changeover	S	None   Protection   Reduced   Comfort   Automatic	§ 7.2.12, page 49
Heating circuit 3				
1310	Comfort setpoint	E	4 ... 35 °C	§ 7.1.4, page 41
1312	Reduced setpoint	E	4 ... 35 °C	§ 7.1.4, page 41
1314	Frost protection setpoint	E	4 ... 35 °C	§ 7.1.4, page 41
1316	Comfort setpoint max	S	4 ... 35 °C	§ 7.1.4, page 41
1320	Heating curve slope	E	0,10 ... 4,00	§ 7.1.5, page 41
1321	Heating curve displacement	S	-4,5 ... 4,5 °C	§ 7.1.5, page 41
1326	Heating curve adaptation	S	Off   On	§ 7.1.5, page 41
1330	Summer/winter heating limit	E	8 ... 30 °C	§ 7.2.1, page 43
1332	24-hour heating limit	S	-10 ... 10 °C	§ 7.2.1, page 43
1340	Flow temp setpoint min	C	8 ... 95 °C	§ 7.1.6, page 43
1341	Flow temp setpoint max	C	8 ... 95 °C	§ 7.1.6, page 43
1342	Flow temp setpoint room stat	S	8 ... 95 °C	§ 7.1.7, page 43
1346	Delay heat request	C	0 ... 600 s	§ 7.1.8, page 43
1350	Room influence	S	1 ... 100 %	§ 7.2.2, page 45
1360	Room temp limitation	S	0,5 ... 4 °C	§ 7.2.3, page 46
1370	Boost heating	S	0 ... 20 °C	§ 7.2.4, page 46
1380	Quick setback	S	Off   Down to reduced setpoint   Down to frost prot setpoint	§ 7.2.5, page 46

Line No.	Programming	Access	Setting range	See §..., page...
1390	Optimum start control max	S	00:00 ... 06:00	§ 7.2.6, page 47
1391	Optimum stop control max	S	00:00 ... 06:00	§ 7.2.6, page 47
1400	Reduced setp increase start	S	-30 ... 10 °C	§ 7.2.7, page 47
1401	Reduced setp increase end	S	-30 ... 10 °C	§ 7.2.7, page 47
1409	Continuous pump operation	S	No   Yes	§ 7.3.1, page 49
1420	Overtemp prot pump circuit	S	Off   On	§ 7.2.8, page 48
1430	Mixing valve boost	S	0 ... 50 °C	§ 7.3.2, page 50
1432	Actuator type	S	2-position   3-position	§ 7.3.2, page 50
1433	TOR Switching differential	S	0 ... 20 °C	§ 7.3.2, page 50
1434	Actuator running time	S	30 ... 873 s	§ 7.3.2, page 50
1450	Floor curing function	C	Off   Functional heating   Curing heating   Functional/ curing heating   Curing/functional heating   Manually	§ 7.4, page 51
1451	Floor curing setp manually	C	0 ... 95 °C	§ 7.4, page 51
1455	Floor curing setp current	E	0 ... 95 °C	§ 7.4, page 51
1456	Floor curing day current	E	0 ... 32	§ 7.4, page 51
1461	Excess heat draw	S	Off   Heating mode   Always	§ 7.2.9, page 48
1470	With buffer	S	No   Yes	§ 7.2.10, page 48
1472	With prim contr/system pump	S	No   Yes	§ 7.2.10, page 48
1480	Pump speed reduction	S	Operating level   Characteristic	§ 7.3.3, page 50
1482	Pump speed min	S	0 ... 100 %	§ 7.3.3, page 50
1483	Pump speed max	S	0 ... 100 %	§ 7.3.3, page 50
1488	Curve readj at 50% speed	S	0 ... 100 %	§ 7.3.3, page 50
1489	Filter time const speed ctrl	S	0 ... 20 min	§ 7.3.3, page 50
1490	Flow setp readj speed ctrl	S	No   Yes	§ 7.3.3, page 50
1498	Operating level changeover	S	Frost protection   Reduced   Comfort	§ 7.2.11, page 49
1500	Optg mode changeover	S	None   Protection   Reduced   Comfort   Automatic	§ 7.2.12, page 49
<b>Domestic hot water</b>				
1610	Nominal setpoint	E	8 ... 80 °C	§ 8.1.1, page 54
1612	Reduced setpoint	S	8 ... 80 °C	§ 8.1.1, page 54
1614	Nominal setpoint max	S	8 ... 80 °C	§ 8.1.1, page 54
1620	Release	C	24h/day   Time programs HCs   Time program 4/DHW	§ 8.1.2, page 55
1630	Charging priority	C	Absolute   Shifting   None   MC shifting, PC absolute	§ 8.1.3, page 55
1640	Legionella function	S	Off   Périodically   Fixed weekday	§ 8.2, page 56
1641	Legionella funct periodically	S	1 ... 7	§ 8.2, page 56
1642	Legionella funct weekday	S	Monday   Tuesday   Wednesday   Thursday   Friday   Saturday   Sunday	§ 8.2, page 56
1644	Legionella funct time	S	00:00 ... 23:50 h:m	§ 8.2, page 56
1645	Legionella funct setpoint	S	55 ... 95°C	§ 8.2, page 56
1646	Legionella funct duration	S	10 ... 360 min	§ 8.2, page 56
1647	Legionella funct circ pump	S	Off   On	§ 8.2, page 56
1660	Circulating pump release	S	Time program 3 / HCP   DHW release   Time program 4 / DHW   Time program 5	§ 8.3, page 58
1661	Circulating pump cycling	S	Off   On	§ 8.3, page 58
1663	Circulation setpoint	S	8 ... 80 °C	§ 8.3, page 58
1680	Optg mode changeover	S	None   Off   On	§ 8.4, page 58
<b>Consumer circuit 1</b>				
1859	Flow temp setp cons request	C	8 ... 120 °C	§ 9.1, page 59
1875	Excess heat draw	S	Off   On	§ 9.2, page 59
1878	With buffer	S	No   Yes	§ 9.3, page 59

Line No.	Programming	Access	Setting range	See §..., page...
1880	With prim contr/system pump	S	No   Yes	§ 9.3, page 59
Consumer circuit 2				
1909	Flow temp setp cons request	C	8 ... 120 °C	§ 9.1, page 59
1925	Excess heat draw	S	Off   On	§ 9.2, page 59
1928	With buffer	S	No   Yes	§ 9.3, page 59
1930	With prim contr/system pump	S	No   Yes	§ 9.3, page 59
Consumer circuit 3				
1959	Flow temp setp cons request	C	8 ... 120 °C	§ 9.1, page 59
1975	Excess heat draw	S	Off   On	§ 9.2, page 59
1978	With buffer	S	No   Yes	§ 9.3, page 59
1980	With prim contr/system pump	S	No   Yes	§ 9.3, page 59
Swimming pool				
2055	Setpoint solar heating	S	8 ... 80 °C	§ 10.1, page 60
2056	Setpoint source heating	S	8 ... 80 °C	§ 10.1, page 60
2065	Charging priority solar	S	Priority 1 ... Priority 3	§ 10.2, page 60
2080	With solar integration	S	No   Yes	§ 10.3, page 60
Boiler				
2203	Release below outside temp	S	-50 ... 50 °C	§ 11.1, page 61
2208	Full charging buffer	S	Off   On	§ 11.1, page 61
2210	Setpoint min	S	8 ... 95 °C	§ 11.2.1, page 61
2212	Setpoint max	S	See boiler manual	§ 11.2.1, page 61
2214	Setpoint manual control	E	(setpoint min) ... (setpoint max)	§ 11.2.2, page 62
2217	Setpoint frost protection	S	-20 ... 20 °C	§ 11.2.3, page 62
2243	Burner off time min	S	0 ... 20 min	§ 11.3.1, page 63
2245	SD burner off time	S	0 ... 80 °C	§ 11.3.1, page 63
2250	Pump overrun time	S	0 ... 240 min	§ 11.3.2, page 63
2253	Pump overr time after DHW	S	0 ... 20 min	§ 11.3.2, page 63
2270	Return setpoint min	S	See boiler manual	§ 11.2.4, page 62
2330	Output nominal	S	0 ... 2000 kW	§ 11.3.4, page 64
2331	Output basic stage	S	0 ... 2000 kW	§ 11.3.4, page 64
2441	Fan speed heating max	S	0 ... 10000 tr/min	§ 11.4.1, page <?>
2442	Fan speed full charging max	S	0 ... 10000 tr/min	§ 11.4.1, page <?>
2444	Fan speed DHW max	S	0 ... 10000 tr/min	§ 11.4.1, page <?>
2454	Switching diff on HCs	S	0 ... 20 °C	§ 11.4.2, page 65
2455	Switching diff off min HCs	S	0 ... 20 °C	§ 11.4.2, page 65
2456	Switching diff off max HCs	S	0 ... 20 °C	§ 11.4.2, page 65
2457	Settling time HCs	S	0 ... 240 min	§ 11.4.2, page 65
2460	Switching diff on DHW	S	0 ... 20 °C	§ 11.4.2, page 65
2461	Switching diff off min DHW	S	0 ... 20 °C	§ 11.4.2, page 65
2462	Switching diff off max DHW	S	0 ... 20 °C	§ 11.4.2, page 65
2463	Settling time DHW	S	0 ... 240 min	§ 11.4.2, page 65
2470	Delay heat req special op	C	0 ... 600 s	§ 11.3.3, page 64
Cascade				
3510	Lead strategy	S	Late on, early off  Late on, late off   Early on, late off	§ 12.1, page 68
3511	Output band min	S	0 ... 100 %	§ 12.1, page 68
3512	Output band max	S	0 ... 100 %	§ 12.1, page 68
3530	Release integral source seq	S	0 ... 500 °Cmin	§ 12.2, page 68
3531	Reset integral source seq	S	0 ... 500 °Cmin	§ 12.2, page 68
3532	Restart lock	S	0 ... 1800 s	§ 12.2, page 68

Line No.	Programming	Access	Setting range	See §..., page...
3533	Switch on delay	S	0 ... 120 min	§ 12.2, page 68
3534	Forced time basic stage	S	0 ... 1200 s	§ 12.2, page 68
3540	Auto source seq ch'over	S	10 ... 990 h	§ 12.3, page 69
3541	Auto source seq exclusion	S	none   first   last   first and last	§ 12.3, page 69
3544	Leading source	S	source 1   ...   source 16	§ 12.3, page 69
3560	Return setpoint min	S	8 ... 95 °C	§ 12.4, page 70
3562	Return influence consumers	S	Off   On	§ 12.4, page 70
DHW storage tank				
5020	Flow setpoint boost	S	0 ... 30 °C	§ 13.1, page 71
5021	Transfer boost	S	0 ... 30 °C	§ 13.1, page 71
5022	Type of charging	S	Recharging   Full charging   Full charging legio   Full charg 1st time day   Full charg 1st time legio	§ 13.1, page 71
5050	Charging temp max	S	8 ... 95 °C	§ 13.2, page 72
5055	Recooling temp	S	8 ... 95 °C	§ 13.4, page 72
5056	Recooling heat gen/HCs	S	Off   On	§ 13.4, page 72
5057	Recooling collector	S	Off   Summer   Always	§ 13.4, page 72
5060	El imm heater optg mode	S	Substitute   Summer   Always	§ 13.5, page 72
5061	El immersion heater release	S	24h/day   DHW release   Time program 4/DHW	§ 13.5, page 72
5062	El immersion heater control	S	External thermostat   DHW sensor	§ 13.5, page 72
5085	Excess heat draw	S	Off   On	§ 13.6, page 73
5090	With buffer	S	No   Yes	§ 13.7, page 73
5092	With prim contr/system pump	S	No   Yes	§ 13.7, page 73
5093	With solar integration	S	No   Yes	§ 13.7, page 73
5101	Pump speed min	S	0 ... 100 %	§ 13.8, page 73
5102	Pump speed max	S	0 ... 100 %	§ 13.8, page 73
Configuración				
5700	Presetting	C	1 ... 4	§ 14.1.1, page 75
5710	Heating circuit 1	C	Off   On	§ 14.1.2, page 75
5711	Cooling circuit 1	C	Off   4-pipe system cooling	§ 14.1.2, page 75
5715	Heating circuit 2	C	Off   On	§ 14.1.2, page 75
5721	Heating circuit 3	C	Off   On	§ 14.1.2, page 75
5730	DHW sensor	C	DHW sensor B3   Thermostat   DHW outlet sensor B38	§ 14.1.3, page 75
5731	DHW controlling element	C	No charging request   Charging pump   Diverting valve	§ 14.1.3, page 75
5732	Pump off change div valve	C	0 ... 10 s	§ 14.1.3, page 75
5733	Delay pump off	C	0 ... 10 s	§ 14.1.3, page 75
5734	Basic position DHW div valve	S	Last request   Heating circuit   DHW	§ 14.1.3, page 75
5736	DHW separate circuit	C	Off   On	§ 14.1.4, page 77
5737	Optg action DHW div valve	S	Position on DHW   Position on heating circuit	§ 14.1.4, page 77
5738	Midposition DHW div valve	S	Off   On	§ 14.1.4, page 77
5774	Ctrl boiler pump/DHW valve	C	All requests   Request HC1/DHW only	§ 14.1.5, page 78
5840	Solar controlling element	C	Charging pump   Diverting valve	§ 14.1.6, page 79
5841	External solar exchanger	C	Jointly   DHW storage tank   Buffer storage tank	§ 14.1.6, page 79
5870	Combi storage tank	C	No   Yes	§ 14.1.7, page 79
5890	Relay output QX1	C	None   Cons circuit pump VK1 Q15   Boiler pump Q1   Alarm output K10   Heat circuit pump HC3 Q20   Cons circuit pump VK2 Q18   Cascade pump Q25   Heat circuit pump HC1 Q2   Heat circuit pump HC2 Q6   DHW ctrl elem Q3   Status information K36	§ 14.2.1, page 79
5891	Relay output QX2	C	Ditto line 5890	§ 14.2.1, page 79

Line No.	Programming	Access	Setting range	See §..., page...
5892	Relay output QX3	C	Ditto line 5890	§ 14.2.1, page 79
5931	Sensor input BX2	C	None   Common flow sensor B10   Cascade return sensor B70	§ 14.2.2, page 80
5932	Sensor input BX3	C	Ditto line 5931	§ 14.2.2, page 80
5950	Function input H1	C	None   Optg mode change HCs+DHW   Optg mode changeover HCs   Optg mode changeover HC1   Optg mode changeover HC2   Optg mode changeover HC3   Heat generation lock   Error/ alarm message   Consumer request VK1   Consumer request VK2   Excess heat discharge   Consumer request VK1 10V   Consumer request VK2 10V   Pressure measurement 10V	§ 14.2.3, page 81
5951	Contact type H1	C	NC   NO	§ 14.2.3, page 81
5953	Voltage value 1 H1 (U1)	C	0 ... 10 V	§ 14.2.3, page 81
5954	Function value 1 H1 (F1)	C	-1000 ... 5000	§ 14.2.3, page 81
5955	Voltage value 2 H1 (U2)	C	0 ... 10 V	§ 14.2.3, page 81
5956	Function value 2 H1 (F2)	C	-1000 ... 5000	§ 14.2.3, page 81
5977	Function input H5	C	Ditto line 5950	§ 14.2.3, page 81
5978	Contact type H5	C	Ditto line 5951	§ 14.2.3, page 81
6020	Function extension module 1	C	None   Multifunctional   Heat circuit 1   Heat circuit 2   Heat circuit 3   Return temp controller   Primary contr/ system pump	§ 14.3, page 83
6021	Function extension module 2	C	Ditto line 6020	§ 14.3, page 83
6022	Function extension module 3	C	Ditto line 6020	§ 14.3, page 83
6024	Funct input EX21 module 1	C	None   Limit thermostat HC	§ 14.3.1, page 84
6026	Funct input EX21 module 2	C	None   Limit thermostat HC	§ 14.3.1, page 84
6028	Funct input EX21 module 3	C	None   Limit thermostat HC	§ 14.3.1, page 84
6030	Relay output QX21 module 1	C	Ditto line 5890	§ 14.3.2, page 84
6031	Relay output QX22 module 1	C	Ditto line 5890	§ 14.3.2, page 84
6032	Relay output QX23 module 1	C	Ditto line 5890	§ 14.3.2, page 84
6033	Relay output QX21 module 2	C	Ditto line 5890	§ 14.3.2, page 84
6034	Relay output QX22 module 2	C	Ditto line 5890	§ 14.3.2, page 84
6035	Relay output QX23 module 2	C	Ditto line 5890	§ 14.3.2, page 84
6036	Relay output QX21 module 3	C	Ditto line 5890	§ 14.3.2, page 84
6037	Relay output QX22 module 3	C	Ditto line 5890	§ 14.3.2, page 84
6038	Relay output QX23 module 3	C	Ditto line 5890	§ 14.3.2, page 84
6040	Sensor input BX21 module 1	C	Ditto line 5931	§ 14.3.3, page 85
6041	Sensor input BX22 module 1	C	Ditto line 5931	§ 14.3.3, page 85
6042	Sensor input BX21 module 2	C	Ditto line 5931	§ 14.3.3, page 85
6043	Sensor input BX22 module 2	C	Ditto line 5931	§ 14.3.3, page 85
6044	Sensor input BX21 module 3	C	Ditto line 5931	§ 14.3.3, page 85
6045	Sensor input BX22 module 3	C	Ditto line 5931	§ 14.3.3, page 85
6046	Function input H2 module 1	C	Ditto line 5950	§ 14.3.4, page 85
6047	Contact type H2 module 1	C	Ditto line 5951	§ 14.3.4, page 85
6049	Voltage value 1 H2 module 1(U1)	C	0 ... 10 V	§ 14.3.4, page 85
6050	Function value 1 H2 module 1 (F1)	C	-1000 ... 5000	§ 14.3.4, page 85
6051	Voltage value 2 H2 module 1 (U2)	C	0 ... 10 V	§ 14.3.4, page 85
6052	Function value 2 H2 module 1 (F2)	C	-1000 ... 5000	§ 14.3.4, page 85
6054	Function input H2 module 2	C	Ditto line 5950	§ 14.3.4, page 85
6055	Contact type H2 module 2	C	Ditto line 5951	§ 14.3.4, page 85
6057	Voltage value 1 H2 module 2(U1)	C	0 ... 10 V	§ 14.3.4, page 85

Line No.	Programming	Access	Setting range	See §..., page...
6058	Function value 1 H2 module 2 (F1)	C	-1000 ... 5000	§ 14.3.4, page 85
6059	Voltage value 2 H2 module 2 (U2)	C	0 ... 10 V	§ 14.3.4, page 85
6060	Function value 2 H2 module 2 (F2)	C	-1000 ... 5000	§ 14.3.4, page 85
6062	Function input H2 module 3	C	Ditto line 5950	§ 14.3.4, page 85
6063	Contact type H2 module 3	C	Ditto line 5951	§ 14.3.4, page 85
6065	Voltage value 1 H2 module 3(U1)	C	0 ... 10 V	§ 14.3.4, page 85
6066	Function value 1 H2 module 3 (F1)	C	-1000 ... 5000	§ 14.3.4, page 85
6067	Voltage value 2 H2 module 3 (U2)	C	0 ... 10 V	§ 14.3.4, page 85
6068	Function value 2 H2 module 3 (F2)	C	-1000 ... 5000	§ 14.3.4, page 85
6097	Sensor type collector	S	NTC   Pt 1000	§ 14.4.1, page 86
6098	Readjustm collector sensor	S	-20 ... 20 °C	§ 14.4.1, page 86
6100	Readjustm outside sensor	S	-3 ... 3 °C	§ 14.4.1, page 86
6110	Time constant building	S	0 ... 50 h	§ 14.4.2, page 86
6116	Const tmpls compens consig.	S	0 ... 14 min	§ 14.4.3, page 86
6117	Compens centr T° consigne	S	1 ... 100 °C	§ 14.4.3, page 86
6120	Frost protection plant	S	Off   On	§ 14.4.4, page 87
6127	Pump/valve kick duration	S	0 ... 51 s	§ 14.4.5, page 87
6200	Save sensors	C	No   Yes	§ 14.4.6, page 87
6205	Reset to default parameter	S	No   Yes	§ 14.4.6, page 87
6212	Check no. heat source 1	C	11 : no pump 12 : with boiler pump 13 : with recycling pump 14 : with boiler and recycling pumps	§ 14.5.1, page 88
6215	Check no. storage tank	C	0 : tank 4 : DHW with pump	§ 14.5.1, page 88
6217	Check no. heating circuits	C	1 ... 30303	§ 14.5.1, page 88
6220	Software version	S		§ 14.5.2, page 89
6230	Info 1 OEM	S	See boiler manual	§ 14.5.1, page 88
6231	Info 2 OEM	S	See boiler manual	§ 14.5.1, page 88
6234	Boiler type	S		§ 14.5.1, page 88
LPB system				
6600	Device address	C	0 ... 16	§ 15.1, page 90
6601	Segment address	S	0 ... 14	§ 15.1, page 90
6604	Bus power supply function	S	Off   Automatically	§ 15.2, page 90
6605	Bus power supply state	S	Off   On	§ 15.3, page 90
6620	Action changeover functions	S	Segment   System	§ 15.4, page 91
6621	Summer changeover	S	Locally   Centrally	§ 15.4, page 91
6623	Optg mode changeover	S	Locally   Centrally	§ 15.4, page 91
6624	Manual source lock	S	Locally   Segment	§ 15.4, page 91
6625	DHW assignment	S	Local HCs   All HCs in segment   All HCs in system	§ 15.4, page 91
6631	Ext source in Eco mode	S	Off   On DHW   On	§ 15.4, page 91
6640	Clock mode	C	Autonomously   Slave without remote setting   Slave with remote setting   Master	§ 15.5, page 94
6650	Outside temp source	S	0 ... 239	§ 15.6, page 95
Fault				
6705	SW diagnostic code	E	0 ... 65535	§ 16.1, page 96
6706	Burn ctrl phase lockout pos	E	0 ... 255	§ 16.1, page 96
6710	Reset alarm relay	C	No   Yes	§ 16.2, page 96

Line No.	Programming	Access	Setting range	See §..., page...
6740	Flow temp 1 alarm	S	10 ... 240 min	§ 16.3, page 96
6741	Flow temp 2 alarm	S	10 ... 240 min	§ 16.3, page 96
6742	Flow temp 3 alarm	S	10 ... 240 min	§ 16.3, page 96
6743	Boiler temp alarm	S	10 ... 240 min	§ 16.3, page 96
6745	DHW charging alarm	S	1 ... 48 h	§ 16.3, page 96
6800	History 1	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6803	Error code 1	S	0 ... 9999	§ 16.4, page 97
6805	SW diagnostic code 1	S	0 ... 9999	§ 16.4, page 97
6806	Burner control phase 1	S	0 ... 255	§ 16.4, page 97
6810	History 2	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6813	Error code 2	S	0 ... 9999	§ 16.4, page 97
6815	SW diagnostic code 2	S	0 ... 9999	§ 16.4, page 97
6816	Burner control phase 2	S	0 ... 255	§ 16.4, page 97
6820	History 3	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6823	Error code 3	S	0 ... 9999	§ 16.4, page 97
6825	SW diagnostic code 3	S	0 ... 9999	§ 16.4, page 97
6826	Burner control phase 3	S	0 ... 255	§ 16.4, page 97
6830	History 4	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6833	Error code 4	S	0 ... 9999	§ 16.4, page 97
6835	SW diagnostic code 4	S	0 ... 9999	§ 16.4, page 97
6836	Burner control phase 4	S	0 ... 255	§ 16.4, page 97
6840	History 5	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6843	Error code 5	S	0 ... 9999	§ 16.4, page 97
6845	SW diagnostic code 5	S	0 ... 9999	§ 16.4, page 97
6846	Burner control phase 5	S	0 ... 255	§ 16.4, page 97
6850	History 6	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6853	Error code 6	S	0 ... 9999	§ 16.4, page 97
6855	SW diagnostic code 6	S	0 ... 9999	§ 16.4, page 97
6856	Burner control phase 6	S	0 ... 255	§ 16.4, page 97
6860	History 7	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6863	Error code 7	S	0 ... 9999	§ 16.4, page 97
6865	SW diagnostic code 7	S	0 ... 9999	§ 16.4, page 97
6866	Burner control phase 7	S	0 ... 255	§ 16.4, page 97
6870	History 8	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6873	Error code 8	S	0 ... 9999	§ 16.4, page 97
6875	SW diagnostic code 8	S	0 ... 9999	§ 16.4, page 97
6876	Burner control phase 8	S	0 ... 255	§ 16.4, page 97
6880	History 9	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6883	Error code 9	S	0 ... 9999	§ 16.4, page 97
6885	SW diagnostic code 9	S	0 ... 9999	§ 16.4, page 97
6886	Burner control phase 9	S	0 ... 255	§ 16.4, page 97
6890	History 10	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6893	Error code 10	S	0 ... 9999	§ 16.4, page 97
6895	SW diagnostic code 10	S	0 ... 9999	§ 16.4, page 97
6896	Burner control phase 10	S	0 ... 255	§ 16.4, page 97
6900	History 11	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6903	Error code 11	S	0 ... 9999	§ 16.4, page 97
6905	SW diagnostic code 11	S	0 ... 9999	§ 16.4, page 97

Line No.	Programming	Access	Setting range	See §..., page...
6906	Burner control phase 11	S	0 ... 255	§ 16.4, page 97
6910	History 12	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6913	Error code 12	S	0 ... 9999	§ 16.4, page 97
6915	SW diagnostic code 12	S	0 ... 9999	§ 16.4, page 97
6916	Burner control phase 12	S	0 ... 255	§ 16.4, page 97
6920	History 13	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6923	Error code 13	S	0 ... 9999	§ 16.4, page 97
6925	SW diagnostic code 13	S	0 ... 9999	§ 16.4, page 97
6926	Burner control phase 13	S	0 ... 255	§ 16.4, page 97
6930	History 14	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6933	Error code 14	S	0 ... 9999	§ 16.4, page 97
6935	SW diagnostic code 14	S	0 ... 9999	§ 16.4, page 97
6936	Burner control phase 14	S	0 ... 255	§ 16.4, page 97
6940	History 15	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6943	Error code 15	S	0 ... 9999	§ 16.4, page 97
6945	SW diagnostic code 15	S	0 ... 9999	§ 16.4, page 97
6946	Burner control phase 15	S	0 ... 255	§ 16.4, page 97
6950	History 16	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6953	Error code 16	S	0 ... 9999	§ 16.4, page 97
6955	SW diagnostic code 16	S	0 ... 9999	§ 16.4, page 97
6956	Burner control phase 16	S	0 ... 255	§ 16.4, page 97
6960	History 17	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6963	Error code 17	S	0 ... 9999	§ 16.4, page 97
6965	SW diagnostic code 17	S	0 ... 9999	§ 16.4, page 97
6966	Burner control phase 17	S	0 ... 255	§ 16.4, page 97
6970	History 18	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6973	Error code 18	S	0 ... 9999	§ 16.4, page 97
6975	SW diagnostic code 8	S	0 ... 9999	§ 16.4, page 97
6976	Burner control phase 18	S	0 ... 255	§ 16.4, page 97
6980	History 19	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6983	Error code 19	S	0 ... 9999	§ 16.4, page 97
6985	SW diagnostic code 19	S	0 ... 9999	§ 16.4, page 97
6986	Burner control phase 19	S	0 ... 255	§ 16.4, page 97
6990	History 20	S	00:00 ... 23:59 h:m	§ 16.4, page 97
6993	Error code 20	S	0 ... 9999	§ 16.4, page 97
6995	SW diagnostic code 20	S	0 ... 9999	§ 16.4, page 97
6996	Burner control phase 20	S	0 ... 255	§ 16.4, page 97
Service/special operation				
7040	Burner hours interval	S	100 ... 10000 h	§ 17.1, page 98
7041	Burn hrs since maintenance	S	0 ... 10000 h	§ 17.1, page 98
7042	Burner start interval	S	100 ... 65500	§ 17.1, page 98
7043	Burn starts since maint	S	0 ... 65535	§ 17.1, page 98
7044	Maintenance interval	S	1 ... 240 months	§ 17.1, page 98
7045	Time since maintenance	S	1 ... 240 months	§ 17.1, page 98
7050	Fan speed ionization current	S	0 ... 10000 rpm	§ 17.1, page 98
7051	Message ionization current	S	No   Yes	§ 17.1, page 98
7130	Chimney sweep function	E	Off   On	§ 17.2, page 99
7131	Burner output	E	Partial load   Full load   Max heating load	§ 17.2, page 99

Line No.	Programming	Access	Setting range	See §..., page...
7140	Manual control	E	Off   On	§ 17.3, page 99
7143	Controller stop function	S	Off   On	§ 17.3, page 99
7145	Controller stop setpoint	S	0 ... 100 %	§ 17.3, page 99
7146	Deaeration function	C	Off   On	§ 17.3, page 99
7147	Type of venting	C	None   Heating circuit continuous   Heating circuit cycled   DHW continuous   DHW cycled	§ 17.3, page 99
7170	Telephone customer service	C		§ 17.4, page 101
Input/output test				
7700	Relay test	C	No test   Everything off   Relay output QX1   Relay output QX2   Relay output QX3   Relay output QX4   Relay output QX21 module 1   Relay output QX22 module 1   Relay output QX23 module 1   Relay output QX21 module 2   Relay output QX22 module 2   Relay output QX23 module 2   Relay output QX21 module 3   Relay output QX22 module 3   Relay output QX23 module 3	§ 18.1, page 102
7730	Outside temp B9	C	-50 ... 50 °C	§ 18.2, page 103
7750	DHW temp B3/B38	C	0 ... 140 °C	§ 18.2, page 103
7760	Boiler temp B2	C	0 ... 140 °C	§ 18.2, page 103
7820	Sensor temp BX1	C	-28 ... 350 °C	§ 18.2, page 103
7821	Sensor temp BX2	C	-28 ... 350 °C	§ 18.2, page 103
7822	Sensor temp BX3	C	-28 ... 350 °C	§ 18.2, page 103
7823	Sensor temp BX4	C	-28 ... 350 °C	§ 18.2, page 103
7830	Sensor temp BX21 module 1	C	-28 ... 350 °C	§ 18.2, page 103
7831	Sensor temp BX22 module 1	C	-28 ... 350 °C	§ 18.2, page 103
7832	Sensor temp BX21 module 2	C	-28 ... 350 °C	§ 18.2, page 103
7833	Sensor temp BX22 module 2	C	-28 ... 350 °C	§ 18.2, page 103
7834	Sensor temp BX21 module 3	C	-28 ... 350 °C	§ 18.2, page 103
7835	Sensor temp BX22 module 3	C	-28 ... 350 °C	§ 18.2, page 103
7840	Voltage signal H1	C	0 ... 10 V	§ 18.3, page 103
7841	Contact state H1	C	Open   Closed	§ 18.3, page 103
7845	Voltage signal H2 module 1	C	0 ... 10 V	§ 18.3, page 103
7846	Contact state H2 module 1	C	Open   Closed	§ 18.3, page 103
7848	Voltage signal H2 module 2	C	0 ... 10 V	§ 18.3, page 103
7849	Contact state H2 module 2	C	Open   Closed	§ 18.3, page 103
7851	Voltage signal H2 module 3	C	0 ... 10 V	§ 18.3, page 103
7852	Contact state H2 module 3	C	Open   Closed	§ 18.3, page 103
7854	Voltage signal H3	C	0 ... 10 V	§ 18.3, page 103
7855	Contact state H3	C	Open   Closed	§ 18.3, page 103
7860	Contact state H4	C	Open   Closed	§ 18.3, page 103
7862	Frequency H4	C	0 ... 2000	§ 18.3, page 103
7865	Contact state H5	C	Open   Closed	§ 18.3, page 103
7872	Contact state H6	C	Open   Closed	§ 18.3, page 103
7874	Contact state H7	C	Open   Closed	§ 18.3, page 103
7950	Input EX21 module 1	C	0V   230V	§ 18.4, page 104
7951	Input EX21 module 2	C	0V   230V	§ 18.4, page 104
7952	Input EX21 module 3	C	0V   230V	§ 18.4, page 104
State				
8000	State heating circuit 1	C	0 ... 255	§ 19, page 105
8001	State heating circuit 2	C	0 ... 255	§ 19, page 105

Line No.	Programming	Access	Setting range	See §..., page...
8002	State heating circuit 3	C	0 ... 255	§ 19, page 105
8003	State DHW	C	0 ... 255	§ 19, page 105
8005	State boiler	C	0 ... 255	§ 19, page 105
8007	State solar	C	0 ... 255	§ 19, page 105
8008	State solid fuel boiler	C	0 ... 255	§ 19, page 105
8009	State burner	C	0 ... 255	§ 19, page 105
8010	State buffer	C	0 ... 255	§ 19, page 105
8011	State swimming pool	C	0 ... 255	§ 19, page 105
Diagnostics cascade				
8100	Priority source 1	C	0 ... 16	§ 20.1, page 111
8101	State source 1	C	Missing   Faulty   Manual control active   Heat generation lock active   Chimney sweep funct active   Temporarily unavailable   Outside temp limit active   Not released   Released	§ 20.1, page 111
8102	Priority source 2	C	0 ... 16	§ 20.1, page 111
8103	State source 2	C	Ditto line 8101	§ 20.1, page 111
8104	Priority source 3	C	0 ... 16	§ 20.1, page 111
8105	State source 3	C	Ditto line 8101	§ 20.1, page 111
8106	Priority source 4	C	0 ... 16	§ 20.1, page 111
8107	State source 4	C	Ditto line 8101	§ 20.1, page 111
8108	Priority source 5	C	0 ... 16	§ 20.1, page 111
8109	State source 5	C	Ditto line 8101	§ 20.1, page 111
8110	Priority source 6	C	0 ... 16	§ 20.1, page 111
8111	State source 6	C	Ditto line 8101	§ 20.1, page 111
8112	Priority source 7	C	0 ... 16	§ 20.1, page 111
8113	State source 7	C	Ditto line 8101	§ 20.1, page 111
8114	Priority source 8	C	0 ... 16	§ 20.1, page 111
8115	State source 8	C	Ditto line 8101	§ 20.1, page 111
8116	Priority source 9	C	0 ... 16	§ 20.1, page 111
8117	State source 9	C	Ditto line 8101	§ 20.1, page 111
8118	Priority source 10	C	0 ... 16	§ 20.1, page 111
8119	State source 10	C	Ditto line 8101	§ 20.1, page 111
8120	Priority source 11	C	0 ... 16	§ 20.1, page 111
8121	State source 11	C	Ditto line 8101	§ 20.1, page 111
8122	Priority source 12	C	0 ... 16	§ 20.1, page 111
8123	State source 12	C	Ditto line 8101	§ 20.1, page 111
8124	Priority source 13	C	0 ... 16	§ 20.1, page 111
8125	State source 13	C	Ditto line 8101	§ 20.1, page 111
8126	Priority source 14	C	0 ... 16	§ 20.1, page 111
8127	State source 14	C	Ditto line 8101	§ 20.1, page 111
8128	Priority source 15	C	0 ... 16	§ 20.1, page 111
8129	State source 15	C	Ditto line 8101	§ 20.1, page 111
8130	Priority source 16	C	0 ... 16	§ 20.1, page 111
8131	State source 16	C	Ditto line 8101	§ 20.1, page 111
8138	Cascade flow temp	C	0 ... 140 °C	§ 20.1, page 111
8139	Cascade flow temp setp	C	0 ... 140 °C	§ 20.1, page 111
8140	Cascade return temp	C	0 ... 140 °C	§ 20.1, page 111
8141	Cascade return temp setp	C	0 ... 140 °C	§ 20.1, page 111
8150	Source seq ch'over current	C	0 ... 990 h	§ 20.1, page 111

Line No.	Programming	Access	Setting range	See §..., page...
Diagnostics heat generation				
8304	Boiler pump Q1	S	Off   On	§ 20.2, page 111
8308	Boiler pump speed	S	0 ... 100 %	§ 20.2, page 111
8309	Bypass pump speed	S	0 ... 100 %	§ 20.2, page 111
8310	Boiler temp	C	0 ... 140 °C	§ 20.2, page 111
8311	Boiler setpoint	C	0 ... 140 °C	§ 20.2, page 111
8312	Boiler switching point	C	0 ... 140 °C	§ 20.2, page 111
8313	Control sensor	C	0 ... 140 °C	§ 20.2, page 111
8314	Boiler return temp	C	0 ... 140 °C	§ 20.2, page 111
8315	Boiler return temp set	C	0 ... 140 °C	§ 20.2, page 111
8316	Flue gas temp	C	0 ... 350 °C	§ 20.2, page 111
8318	Flue gas temp max	C	0 ... 350 °C	§ 20.2, page 111
8321	Primary exchanger temp	C	0 ... 140 °C	§ 20.2, page 111
8323	Fan speed	C	0 ... 10000 tr/min	§ 20.2, page 111
8324	Set point fan	C	0 ... 10000 tr/min	§ 20.2, page 111
8325	Current fan control	C	0 ... 100 %	§ 20.2, page 111
8326	Burner modulation	C	0 ... 100 %	§ 20.2, page 111
8327	Water pressure	C	0 ... 10	§ 20.2, page 111
8329	Ionization current	S	0 ... 100 µA	§ 20.2, page 111
8330	Hours run 1st stage	S	00:00:00 ... 2730:15:00 h	§ 20.2, page 111
8331	Start counter 1st stage	S	0 ... 2147483647	§ 20.2, page 111
8338	Hours run heating mode	E	00:00:00 ... 8333:07:00 h	§ 20.2, page 111
8339	Hours run DHW	E	00:00:00 ... 8333:07:00 h	§ 20.2, page 111
8390	Current phase number	S	TNB   TLO   TNN   STY   STV   THL1   THL1A   TV   TBRE   TW1   TW2   TVZ   TSA1   TSA2   TI   MOD   THL2   THL2A   TN   SAV   STOE	§ 20.2, page 111
8499	Collector pump 1	S	Off   On	§ 20.2, page 111
8501	Solar ctrl elem buffer	S	Off   On	§ 20.2, page 111
8502	Solar ctrl elem swi pool	S	Off   On	§ 20.2, page 111
8505	Speed collector pump 1	S	0 ... 100 %	§ 20.2, page 111
8506	Speed solar pump ext exch	S	0 ... 100 %	§ 20.2, page 111
8507	Speed solar pump buffer	S	0 ... 100 %	§ 20.2, page 111
8508	Speed solar pump swi pool	S	0 ... 100 %	§ 20.2, page 111
8510	Collector temp 1	C	-28 ... 350 °C	§ 20.2, page 111
8511	Collector temp 1 max	C	-28 ... 350 °C	§ 20.2, page 111
8512	Collector temp 1 min	C	-28 ... 350 °C	§ 20.2, page 111
8513	dt collector 1/DHW	C	-168 ... 350 °C	§ 20.2, page 111
8514	dt collector 1/buffer	C	-168 ... 350 °C	§ 20.2, page 111
8515	dt collector 1/swimming pool	C	-168 ... 350 °C	§ 20.2, page 111
8519	Solar flow temp	C	-28 ... 350 °C	§ 20.2, page 111
8520	Solar return temp	C	-28 ... 350 °C	§ 20.2, page 111
8526	24-hour yield solar energy	E	0 ... 999,9 kW/h	§ 20.2, page 111
8527	Total yield solar energy	E	0 ... 9999999,9 kW/h	§ 20.2, page 111
8530	Hours run solar yield	E	00:00:00 ... 8333:07:00 h	§ 20.2, page 111
8531	Hours run collect overtemp	E	00:00:00 ... 8333:07:00 h	§ 20.2, page 111
8532	Hours run collector pump	E	00:00:00 ... 8333:07:00 h	§ 20.2, page 111
8560	Solid fuel boiler temp	C	0 ... 140 °C	§ 20.2, page 111
8570	Hours run solid fuel boiler	E	00:00:00 ... 8333:07:00 h	§ 20.2, page 111

Line No.	Programming	Access	Setting range	See §..., page...
Diagnostics consumers				
8700	Outside temp	C	-50 ... 50 °C	§ 20.3, page 112
8701	Outside temp min	E	-50 ... 50 °C	§ 20.3, page 112
8702	Outside temp max	E	-50 ... 50 °C	§ 20.3, page 112
8703	Outside temp attenuated	C	-50 ... 50 °C	§ 20.3, page 112
8704	Outside temp composite	C	-50 ... 50 °C	§ 20.3, page 112
8730	Heating circuit pump 1	C	Off   On	§ 20.3, page 112
8731	Heat circ mix valv 1 open	C	Off   On	§ 20.3, page 112
8732	Heat circ mix valv 1 close	C	Off   On	§ 20.3, page 112
8735	Speed heating circuit pump 1	S	0 ... 100 %	§ 20.3, page 112
8740	Room temp 1	C	0 ... 50 °C	§ 20.3, page 112
8741	Room setpoint 1	C	4 ... 35 °C	§ 20.3, page 112
8743	Flow temp 1	C	0 ... 140 °C	§ 20.3, page 112
8744	Flow temp setpoint 1	C	0 ... 140 °C	§ 20.3, page 112
8749	Room thermostat 1	C	No demand   Demand	§ 20.3, page 112
8760	Heating circuit pump 2	C	Off   On	§ 20.3, page 112
8761	Heat circ mix valv 2 open	C	Off   On	§ 20.3, page 112
8762	Heat circ mix valv 2 close	C	Off   On	§ 20.3, page 112
8765	Speed heating circuit pump 2	S	0 ... 100 %	§ 20.3, page 112
8770	Room temp 2	C	0 ... 50 °C	§ 20.3, page 112
8771	Room setpoint 2	C	4 ... 35 °C	§ 20.3, page 112
8773	Flow temp 2	C	0 ... 140 °C	§ 20.3, page 112
8774	Flow temp setpoint 2	C	0 ... 140 °C	§ 20.3, page 112
8779	Room thermostat 2	C	No demand   Demand	§ 20.3, page 112
8790	Heating circuit pump 3	C	No demand   Demand	§ 20.3, page 112
8791	HC mixing valve 3 open	C	No demand   Demand	§ 20.3, page 112
8792	HC mixing valve 3 closed	C	No demand   Demand	§ 20.3, page 112
8795	Speed heating circuit pump 3	S	0 ... 100 %	§ 20.3, page 112
8800	Room temp 3	C	0 ... 50 °C	§ 20.3, page 112
8801	Room setpoint 3	C	4 ... 35 °C	§ 20.3, page 112
8803	Flow temp 3	C	0 ... 140 °C	§ 20.3, page 112
8804	Flow temp setpoint 3	C	0 ... 140 °C	§ 20.3, page 112
8809	Room thermostat 3	C	No demand   Demand	§ 20.3, page 112
8820	DHW pump	C	Off   On	§ 20.3, page 112
8825	Speed DHW pump	S	0 ... 100 %	§ 20.3, page 112
8826	Speed DHW interm circ pump	S	0 ... 100 %	§ 20.3, page 112
8827	Speed inst DHW heater pump	S	0 ... 100 %	§ 20.3, page 112
8830	DHW temp 1	C	0 ... 140 °C	§ 20.3, page 112
8831	DHW temp setpoint	C	8 ... 80 °C	§ 20.3, page 112
8832	DHW temp 2	C	0 ... 140 °C	§ 20.3, page 112
8835	DHW circulation temp	C	0 ... 140 °C	§ 20.3, page 112
8836	DHW charging temp	C	0 ... 140 °C	§ 20.3, page 112
8852	DHW consumption temp	C	0 ... 140 °C	§ 20.3, page 112
8853	Instant WH setpoint	C	0 ... 140 °C	§ 20.3, page 112
8860	DHW flow	C	0 ... 30 l/min	§ 20.3, page 112
8875	Flow temp setp VK1	C	5 ... 130 °C	§ 20.3, page 112
8885	Flow temp setp VK2	C	5 ... 130 °C	§ 20.3, page 112
8895	Flow temp setp swimming pool	C	5 ... 130 °C	§ 20.3, page 112

Line No.	Programming	Access	Setting range	See §..., page...
8900	Swimming pool temp	C	0 ... 140 °C	§ 20.3, page 112
8901	Swimming pool setpoint	C	8 ... 80 °C	§ 20.3, page 112
8930	Primary controller temp	C	0 ... 140 °C	§ 20.3, page 112
8931	Primary controller set	C	0 ... 140 °C	§ 20.3, page 112
8950	Common flow temp	C	0 ... 140 °C	§ 20.3, page 112
8951	Common flow temp setp	C	0 ... 140 °C	§ 20.3, page 112
8952	Common return temp	C	0 ... 140 °C	§ 20.3, page 112
8962	Common output setpoint	C	0 ... 100 %	§ 20.3, page 112
8980	Buffer temp 1	C	0 ... 140 °C	§ 20.3, page 112
8981	Buffer setpoint	C	0 ... 140 °C	§ 20.3, page 112
8982	Buffer temp 2	C	0 ... 140 °C	§ 20.3, page 112
8983	Buffer temp 3	C	0 ... 140 °C	§ 20.3, page 112
9005	Water pressure H1	C	0 ... 10 bar	§ 20.3, page 112
9006	Water pressure H2	C	0 ... 10 bar	§ 20.3, page 112
9009	Water pressure H3	C	0 ... 10 bar	§ 20.3, page 112
9031	Relay output QX1	C	Off   On	§ 20.3, page 112
9032	Relay output QX2	C	Off   On	§ 20.3, page 112
9033	Relay output QX3	C	Off   On	§ 20.3, page 112
9034	Relay output QX4	C	Off   On	§ 20.3, page 112
9050	Relay output QX21 module 1	C	Off   On	§ 20.3, page 112
9051	Relay output QX22 module 1	C	Off   On	§ 20.3, page 112
9052	Relay output QX23 module 1	C	Off   On	§ 20.3, page 112
9053	Relay output QX21 module 2	C	Off   On	§ 20.3, page 112
9054	Relay output QX22 module 2	C	Off   On	§ 20.3, page 112
9055	Relay output QX23 module 2	C	Off   On	§ 20.3, page 112
9056	Relay output QX21 module 3	C	Off   On	§ 20.3, page 112
9057	Relay output QX22 module 3	C	Off   On	§ 20.3, page 112
9058	Relay output QX23 module 3	C	Off   On	§ 20.3, page 112
Burner control				
9524	Required speed LF	S	0 ... 10000 tr/min	§ 21.1, page 114
9525	Required speed LF min	S	0 ... 10000 tr/min	§ 21.1, page 114
9529	Required speed HF	S	0 ... 10000 tr/min	§ 21.1, page 114
9530	Required speed HF max	S	0 ... 10000 tr/min	§ 21.1, page 114
9650	Chimney drying	S	Off   Temporarily   Permanently	§ 21.2, page 114
9651	Req speed chimney drying	S	0 ... 10000 tr/min	§ 21.2, page 114
9652	Duration chimney drying	S	10 ... 1440 min	§ 21.2, page 114

## 6. “USER INTERFACE” PARAMETERS

### 6.1. Setting the time

Line No.	Access	Programming	Possible values
1	E	Hours / minutes	00:00 ... 23:59
2	E	Day / month	01.01 ... 31.12
3	E	Year	1900 ... 2099
5	C	Start of summertime	01.01 ... 31.12
6	C	End of summertime	01.01 ... 31.12

The controller has an annual clock which indicates the hour, day and date. For correct operation of the programs, the hour and date must be correctly set on the clock.

N.B: Summer time / winter time switchover

The dates have been programmed for transition to the summer time and winter time. The time automatically goes from 2<sup>am</sup> (winter time) to 3<sup>am</sup> (summer time) or from 3am (summer time) to 2am winter time (on the first Sunday following the respective date).

### 6.2. User interface

Line No.	Access	Programming	Possible values
20	E	Language	English   Deutsch   Français   Italiano   Nederlands   Español
22	C	Info	Temporarily   Permanently
26	C	Operation lock	Off   On
27	C	Programming lock	Off   On
28	C	Direct adjustment	Automatic storage   Storage with confirmation
29	E	Units	°C, bar   °F, PSI

#### Info (22):

- **Temporary:**

After pressing the “Info” key, the display returns to the “predefined” basic display after 8 minutes or by pressing the operating mode key.

- **Continuous:**

After pressing the “Info” key, the display goes to the standard “new” display after 8 minutes max. The last information selected is visible on the new basic display.

#### Operation lock (26):

If the operation lock is activated, the following control elements can no longer be set: Heating circuit mode, DHW mode, temperature setpoint, comfort ambient temperature (knob), occupation key.

**Program lock (27):**

If the program lock is activated, the setting values are displayed but cannot be modified.

- **Temporary suspension of program**

The program lock can be temporarily deactivated on the program. To do so, simultaneously press the OK and ESC keys for at least 3 seconds. Temporary suspension of the program lock remains effective until the programming context is exited.

- **Permanent suspension of program**

Start with a temporary suspension, then cancel the "Program lock" on line 27.

**Direct setting (28):**

- **Automatic**

A setpoint correction using the knob is validated with no special confirmation (elapsed time) or by pressing the OK key.

- **With validation**

A setpoint correction with the button will only be validated after the OK key has been pressed.

## 6.3. Heating circuit assignment

Line No.	Access	Programming	Possible values
42	C	Assignment device 1	Heating circuit 1   Heating circuits 1 and 2   Heating circuits 1 and 3   All heating circuits
44	C	Operation HC2	Jointly with HC1   Independently
46	C	Operation HC3/P	Jointly with HC1   Independently

**Assignment of unit 1 (42)**

As room unit 1, the action generated by the corresponding user interface can be assigned to heating circuit 1 or to the two heating circuits. The latter case applies when the installation has 2 heating circuits and only one room unit

**Control of heating circuit 2 (44)**

Depending on the setting on line 40 (parameter accessible or QAA75 on QAA78: ambient temperature control module), the action (operating mode key or knob) can be defined on room unit 1, the user interface or the control component for heating circuit 2.

- **Common with HC1**

Control of heating circuits 1 and 2 is shared.

- **Independent**

The control action is displayed on the screen each time an operating mode key or knob is used.

**Control of heating circuit (46)**

Depending on the setting on line 40 (parameter accessible or QAA75 on QAA78: ambient temperature control module), the action (operating mode key or knob) can be defined on room unit 1, the user interface or the control component for heating circuit 3.

- **Common with HC1**

Control of heating circuits 1 and 3 is shared.

- **Independent**

Any change of operating mode or nominal temperature adjustment must be performed in the programming.

---

## 6.4. Software version

---

Line No.	Access	Programming
70	C	Software version

The indication gives the current version of the user interface.

## 7. “HEATING CIRCUITS” PARAMETERS

---

The boiler controller can manage up to 3 heating circuits

The type of heating circuit (direct pump or mixing valve) is self-defined in accordance with the connection (or not) of a flow temperature sensor.

Management of the heating circuit by the boiler controller (direct or mixed) requires use of an outdoor temperature sensor (QAC34 connected to B9, see section 2.3.2, page 10).

In order to have heating circuits with a valve, an extension module per heating circuit must be used.

The names of the sensors, pumps and valves used are:

	<b>Sensor</b>	<b>Pump</b>	<b>Valve</b>
<b>CC1</b>	B1	Q2	Y1/Y2
<b>CC2</b>	B12	Q6	Y5/Y6
<b>CC3</b>	B14	Q20	Y11/Y12

The following functions are available for each heating circuit independently:

- Adjustment of energy saving time schedules
- Adjustment of vacation programs
- Adjustment of setpoints
- Adjustment of heating curves
- Operation optimisation functions
- Adjustment of control of valve and pump actuators

### 7.1. Basic settings

---

#### 7.1.1. *Operating mode*

---

Operation of heating circuits 1, 2 and 3 is directly controlled by the operating mode key (see chapter 3.3, page 14).

### 7.1.2. Time schedule program (heating circuits 1, 2 and 3, DHW, 5)

Line No.					Access	Programming	Possible values
CC1	CC2	CC3	DHW	5			
500	520	540	560	600	E	Preselection	Mo-Su   Mo-Fr   Sa-Su   Mo...Su
501	521	541	561	601	E	First period start time	00:00 ... 24:00
502	522	542	562	602	E	First period stop time	00:00 ... 24:00
503	523	543	563	603	E	Second period start time	00:00 ... 24:00
504	524	544	564	604	E	Second period stop time	00:00 ... 24:00
505	525	545	565	605	E	Second period start time	00:00 ... 24:00
506	526	546	566	606	E	Second period stop time	00:00 ... 24:00
516	536	556	576	616	E	Default values	No   Yes

Several control programs are available for the heating and DHW production circuits. They are set up in « Automatic » mode and control the temperature level changes (and therefore the associated setpoints (reduced and comfort)) in accordance with the change times set.

**Enter the change times:**

The change times can be set in a combined way, i.e. identical times for several days or several different times for certain days. By preselecting groups of days (Monday ... Friday and Saturday ... Sunday, for example) with the same change times, you will considerably reduce the time spent in setting up the change program.

All the time schedule programs can be reset to the factory settings (lines 516, 536, 556, 576 and 616). Each time schedule program has its own control line for reinitialisation. In this case, the individual settings are lost.

### 7.1.3. Vacation (heating circuits 1, 2 and 3)

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
641	651	661	E	Preselection	Period 1   ...   Period 8
642	652	662	E	Begin (dd.mm)	01.01 ... 31.12
643	653	663	E	End (dd.mm)	01.01 ... 31.12
648	658	668	E	Operating level	Frost protection   Reduced

The « vacation » program allows you to change the heating circuits on an operational level selected in accordance with the date (calendar).



**CAUTION:**

**The « vacation » program is active in automatic mode only.**


### 7.1.4. Setpoint values

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
710	1010	1310	E	Comfort setpoint	4 ... 35 °C
712	1012	1312	E	Reduced setpoint	4 ... 35 °C
714	1014	1314	E	Frost protection setpoint	4 ... 35 °C
716	1016	1316	S	Comfort setpoint max	4 ... 35 °C

#### Ambient temperature:

The ambient temperature can be set according to different setpoint values. Depending on the mode chosen, the adjustment points are activated and provide different levels of ambient temperature.

The configurable adjustment point ranges are defined by their interdependencies as shown in the chart below.

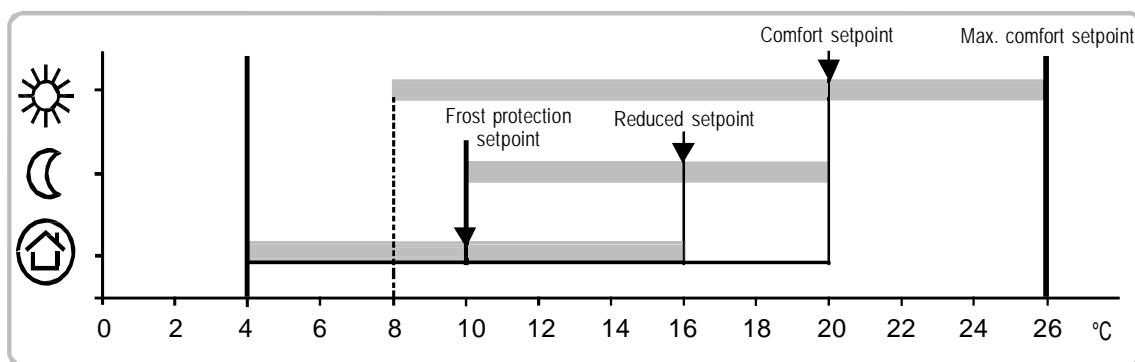

#### Frost protection :

The protection mode automatically prevents too sharp a drop in the ambient temperature. In this case, the control system adopts the frost protection adjustment point.

### 7.1.5. Heating curve

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
720	1020	1320	E	Heating curve slope	0.10 ... 4.00
721	1021	1321	S	Heating curve displacement	-4,5 ... 4,5 °C
726	1026	1326	S	Heating curve adaptation	Off   On


#### Heating curve slope

Depending on the heating characteristics, the controller will calculate the flow temperature setpoint which will be used to regulate the flow temperature in accordance with the atmospheric conditions. Different adjustments allow you to adapt the heating characteristic so that the heating capacity, and therefore the ambient temperature, corresponds to the individual needs.



## **CAUTION:**

The heating curve is adjusted with respect to an ambient temperature setpoint of 20°C. If the ambient temperature is changed, the flow temperature setpoint is automatically recalculated. This does not modify the adjustment and comes down to automatically adapting the curve.

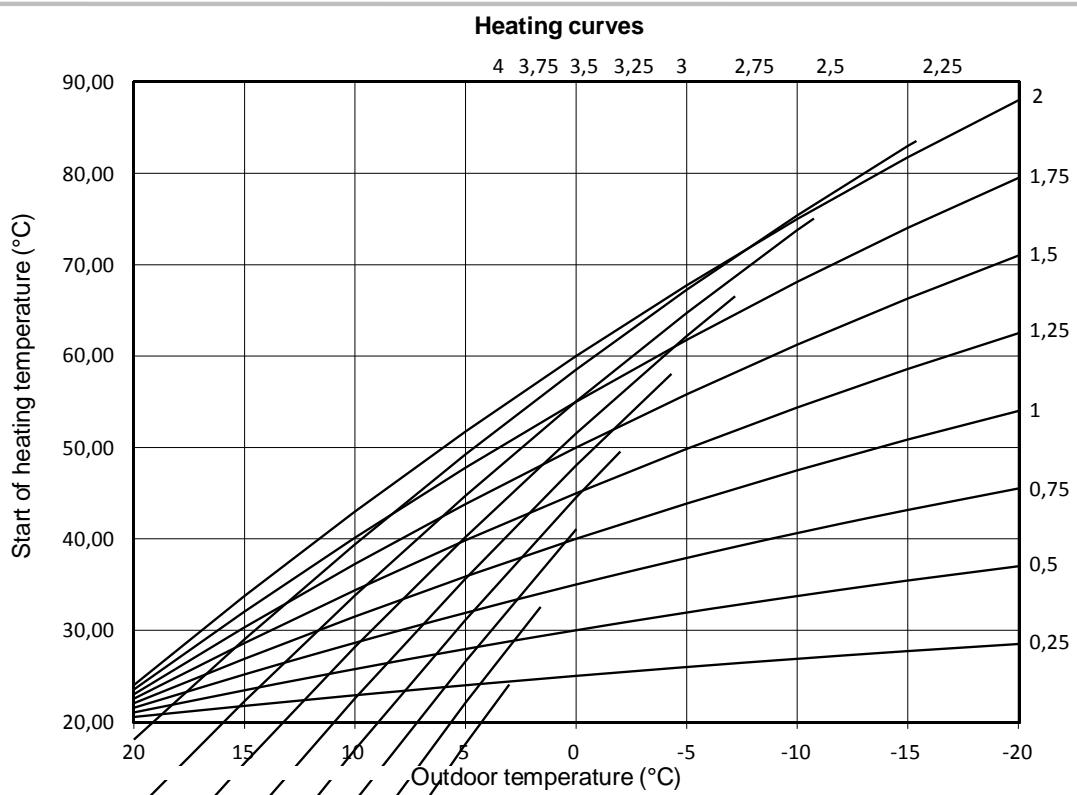

## ~~Translation of heating curve~~

Any offset of the curve will modify the flow temperature overall and regularly over the entire outdoor temperature range. In other words, the offset must be corrected when the ambient temperature is globally too high or too low.

## Adaptation of heating curve

The adaptation allows the controller to automatically adapt the heating curve to the actual conditions. This correction function can only be activated and deactivated.

In the latter case, there is no need to correct the slope and the offset.



## INFORMATION-

To activate the function, the following conditions must be satisfied

- An ambient temperature sensor must be connected.
- The « ambient temperature influence » parameter must be set between 1 and 99.
- The reference room (where the ambient temperature sensor is installed) must not have a thermostatic valve. If it does, it must be completely open.
- Activation of this function requires an adaptation period which can take more or less time (around 1 week) depending on the weather conditions and the stability of the ambient temperature setpoint.

### 7.1.6. Flow temperature setpoint

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
740	1040	1340	C	Flow temp setpoint min	8 ... 95 °C
741	1041	1341	C	Flow temp setpoint max	8 ... 95 °C

Limits the flow temperature setpoint (as min. or max.) calculated by the water law (heating curve).

### 7.1.7. Flow temperature setpoint for room thermostat

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
742	1042	1342	S	Flow temp setpoint room stat	8 ... 95 °C

If a room thermostat is defined on an input Hx, the flow setpoint for the heating circuit set will apply here.

### 7.1.8. Heat request delay

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
746	1046	1346	C	Delay heat request	0 ... 600 s

If a valve is used as a heating circuit control element (in place of a pump), the heat request sent to the generator may be delayed for the time taken by the valve to achieve the fully open position.

## 7.2. Optimisation

### 7.2.1. ECO functions

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
730	1030	1330	E	Summer/winter heating limit	8 ... 30 °C
732	1032	1332	S	24-hour heating limit	-10 ... 10 °C

#### Summer/winter switchover:

The summer/winter switchover activates/deactivates the heating system during the year in accordance with the temperature. The changeover takes place automatically when the automatic mode is selected, thus eliminating the need by the user to switch on/off the heating system. Any change to the input value shortens or extends the respective annual periods (summer/winter).

- If the value is increased:

The transition to winter mode is advanced, and the transition to summer mode is delayed.

- If the value is decreased:


The transition to winter mode is delayed and the transition to summer mode is advanced.


**INFORMATION:**

This function is inactive in continuous comfort temperature mode (sun icon).

The controller displays "ECO".

The outdoor temperature is attenuated to take account of the building's dynamic's

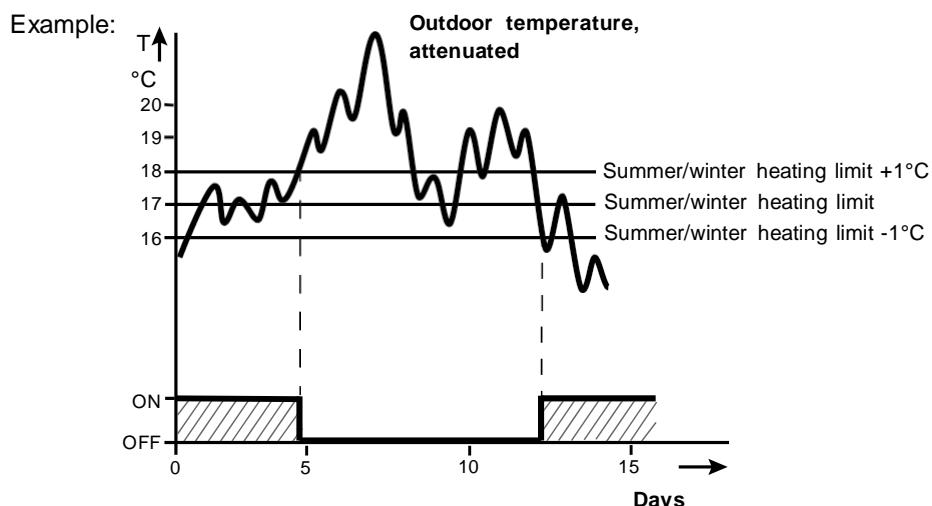
**Daily heating limit :**

The daily heating limit is used to switch on/off the heating system during the day depending on the outdoor temperature. This function is mainly used during the intermediate seasons (spring/autumn) to quickly respond to temperature deviations.

In this way, in the following example, the temperature is 18 °C, calculated as follows:

Heating comfort setpoint. (710) 22 °C

Heating limit over 24 hours (732) -3 °C

Switchover temperature (710 – 732) = 19 °C

Heating off

Differential (fixed) -1 °C

Switchover temperature = 18 °C

Heating on

Any change to the value entered will shorten or increase the respective heating periods.

- If the value is increased: the transition to heating mode will be advanced ; The transition to ECO mode will be delayed.

- If the value is decreased: the transition to heating mode will be delayed ; the transition to ECO mode will be advanced.


**INFORMATION:**

This function is inactive in continuous comfort temperature mode.

The controller displays "ECO".

The outdoor temperature is attenuated to take account of the building's dynamic's

## 7.2.2. Influence of ambient temperature

Line No.	CC1	CC2	CC3	Access	Programming	Possible values
750	1050	1350		S	Room influence	1 ... 100 %

### Types of control :

When an ambient temperature sensor is used, 3 different types of control are possible

SETTING	TYPE OF CONTROL
- - - %	Simple control based on outdoor conditions *
1...99 %	Control based on outdoor conditions, with influence of ambient temperature *
100 %	Control based on ambient temperature only

\* Requires connection of an outdoor sensor.

### **Simple control based on outdoor conditions**

The flow temperature is calculated by the heating curve in accordance with the average outdoor temperature

Since the control does not take account of the ambient temperature for this adjustment, this type of control requires correct adjustment of the heating curve.

### **Control based on outdoor conditions, with influence of ambient temperature.**

The difference between the ambient temperature and the setpoint is measured and taken into account for adjustment of the temperature. This makes it possible to take account of possible heat inputs and ensures a better uniformity of the ambient temperature.

The influence of the temperature difference is defined in the form of a percentage. The configurable value will be proportionally higher and consistent with the quality of the installation in the reference room (precise ambient temperature, correct location of sensor, etc.).

#### **Example:**

60 % approx.: good quality installation

20 % approx.: poor quality installation

### **Control according to ambient temperature only**

The flow temperature is adjusted in accordance with the ambient temperature setpoint, the actual ambient temperature and its evolution. For example, a minor increase in the ambient temperature will result in immediately lowering the flow temperature.



#### **INFORMATION:**

To activate the function, the following conditions must be satisfied

- An ambient temperature sensor must be connected.
- The "ambient temperature influence" parameter must be set between 1 and 99 or to 100%.
- The reference room (where the ambient temperature sensor is installed) must not have a thermostatic valve. If it does, it must be completely open.

### 7.2.3. Limitation of ambient temperature

Line No.	CC1	CC2	CC3	Access	Programming	Possible values
760	1060	1360	S	Room temp limitation		0,5 ... 4 °C

The ambient temperature limitation function is used to switch off the circulating pump when the ambient temperature exceeds the current setpoint by more than the set differential. The circulating pump is again activated as soon as the ambient temperature drops below the current ambient temperature setpoint. If the ambient temperature limitation function is active, no heat request is transmitted to the generator(s).

### 7.2.4. Accelerated heating

Line No.	CC1	CC2	CC3	Access	Programming	Possible values
770	1070	1370	S	Boost heating		0 ... 20 °C

In fast heating mode, the new setpoint is reached more quickly when switching from the reduced setpoint to the comfort setpoint, thus shortening the temperature build-up time. During the fast heating operation, the room temperature setpoint is increased by the value set. An increase in the setting results in a shorter temperature build-up time. On the other hand, a decrease in the setting results in a longer period.



**INFORMATION:** Fast heating is possible with or without the room temperature sensor.

### 7.2.5. Accelerated lowering of heating

Line No.	CC1	CC2	CC3	Access	Programming	Possible values
780	1080	1380	S	Quick setback		Off   Down to reduced setpoint   Down to frost prot setpoint

During accelerated lowering of the heating, the heating circuit pump is disconnected and, if a mixing valve type circuit is used, the mixing valve is closed.



**INFORMATION:** The pump is operated in continuous mode to maintain the heating circuit pump activated during the accelerated temperature lowering operation.

#### • Operation with room temperature sensor

With an ambient temperature sensor, the function disconnects the heating until the ambient temperature has dropped and reached the reduced setpoint or the frost protection level. When the ambient temperature has dropped down to the reduced or frost protection level, the heating circuit pump is activated and the mixing valve is released.

- **Operation without room temperature sensor**

Accelerated lowering of the temperature cuts off the heating for a defined period of time in accordance with the outdoor temperature and the building time constant.

### 7.2.6. Optimisation on startup and stop

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
790	1090	1390	S	Optimum start control max	00:00 ... 06:00
791	1091	1391	S	Optimum stop control max	00:00 ... 06:00

#### Maximum optimisation on activation

The change of temperature levels is optimised to achieve the comfort setpoint during the changeover periods.

#### Maximum optimisation on cutout


The change of temperature levels is optimised to achieve the comfort setpoint - 1/4 °C during the changeover periods.

### 7.2.7. Increase of reduced setpoint

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
800	1100	1400	S	Reduced setp increase start	-30 ... 10 °C
801	1101	1401	S	Reduced setp increase end	-30 ... 10 °C

This function is mainly used in heating systems equipped with limited energy supply levels (homes with low energy profile, for example). In this case, when the outdoor temperatures are low, adjustment of the temperature would take too much time.

Increasing the reduced temperature setpoint prevents excess cooling of the rooms to shorten the temperature adjustment period on transition to the comfort setpoint.

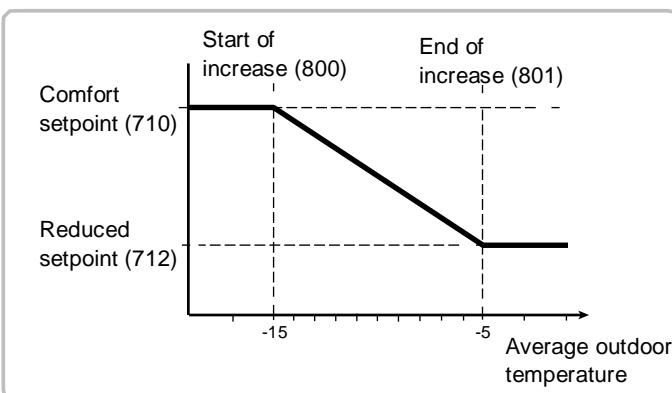

### 7.2.8. Protection pump circuit overheat

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
820	1120	1420	S	Overtemp prot pump circuit	Off   On

In heating installations with pump circuit, the heating circuit flow temperature may be higher than the flow temperature required by the heating curve subsequent to needs generated by other consumers (heating circuit with mixing valve, DHW load, external heat request) or to configuration of a minimum boiler temperature. By an excessively high outlet temperature, this heating circuit with pump would therefore be overheated. The overheating protection function for pump circuits is used to ensure, by activation or cutout of the pump, that the heating circuit energy supply corresponds to the heating curve demand.

### 7.2.9. Evacuation of surplus heat

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
861	1161	1461	S	Excess heat draw	Off   Heating mode   Always

The following functions can trigger evacuation of the surplus heat:

- Inputs Hx
- Adiabatic cooling of tank
- Evacuation of surplus heat from solid fuel boiler

If evacuation of surplus heat is activated, the surplus energy can be evacuated by the room heating system. This can be adjusted separately for each heating circuit.

#### Off

Evacuation of surplus heat deactivated.

#### Heating mode

Evacuation of surplus heat only takes place when the regulator is in heating mode.

#### Continuous

Evacuation of surplus heat takes place in all modes.

### 7.2.10. Storage tank / primary regulator

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
870	1170	1470	S	With buffer	No   Yes

If a storage tank is used, it is necessary here to specify if the heating circuit is supplied from the storage tank. The temperature of the boiler storage tank serves as criterion for release of possible additional energy sources.

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
872	1172	1472	S	With prim contr/system pump	No   Yes

You can specify if the heating circuit is supplied from the primary regulator or by the primary pump (depending on installation).

### 7.2.11. Temperature level switchover

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
898	1198	1498	S	Operating level changeover	Frost protection   Reduced   Comfort

An external clock on input Hx is used to select the temperature level of the heating circuits.

### 7.2.12. Operating mode changeover

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
900	1200	1500	S	Optg mode changeover	None   Protection   Reduced   Comfort   Automatic

In the event of an external change by input H (on extension module only), the operating mode to which the change will be applied must be defined beforehand.

## 7.3. Control of actuators

### 7.3.1. Uninterrupted operation of pumps

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
809	1109	1409	S	Continuous pump operation	No   Yes

The pump is operated in continuous mode to inhibit cutout of the pump during an accelerated temperature lowering operation and regulation to the room temperature setpoint (room temperature thermostat, room temperature sensor or room temperature model).

#### • Yes

The boiler heating circuit pump also remains activated during accelerated lowering of the temperature and when the room temperature setpoint has been achieved.

#### • No

The boiler heating circuit pump can be stopped during an accelerated temperature lowering operation or when the room temperature setpoint has been achieved.

### 7.3.2. Control by mixing valve

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
830	1130	1430	S	Mixing valve boost	0 ... 50 °C
832	1132	1432	S	Actuator type	2-position   3-position
833	1133	1433	S	TOR Switching differential	0 ... 20 °C
834	1134	1434	S	Actuator running time	30 ... 873 s

#### Heightening of the mixing valve

The controller adds the increase defined here to the current flow setpoint and uses the result as temperature setpoint for the heat generator.

#### Type of servomotor

The type of servomotor setting modifies the behaviour of the regulation on the mixing valve servomotor.

The regulator controls on/off and 3-point servomotors

#### On/Off Differential (TOR)

For the On/Off servomotor, the "On/Off Differential" parameter must be adapted if necessary. This is not necessary for the 3-point servomotor

#### Servomotor travel time

On a 3-way valve, the servomotor travel time can be adjusted. On a 2-way valve, it is not possible to adjust the servomotor travel time.

### 7.3.3. Speed-controlled pump

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
880	1180	1480	S	Pump speed reduction	Operating level   Charactéristic

The number of rounds of the heating pump can be reduced in accordance with the temperature level or in accordance with the characteristic.

#### Temperature level

The speed of the heating circuit pump is calculated in accordance with the mode level. In comfort mode (including optimisation) or when the controlled slab drying function is active, the pump is controlled to the maximum speed configured. In reduced mode, the pump is controlled to the minimum speed configured.

#### Characteristic

The rotation speed of the heating circuit pump is calculated in accordance with the effective flow temperature measured and the actual flow setpoint. The common flow setpoint is used for the value measured. If there is no sensor on the common flow line, the boiler flow temperature measured is used. The temperature measured is attenuated by a filter (configurable time constant).

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
882	1182	1482	S	Pump speed min	0 ... 100 %
883	1183	1483	S	Pump speed max	0 ... 100 %

The heating circulating pump minimum and maximum rotation speeds can be defined.

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
888	1188	1488	S	Curve readj at 50% speed	0 ... 100 %

Correction of flow setpoint by reduction of pump rotation speed by 50%.

The correction is calculated as the difference between the flow setpoint according to the heating curve and the actual ambient temperature setpoint.

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
889	1189	1489	S	Filter time const speed ctrl	0 ... 20 min

The time constant is adjusted here to filter the flow temperature. This filtered time delay is used to calculate the speed of the modulating pump.

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
890	1190	1490	S	Flow setp readj speed ctrl	No   Yes

Here, you can specify if the calculated flow setpoint correction must be integrated in the temperature request or not.

## 7.4. Controlled slab drying

Line No.			Access	Programming	Possible values
CC1	CC2	CC3			
850	1150	1450	C	Floor curing function	Off   Functional heating   Curing heating   Functional/curing heating   Curing/functional heating   Manually
851	1151	1451	C	Floor curing setp manually	0 ... 95 °C
855	1155	1455	E	Floor curing setp current	0 ... 95 °C
856	1156	1456	E	Floor curing day current	0 ... 32

This function is used for controlled drying of slabs. It adjusts the flow temperature to a temperature profile. Drying is performed by heating the slab through the heating circuit with a mixing valve or a pump.

The « current drying day » is displayed with parameter 855.

« Controlled drying » function:

• **None :**

The function is deactivated.

• **Functional heating (Fh):**

The first part of the temperature profile is completed automatically.

• **« Ready to occupy » heating (Bh):**

The second part of the temperature profile is completed automatically.

• **Functional heating / "ready to occupy" heating (Fh + Bh):**

The complete temperature profile (1st and 2nd part) is executed automatically.

• **« Ready to occupy » heating / functional heating (Bh + Fh):**

The complete temperature profile (2nd part and 1st part) is executed automatically.

• **Manual:**


No temperature profile is completed but the control is executed in accordance with the « manually controlled drying setpoint ». The function terminates automatically after 25 days.



**INFORMATION:**

- It is absolutely necessary to observe the standards and instructions of the building contractor !
- This function will only be active provided the installation has been properly done (hydraulic and electrical aspects, adjustments). Otherwise, the slabs to be dried could be damaged !
- The function can be interrupted prematurely by selecting « None ».
- The maximum flow temperature limitation remains active.

Heating flow temperature

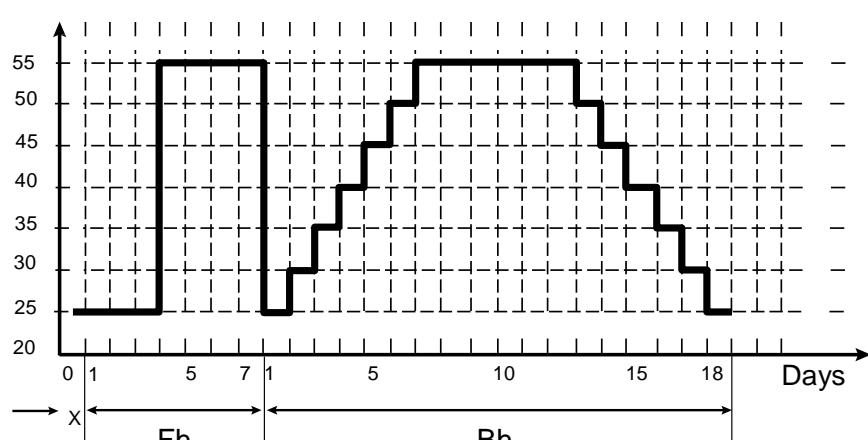

X: 1st day

**Manual drying setpoint**

The flow temperature setpoint for the manual « controlled slab drying » function can be adjusted separately for each heating circuit.

**Current drying setpoint**

Displays the current flow temperature setpoint for the controlled slab drying function.

**Current drying day**

Displays the current day of the controlled slab drying function.



**CAUTION:**

**After a power cutout, the controlled drying function resumes at the moment where the power cutout took place.**

## 8. « DOMESTIC HOT WATER » PARAMETERS

The boiler controller recognises that it must control a DHW circuit when a sensor or a thermostat is connected to its input B3.

The boiler controller can control a DHW actuator (DHW pump or valve Q3 to be defined at QX2).

The names of the sensor and the pump used are:

	Sensor	Pump
DHW	B3	Q3

The following functions are available on the DHW circuit :

- Adjustment of energy saving time schedules
- Adjustment of vacation programs
- Adjustment of setpoints
- Anti-legionella function
- DHW storage tank with load management

The boiler controller shows the DHW menu and the DHW tank when a sensor or a thermostat is connected to input B3.

The control adjusts the DHW temperature to the desired setpoint in accordance with the energy saving time schedule or continuously. In this case, the priority can be given to the DHW load function on the heating circuits.

The controller has a configurable anti-legionella function designed to ensure protection against legionella in the tank and pipes. The circulating pump is controlled in accordance with the energy savings time schedule and the current operating mode.


### 8.1. Basic settings

#### 8.1.1. Setpoint value

Line No.	Access	Programming	Possible values
1610	E	Nominal setpoint	8 ... 80 °C
1612	S	Reduced setpoint	8 ... 80 °C
1614	S	Nominal setpoint max	8 ... 80 °C

The DHW is heated to various setpoint values.

These setpoints depend on the operating mode selected and are used to achieve the desired temperatures in the DHW tank.

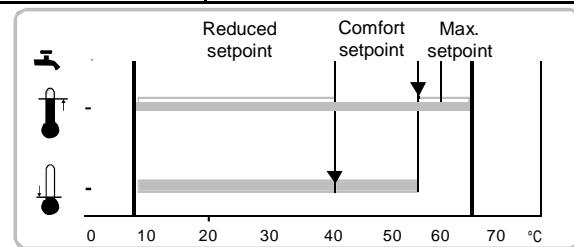


### 8.1.2. Release

Line No.	Access	Programming	Possible values
1620	C	Release	24h/day   Time programs HCs   Time program 4/DHW


#### 24h/24

Whatever the time schedule programs, the DHW temperature is maintained permanently to the nominal DHW setpoint.

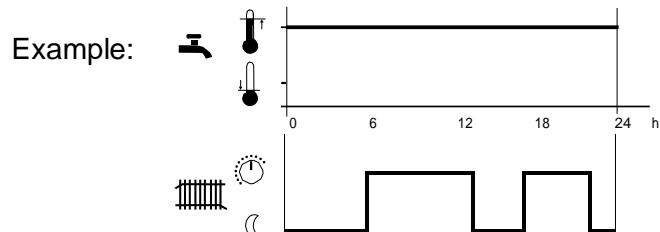


#### Time schedule programs of heating circuits

Depending on the time schedule programs of the heating circuits, the DHW setpoint will vary between the comfort DHW setpoint and the reduced DHW setpoint. The first switching point of each phase advances by one hour each time.

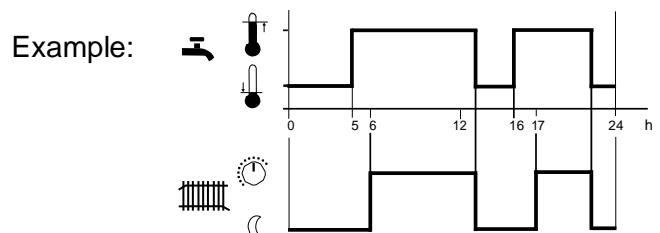

#### Time schedule program 4/DHW

Time schedule program 4 of the local controller is taken into account for the DHW mode. The change between the comfort and reduced DHW setpoints takes place at the change times defined for this program. In this way, the DHW is loaded independently of the heating circuits.

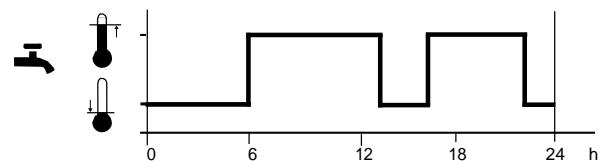

### 8.1.3. Priority

Line No.	Access	Programming	Possible values
1630	C	Charging priority	Absolute   Shifting   None   MC shifting, PC absolute

If power is needed simultaneously for the heating and DHW circuits, the DHW priority function ensures that the boiler power is supplied with priority to the DHW during a DHW load cycle.

#### Absolute

The heating circuit with valve or pump is blocked until the DHW has achieved the desired temperature.

**Sliding**

If the heating power of the generator is not sufficient, the heating circuits with valve and with pump are restricted until the hot water has reached the desired temperature.

**None**

DHW charging takes place in parallel to operation of the heating system. If the sizing of the boilers and the heating circuits with valve is too tight, in the event of a high heating load, the DHW setpoint may not be achieved because there is too much heat passing into the heating circuit.

**Sliding, absolute**

The heating circuits with pump are cut off until the hot water has reached the desired temperature. If the heating power of the generator is insufficient, the heating circuits with mixing valves are restricted until the hot water has reached the desired temperature.

## 8.2. Anti-legionella function

Line No.	Access	Programming	Possible values
1640	S	Legionella function	Off   Périodically   Fixed weekday

- **Periodic**

The anti-legionella function is repeated in accordance with a defined frequency (line 1641).

- **Fixed day in week**

The anti-legionella function can be activated on a fixed day of the week (line 1642). With this setting, the heating at the anti-legionella setpoint takes place on a fixed day of the week without taking account of the DHW tank temperatures during the previous period.


**CAUTION:**

During the period during which the anti-legionella function operates, there is a burn hazard when valves are opened.

Line No.	Access	Programming	Possible values
1641	S	Legionella funct periodically	1 ... 7

The periodic *anti-legionella function setting* determines the number of the days after which the anti-legionella function must be reactivated (this adjustment only works provided the *anti-legionella function* is set to Periodic).

Line No.	Access	Programming	Possible values
1642	S	Legionella funct weekday	Monday   Tuesday   Wednesday   Thursday   Friday   Saturday   Sunday
1644	S	Legionella funct time	00:00 ... 23:50 h:m

The day-of-the-week *anti-legionella operating parameter* defines on which day the anti-legionella function must be activated. The anti-legionella function is then executed on the concerned day, whether a renewable energy is available or not.

The anti-legionella function is started up at the time which has been set. The DHW setpoint is raised to the anti-legionella setpoint which has been set, and DHW charging begins.

If no time parameter has been set, the anti-legionella function is started on the day corresponding to the first normal charging of the DHW. If no DHW load is planned on that day (continuous reduced mode), the anti-legionella function is executed at 24.00.

If DHW production is deactivated (DHW mode key = Off or Vacation), the anti-legionella function resumes as soon as it is reactivated (DHW mode key = On or end of leave).

Line No.	Access	Programming	Possible values
1645	S	Legionella funct setpoint	55 ... 95°C

The higher the temperature in the tank, the shorter the duration of the anti-legionella function.

Line No.	Access	Programming	Possible values
1646	S	Legionella funct duration	10 ... 360 min

The *anti-legionella setpoint* must not be interrupted during the set holding time . If the tank temperature measured (by the coldest sensor, when two sensors are used) is greater than the *anti-legionella setpoint* less 1 K, the *anti-legionella function* is considered to be accomplished and the *holding time* begins.

If the tank temperature measured before the end of the *holding time* is less by more than a differential of + 2 K with respect to the *anti-legionella setpoint* , the *holding time* must be renewed. If no *setpoint holding time* is set, the *anti-legionella function* is considered to be accomplished as soon as the anti-legionella setpoint is achieved.

Line No.	Access	Programming	Possible values
1647	S	Legionella funct circ pump	Off   On

The loop pump Q4 can be activated during the anti-legionella function .

## 8.3. Loop pump Q4

The pump is controlled by a multifunction relay configured accordingly.

Line No.	Access	Programming	Possible values
1660	S	Circulating pump release	Time program 3 / HCP   DHW release   Time program 4 / DHW   Time program 5

The “DHW release” setting starts up the loop pump when DHW production is released.

Line No.	Access	Programming	Possible values
1661	S	Circulating pump cycling	Off   On

To limit losses during circulation, the pump can be controlled for on/off.

If the function is activated, the loop pump is activated steady for 10 minutes during the release period and disconnected again for 20 minutes.



### INFORMATION:

If the pump is activated as part of an anti-legionella cycle, it is no longer controlled cyclically. If the function is deactivated, the pump remains activated continuously during the release period.

Line No.	Access	Programming	Possible values
1663	S	Circulation setpoint	8 ... 80 °C

If a sensor is installed in the DHW distribution line, the regulator monitors the temperature measured during execution of the anti-legionella function. The setpoint set must be maintained on the sensor throughout the duration of the *anti-legionella function* programmed. Adjustment of the maximum circulation value is limited to the nominal setpoint.

## 8.4. Mode switching

Line No.	Access	Programming	Possible values
1680	S	Optg mode changeover	None   Off   On

In the event of external switching by input Hx, it is necessary to first define the mode to which the switchover will take place.

## 9. “CONSUMER CIRCUITS” PARAMETERS

The boiler controller can respond to external consumer requests.

The external consumers send their temperature request either by a 0...10 V signal configured at input H1, or by a dry contact (on H1) and a predefined setpoint configured in the boiler controller.

To display the consumer circuit menu in the program, you must first configure input H1 with one of the 2 functions described below.

The consumer circuit pumps can be controlled by defining a boiler controller output (QX2 to be defined in Q15).

A pool circuit is considered as an external consumer. The pool menu and the associated functions appear on the program when an input BX is declared as pool sensor (B13) and the sensor is connected. You can also define a pool pump (Q19).

### 9.1. Outlet setpoint

Line No.			Access	Programming	Possible values
VK1	VK2	VK3			
1859	1909	1959	C	Flow temp setp cons request	8 ... 120 °C

Here, you set the outlet setpoint to be taken into account in the event of a consumer circuit request.

### 9.2. Override signal / blocking signal

Line No.			Access	Programming	Possible values
VK1	VK2	VK3			
1875	1925	1975	S	Excess heat draw	Off   On

If evacuation of the surplus heat is activated, the surplus of energy can be evacuated by consumer take-off. This can be adjusted separately for each consumer circuit.

### 9.3. Storage tank / primary regulator

Line No.			Access	Programming	Possible values
VK1	VK2	VK3			
1878	1928	1978	S	With buffer	No   Yes

If a storage tank is used, you must specify here if the consumer circuit can be supplied from the storage tank. The boiler storage tank temperature serves as criterion for possible release of additional alternative sources of energy.

Line No.			Access	Programming	Possible values
VK1	VK2	VK3			
1880	1930	1980	S	With prim contr/system pump	No   Yes

You can specify if the consumer circuit is supplied from the primary regulator or by the primary pump (depending on installation).

## 10. “POOL” PARAMETERS

Access to the pool function parameters is only possible when a consumer circuit is declared as pool circuit.

### 10.1. Heating setpoint

Line No.	Access	Programming	Possible values
2055	S	Setpoint solar heating	8 ... 80 °C
2056	S	Setpoint source heating	8 ... 80 °C

When the pool is heated by the solar function, the setpoint is defined by parameter 2055, otherwise it is defined by parameter 2056.

### 10.2. Load priority

Line No.	Access	Programming	Possible values
2065	S	Charging priority solar	Priority 1 ... Priority 3

#### Priority 1

The pool has priority.

#### Priority 2

The DHW has priority over the pool.

#### Priority 3

No priority (after DHW, heating circuits and consumer circuits).

### 10.3. Solar integration

Line No.	Access	Programming	Possible values
2080	S	With solar integration	No   Yes

Here you must specify if the pool can be heated with a solar solution.

## 11. « BOILER » PARAMETERS

The boiler receives heat requests and regulates its power in accordance with the needs. Optimisation functions can be used to limit the number of cycles.

The boiler controller is the regulator which calculates the boiler flow setpoint in accordance with the various heat requests. These requests can come from several callers :

- Heating circuits controlled by boiler controller
- DHW circuit controlled by boiler controller
- Request from consumers not controlled by the boiler controller by On/Off contact or 0...10 signal.
- External request on LPB bus



### CAUTION:

The boiler has an appropriate factory configuration. Configuration changes must be performed with caution to respond to specific application needs.

### 11.1. Operating mode

Line No.	Access	Programming	Possible values
2203	S	Release below outside temp	-50 ... 50 °C

The boiler is only set into service provided the temperature is below the parameter value.

Line No.	Access	Programming	Possible values
2208	S	Full charging buffer	Off   On

To obtain sufficient operating times, the boiler continues to operate so long as the storage tank is not entirely loaded.

### 11.2. Operating limits

#### 11.2.1. Min. and max. setpoints

Line No.	Access	Programming	Possible values
2210	S	Setpoint min	8 ... 95 °C
2212	S	Setpoint max	See boiler manual

The boiler temperature setpoint which has been set can be limited by a minimum setpoint and a maximum setpoint.

These limitations will present a protection function for the boiler. Depending on the boiler mode, the minimum limitation on the boiler temperature setpoint in normal mode is the lower threshold of the boiler setpoint configured. In normal mode, the maximum boiler temperature limitation is the upper limit for the boiler setpoint which has been set and the setpoint for the electronic safety limiting thermostat.

**INFORMATION:**

The minimum and maximum setpoint adjustment range is limited by the manual mode setpoint.

### **11.2.2. Manual mode**

Line No.	Access	Programming	Possible values
2214	E	Setpoint manual control	(setpoint min) ... (setpoint max)

In manual mode, the common starting setpoint can be adjusted to a fixed value.

### **11.2.3. Frost protection setpoint**

Line No.	Access	Programming	Possible values
2217	S	Setpoint frost protection	-20 ... 20 °C

Frost protection of the boiler is ensured independently of the heat requests or of the components connected. This function initiates, as may be necessary, activation of the burner. In this case, the consumer circuits are switched in order to take the heat generated.

### **11.2.4. Minimum return setpoint**

Line No.	Access	Programming	Possible values
2270	S	Return setpoint min	See boiler manual

The minimum return setpoint is configurable. If the boiler return temperature is below the return setpoint, the return temperature holding function is activated.

## 11.3. Optimisation

### 11.3.1. Burner control

Line No.	Access	Programming	Possible values
2243	S	Burner off time min	0 ... 20 min

The minimum pause time of the boiler acts exclusively between the successive heat requests. The boiler is then blocked for an adjustable duration. This time is activated subsequent to regular shutdowns or activation of the safety thermostat following heat requests. The system startups requested by the on/off regulator subsequent to heating requests are only taken into account after expiry of this time period

Line No.	Access	Programming	Possible values
2245	S	SD burner off time	0 ... 80 °C

If the burner *pause differential* is exceeded the minimum pause time is interrupted

#### Release of minimum pause time

If the burner is activated following a heat request, the minimum pause time is released. Consequently, on the next shutdown request by the on/off regulator, it is able to start up.

#### Start of minimum pause time

A deactivation requested by the on/off regulator or the safety thermostat initiates the minimum pause time if it had been released beforehand.

#### Interruption of minimum pause time

If, during the minimum pause time, one of the following conditions occurs, it is immediately taken into account:

- DHW request
- Boiler frost protection
- regulator stop
- cleaning function

The minimum pause time continues to run in the background for heating requests.

#### End of minimum pause time

The heating requests cause reactivation of the burner:

- after the minimum pause time has elapsed.
- In the event of an overshoot of a configured adjustment difference (burner pause differential).

### 11.3.2. Timing of pumps

Line No.	Access	Programming	Possible values
2250	S	Pump overrun time	0 ... 240 min

Timed stopping of pumps following an external heating request.

Line No.	Access	Programming	Possible values
2253	S	Pump over time after DHW	0 ... 20 min

Timed stopping of pumps after DHW

### ***11.3.3. Burner startup time delay***

Line No.	Access	Programming	Possible values
2470	C	Delay heat req special op	0 ... 600 s

The time delay is used to defer startup of the burner when an actuator with a slow opening time is used.

### ***11.3.4. Boiler power***

These settings are required for cascade connection of boilers which do not have the same power levels.

Line No.	Access	Programming	Possible values
2330	S	Output nominal	0 ... 2000 kW
2331	S	Output basic stage	0 ... 2000 kW

## ***11.4. Regulation of heating and DHW***

### ***11.4.1. Fan***

Line No.	Access	Programming	Possible values
2441	S	Fan speed heating max	0 ... 10000 tr/min

This parameter is used to limit the maximum power in heating mode.

Line No.	Access	Programming	Possible values
2442	S	Fan speed full charging max	0 ... 10000 tr/min

This parameter is used to limit the maximum power in complete load mode.

Line No.	Access	Programming	Possible values
2444	S	Fan speed DHW max	0 ... 10000 tr/min

This parameter is used to limit the maximum speed of the fan for the DHW mode. It is compatible with shutdown (HS). In the event of shutdown, the fan is controlled at its maximum speed in DHW mode.

### 11.4.2. Differentials

To avoid accidental cutouts during a transient phenomenon, the cutout differential is dynamically adjusted in accordance with the temperature curve. In principle, the cutout differential is reduced in accordance with the amplitude of the ringing during a transient phenomenon. In the event of non-periodic phenomena, the reduction is carried out on a time-based criterion.

Line No. CC	DHW	Access	Programming	Possible values
2454	2460	S	Switching diff on HCs	0 ... 20 °C

The activation threshold is calculated on the basis of the setpoint requested less the activation differential. The current parameter designates the activation differential applied in the event of a heating or DHW request.

Line No. CC	DHW	Access	Programming	Possible values
2455	2461	S	Switching diff off min HCs	0 ... 20 °C

The cutout threshold is calculated on the basis of the setpoint requested increased by the cutout differential. The current parameter designates the cutout differential applied in the event of a heating or DHW request.

During the transient period, the cutout differential can fluctuate between the minimum and maximum value. After the transient period has elapsed, it is always the minimum cutout differential which is used.

Line No. CC	DHW	Access	Programming	Possible values
2456	2462	S	Switching diff off max HCs	0 ... 20 °C

The cutout threshold is calculated on the basis of the setpoint requested increased by the cutout differential. The current parameter designates the cutout differential applied in the event of a heating or DHW request.

The maximum cutout differential is only used during the transient period.

Line No. CC	DHW	Access	Programming	Possible values
2457	2463	S	Settling time HCs	0 ... 240 min

This parameter defines the time during which, following initiation of the burner, the cutout threshold can be calculated using the maximum cutout differential.

This parameter applies to heating and DHW requests.

## 12. « CASCADE » PARAMETERS


For a cascade, a network must be created on the LPB bus (with OCI345) comprising at least two boilers.

The NAVISTEM B3000 can be master or slave on the bus. The cascade can comprise an NAVISTEM B3000, LMU and RVS.


The bus always has a master (address 1) and one or several slaves defined with different addresses (addresses from 2 to 16)

A cascade flow temperature sensor on an input Bx (configured as common flow sensor b10) must be configured on the cascade master. A cascade return sensor B70 can be configured for certain applications.


**Select a cascade strategy :**

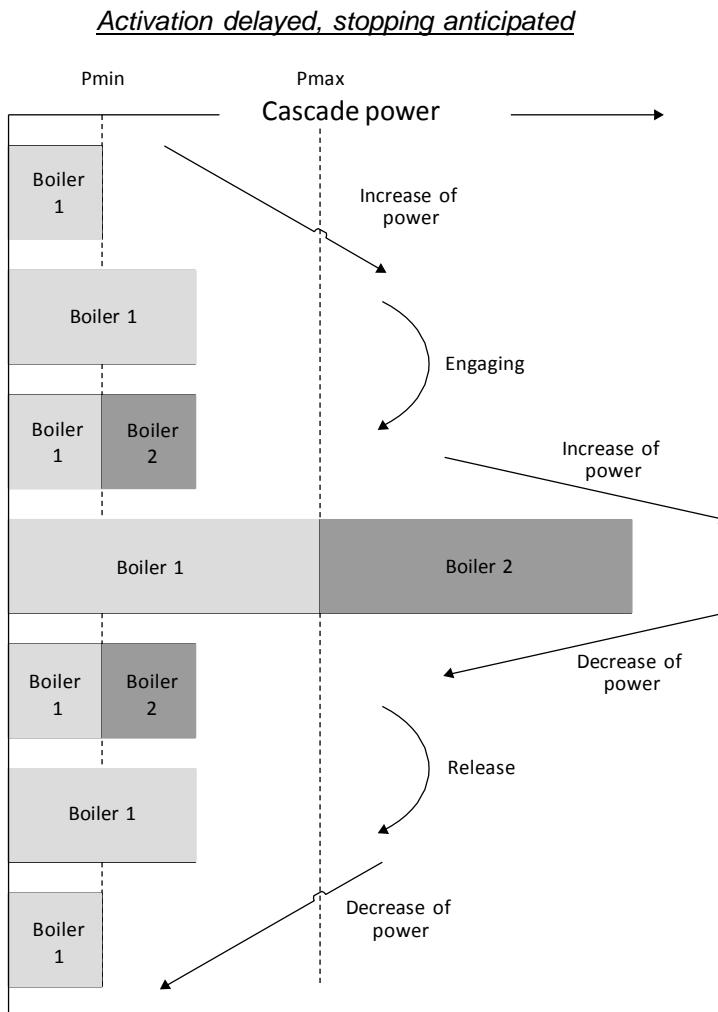

### Activation delayed, stopping delayed

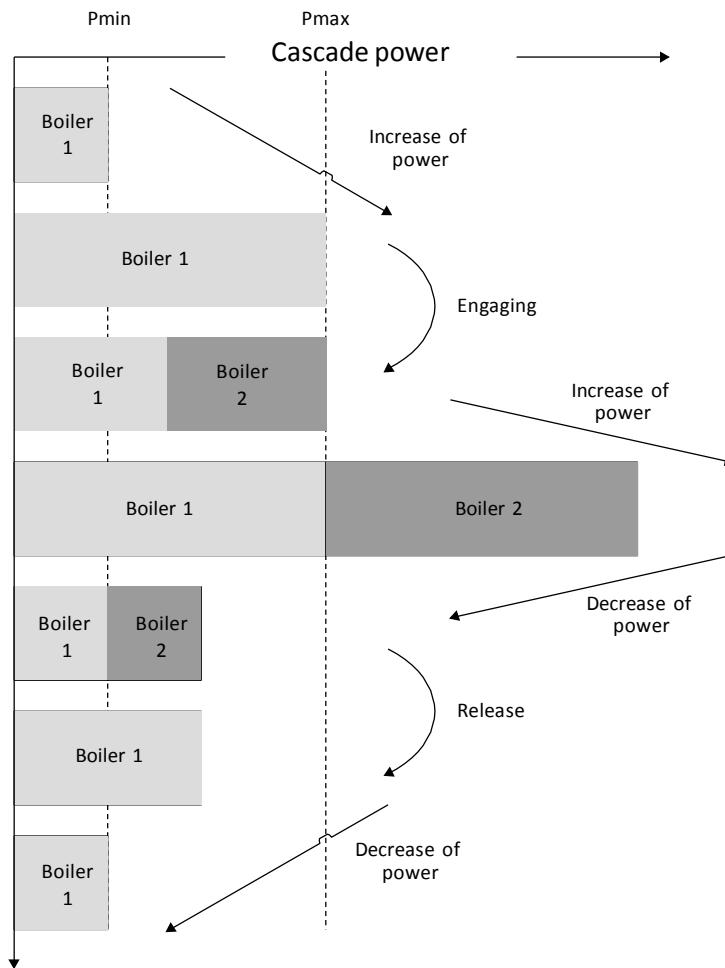

### Activation anticipated, stopping delayed

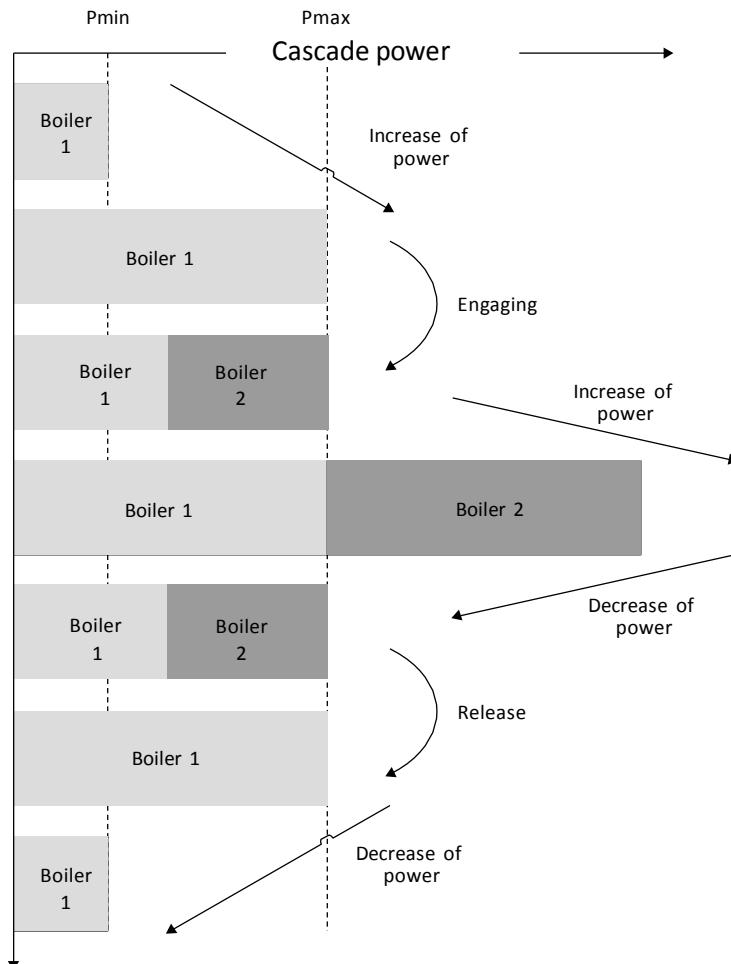

Adjust the power ranges to control the switchovers in the cascade strategies described above. The ranges are common to all the boiler switchovers, these ranges must therefore be adjusted in accordance with the type of boiler in the cascade.

Depending on the energy performance level of the boilers forming the cascade, priorities should be given. Use the boiler providing the highest efficiency (example, VARMAX) most often and use the least efficient boiler as little as possible or as backup (example, pressurised boiler).

## 12.1. Operating mode

Line No.	Access	Programming	Possible values
3510	S	Lead strategy	Late on, early off   Late on, late off   Early on, late off
3511	S	Output band min	0 ... 100 %
3512	S	Output band max	0 ... 100 %

Keeping in mind the recommended power range, the generators are activated or deactivated in accordance with the cascade control strategy set.

To deactivate the power range action, set the limit values to 0% and 100% and the control strategy to delayed activation, delayed stop.

## 12.2. Regulation

Line No.	Access	Programming	Possible values
3530	S	Release integral source seq	0 ... 500 °Cmin

When the energy request exceeds the release integral amount set here, a second boiler is activated. By increasing the value of the parameter, activation of the additional generators is slowed down. By decreasing the value of the parameter, activation of the additional generators is accelerated.

Line No.	Access	Programming	Possible values
3531	S	Reset integral source seq	0 ... 500 °Cmin

If a heat generator currently in service exceeds the energy requirement of the cutout integral set here, the generator with the highest priority is cut off. By increasing this value, the generators stay activated longer (in the event of surplus heat). By decreasing the value of the parameter, stopping of the generators is accelerated.

Line No.	Access	Programming	Possible values
3532	S	Restart lock	0 ... 1800 s
3533	S	Switch on delay	0 ... 120 min

### Reactivation lock

The reactivation time delay prevents newly starting a boiler which has just been stopped. It is only at the end of this set time delay that it is again released. This prevents over-frequent starting and stopping of the generators while ensuring stable operation of the installation.

### Activation time delay

Correct adjustment of the time delay ensures stable operation of the installation. It prevents over-frequent starting and stopping of the generators.

For the DHW demand, the timeout is defined for 1 min.

Line No.	Access	Programming	Possible values
3534	S	Forced time basic stage	0 ... 1200 s

Each boiler is then activated at the basic rate during the time defined.

It is only at the end of this period that the next rate is released.

## 12.3. Boiler sequence

Line No.	Access	Programming	Possible values
3540	S	Auto source seq ch'over	10 ... 990 h

The boiler sequence is automatically switched to manage the load of the boilers forming a cascade by defining the order of the control boiler and the backup boilers.

### Fixed order

The - - - setting defines a fixed switching order. The control boiler can be defined at line 3544; the other boilers are activated in the order consistent with their LPB device addresses.

### Switching order according to operating time

At the end of the hours configured, the order of the boilers forming the cascade is inverted. The boiler with the next higher address takes charge of the main boiler function.

Line No.	Access	Programming	Possible values
3541	S	Auto source seq exclusion	none   first   last   first and last

The exclusion setting can only be used in association with the sequence activated at line 3540.

Boiler exclusion is used so that neither the first and/or the last boiler is used when the automatic switchover takes place.

**None**

The order of activation of the boilers is inverted at the end of the hours configured (line 3540).

**First**

The boiler with the lowest address continues to be the main boiler. The following ones switch their activation order after the number of hours specified in line 3540.

**Last**

The boiler with the highest address (last address) is always the last in the sequence. For the other boilers, the order of activation is inverted after the configured hours have elapsed (line 3540).

**First and last**

The boiler with the lowest address (first address) continues to be the main boiler. The boiler with the highest address (last address) is always the last in the sequence. The boilers with the intermediate addresses are switched over following the number of hours set (line 3540).

Line No.	Access	Programming	Possible values
3544	S	Leading source	source 1   ...   source 16

The main boiler setting is only used in association with the fixed order of the boiler sequence on line 3540.

The main boiler defined will always be activated first and deactivated last. The other boilers are switched in the order of their device addresses.

## 12.4. Return temperature min. limitation.

Line No.	Access	Programming	Possible values
3560	S	Return setpoint min	8 ... 95 °C

As soon as the return temperature exceeds the return setpoint adjusted, the return temperature holding function is activated. The return temperature holding function is used to influence the consumers or to use a return regulator.

Line No.	Access	Programming	Possible values
3562	S	Return influence consumers	Off   On

If the return temperature of the released boiler cascade drops below the minimum temperature set, the regulator calculates a blocking signal.

If this signal is greater than the corresponding limit value, the consumer pumps are or remain stopped in the pump circuits (circulating pump, DHW pump, external charging). In those circuits with mixing valve, the flow setpoint is reduced in accordance with the value of the blocking signal.

## 13. "DHW TANK" PARAMETERS

### 13.1. Load regulation

Line No.	Access	Programming	Possible values
5020	S	Flow setpoint boost	0 ... 30 °C

The DHW request to the generator comprises the current DHW setpoint and the adjustable boost.

Line No.	Access	Programming	Possible values
5021	S	Transfer boost	0 ... 30 °C

The transfer is used to route the buffer tank energy to the DHW tank. In this respect, the current temperature of the buffer tank must be greater than the current temperature in the DHW tank. This differential can be set here.

Line No.	Access	Programming	Possible values
5022	S	Type of charging	Recharging   Full charging   Full charging legio   Full charg 1st time day   Full charg 1st time legio

The tank can be loaded with up to two sensors max. A partial load can also be combined using a sensor and an anti-legionella function based on 2 sensors (setting 3).

#### Recharging

The DHW request is controlled by sensor B3.

#### Complete load

The DHW request is controlled by the two tank sensors B3 and B31.

#### Anti-legionella complete load

If the anti-legionella function is active, the DHW request is controlled by the two tank sensors B3 and B31, otherwise by sensor B3.

#### Complete load, first of the day

On the first daily load, the DHW request is controlled by the two tank sensors B3 and B31 ; the following charging operations by sensor B3 only.

#### Complete load, anti-legionella + 1st of the day

On the first daily load, and when the anti-legionella function is active, the DHW request is controlled by the two tank sensors B3 and B31 ; in the other cases, by sensor B3 only.

## 13.2. Protection against overheating

Line No.	Access	Programming	Possible values
5050	S	Charging temp max	8 ... 95 °C

This function is activated when a solar system is integrated.

The DHW tank is loaded by the solar energy to the maximum DHW load value which has been set.

## 13.3. DHW tank frost protection

If the temperature drops below 5 °C, the boiler is activated to bring the temperature up to 10 °C.

## 13.4. Adiabatic cooling

Line No.	Access	Programming	Possible values
5055	S	Recooling temp	8 ... 95 °C
5056	S	Recooling heat gen/HCs	Off   On
5057	S	Recooling collector	Off   Summer   Always

There are two functions for adiabatic cooling of the DHW tank.

An adiabatic cooling function remains active so long as the tank has not reached the adiabatic cooling temperature.

The energy can be discharged in the heating circuits or be transferred to the surroundings by the manifold surface when it is cold.

## 13.5. Electrical immersion heater

Line No.	Access	Programming	Possible values
5060	S	EI imm heater optg mode	Substitute   Summer   Always
5061	S	EI immersion heater release	24h/day   DHW release   Time program 4/DHW
5062	S	EI immersion heater control	External thermostat   DHW sensor

The DHW mode selection key also acts on the heating unit. For DHW loading to take place, the DHW key must be activated.



### INFORMATION:

Effective release only occurs when the electrical resistor can operate consistently with the “*Electrical resistor*” mode setting (5060).

For the setpoint value compensation to operate correctly, the thermostat external to the regulator must be set to the maximum tank temperature.

## 13.6. Evacuation of surplus heat

Line No.	Access	Programming	Possible values
5085	S	Excess heat draw	Off   On

The following functions can trigger evacuation of the surplus heat :

- Inputs H1, H2, H3 or EX2
- Adiabatic cooling of tank
- Evacuation of surplus heat from solid fuel boiler

If evacuation of surplus heat is activated, the surplus energy can be evacuated by the room heating system. This can be adjusted separately for each heating circuit.

## 13.7. Installation hydraulic system

Line No.	Access	Programming	Possible values
5090	S	With buffer	No   Yes

If a buffer tank is used, you must specify here if the DHW tank is supplied from the buffer tank. The boiler buffer tank temperature serves as criterion for release of the additional energy sources when these are taken into account.

Line No.	Access	Programming	Possible values
5092	S	With prim contr/system pump	No   Yes

You can specify if the DHW tank is supplied from the pre-regulator or with the network pump (depending on installation).

Line No.	Access	Programming	Possible values
5093	S	With solar integration	No   Yes

You can specify if the DHW tank must be supplied by the solar energy system.

## 13.8. Speed-controlled pump

Line No.	Access	Programming	Possible values
5101	S	Pump speed min	0 ... 100 %
5102	S	Pump speed max	0 ... 100 %

The range of speeds for control of the charging pump is limited by the minimum and maximum speeds authorised. To ensure correct operation of the pump, the speed is taken to its maximum for 10 seconds when the pump is started up.

## 14. « CONFIGURATION » PARAMETERS

The boiler controller must be suitably configured to adapt to the heating system needs.

It has 3 configurable relay outputs (QX1, QX2 and QX3), 2 configurable sensor inputs (BX2 and BX3), a 0...10 V or On/Off input (H1) and a second On/Off input (H5, dry contact).

In its factory configuration, output QX1 is configured as Boiler pump Q1. Output QX2 is configured as DHW pump Q3. Output QX3 is configured as shut off valve Q1. The other inputs/outputs must be configured according to needs.

Boiler controller inputs/outputs	Factory configuration	Possible configuration
<b>QX1</b>	Boiler pump Q1	
<b>QX2</b>	DHW pump Q3	DHW pump Q3, or consumer circuit pump Q15, or direct circuit pump.
<b>QX3</b>	Shut-off valve Q1.	
<b>BX2</b>	-	Cascade flow sensor B10 or FGT sensor
<b>BX3</b>	-	Cascade return sensor B70.
<b>H1</b>	0-10v	Request, consumer circuit 1 or 2 (10V), or request, consumer circuit 1 or 2 (On/Off).
<b>H5</b>	Remote On/Off	

Be sure to correctly configure the boiler controller inputs/outputs to adapt to the heating system.

You can check that the boiler controller is properly configured by checking the hydraulic diagram which the boiler controller has detected.

### EXTENSION MODULES

The extension modules bring additional inputs / outputs to the boiler controller.

These must be configured mechanically (jumper) to define the module number (from 1 to 3) and by software (MMI) to define the functionality ensured.

These can be either self-configured in accordance with 6 predefined functions (heating circuit 1, heating circuit 2, heating circuit 3, return temperature regulation, solar DHW, pre-regulation) or each input / output of an extension module can be defined for a specific function.

## 14.1. Hydraulic configuration

### 14.1.1. Presetting



#### CAUTION:

We do not recommend that you choose a presetting. The entire configuration is indicated in the boiler manual.

Line No.	Access	Programming	Possible values
5700	C	Presetting	1 ... 4

Four configurations have been preset on the boiler controller to configure all the parameters of a typical installation.

### 14.1.2. Heating and cooling circuits.

Line No.	Access	Programming	Possible values
CC1	CC2	CC3	Heating circuit 1, 2, 3
5710	5715	5721	C

The heating circuits can be activated and deactivated by this setting.

Line No.	Access	Programming	Possible values
5711	C	Cooling circuit 1	Off   4-pipe system cooling

Parameter not used in our configuration.

### 14.1.3. DHW tank

Line No.	Access	Programming	Possible values
5730	C	DHW sensor	DHW sensor B3   Thermostat   DHW outlet sensor B38

This parameter is used to specify the sensor connected to input B3/B38.

#### DHW Sensor B3

There is a DHW sensor. The regulator calculates the switching points with the corresponding differential using the DHW setpoint and the temperature measured in the DHW tank.

#### Thermostat

Regulation of the DHW temperature is based on the switching state of a thermostat connected to the DHW sensor B3.

## DHW outlet sensor B38

There is a sensor on the instantaneous hot water outlet. The regulator calculates the switching points with the corresponding differential using the water heating setpoint and the DHW temperature measured at the outlet.

Line No.	Access	Programming	Possible values
5731	C	DHW controlling element	No charging request   Charging pump   Diverting valve

The DHW load can be carried out with the charging pump or the directional valve and the heat generator pump.



### INFORMATION:

The DHW priority and discharge protection functions are only possible with the charging pump.

When a heating system heat request is detected, the valve always returns to the Heating position. If there is no room heating request (summer operation, ECO functions, vacation), you can specify if the valve in the DHW position must wait for the next DHW load or also return to the heating position.

#### None

No DHW load with DHW adjustment component Q3 / water heater adjustment component Q34.

#### Charging pump

The DHW is loaded with a pump.

#### Directional valve

The DHW is loaded with a bypass valve.

Line No.	Access	Programming	Possible values
5732	C	Pump off change div valve	0 ... 10 s

Pump deactivation time. You can set the time during which the pump is stopped while the directional valve inverts its operating mode.

In systems with a bypass valve, the pumps can be stopped on transition from heating mode to DHW mode and vice-versa. The deactivation time of the heating circuit circulators can be configured. Deactivation of these pumps can be simultaneous with startup of the directional valve or following a time delay. The number of heating circulators concerned by the cutout depends on the hydraulic system.



### CAUTION:

**There is no intervention on the modulation or control of the burners.**

Line No.	Access	Programming	Possible values
5733	C	Delay pump off	0 ... 10 s

Duration of pump deactivation time delay. The duration of the pump deactivation time delay can be adjusted while the directional valve inverts its operating mode.

Line No.	Access	Programming	Possible values
5734	S	Basic position DHW div valve	Last request   Heating circuit   DHW

The bypass valve adopts, by default, the position in which it finds itself in the absence of a request.

#### Last request

The bypass valve stays in its last position on expiry of the last request.

#### Heating circuit

The bypass valve (UV) goes to the heating position after the last request.

#### DHW

The bypass valve (UV) goes to the DHW position after the last request.

### 14.1.4. Separation

In installations with several boilers, a boiler can be used to load the DHW. This boiler is hydraulically uncoupled from the system and, once the charging operation is completed, indicates that it can re-join the cascade.

Line No.	Access	Programming	Possible values
5736	C	DHW separate circuit	Off   On

The DHW separation function can only be used provided a boiler cascade is available.

#### Off

DHW separation deactivated. Each available boiler can supply the DHW tank.

#### On

DHW separation activated. The DHW is only loaded from the boiler configured for this purpose.



**INFORMATION:** For DHW separation, the DHW adjustment component Q3 must be set for *bypass valve*.

Line No.	Access	Programming	Possible values
5737	S	Optg action DHW div valve	Position on DHW   Position on heating circuit

Here, the position of the bypass valve is set when the output is active.

#### **Position on DHW**

When the output is active, the bypass valve is in the DHW position.

#### **Position on Heating circuit**

When the output is active, the bypass valve is in the heating circuit position.

Line No.	Access	Programming	Possible values
5738	S	Midposition DHW div valve	Off   On

Here, the bypass valve can be placed in the middle position to fill or drain the two heating circuits. You must then return the valve manually.

#### **Off**

The directional valve is brought to the position currently needed in accordance with the heat request and its default position.

#### **On**

The bypass valve is brought to the middle position.

### **14.1.5. Boiler**

Line No.	Access	Programming	Possible values
5774	C	Ctrl boiler pump/DHW valve	All requests   Request HC1/ DHW only

For specific hydraulic installations, this parameter is used to specify that the boiler pump Q1 and the directional valve Q3 are only assigned to the DHW and to heating circuit 1, excluding the other circuits 2 and 3 and external consumer circuits.

#### **All requests**

The bypass valve is integrated in the hydraulic circuit for all the requests and alternates between the DHW mode and the other requests. The boiler pump is activated for all the requests.

#### **Only request HC1/DHW**

The bypass valve is only integrated in the hydraulic circuit for heating circuit 1 and the DHW, and alternates between the DHW function and heating circuit 1. All of the other requests are not hydraulically connected to the bypass valve and the boiler pump ; they are transmitted directly to the boiler.

### 14.1.6. Solar

Line No.	Access	Programming	Possible values
5840	C	Solar controlling element	Charging pump   Diverting valve
5841	C	External solar exchanger	Jointly   DHW storage tank   Buffer storage tank

In place of a manifold pump and bypass valves for the storage tanks, the solar installation can be operated with charging pumps.

#### By charging pump

With charging pumps, all the exchangers can be used at the same time. Parallel or alternating operation is possible.

#### Directional valve

A bypass valve only allows flow in a single exchanger. Only alternating operation is possible.

For the solar circuits with two storage tanks, it is necessary to configure the external exchanger as available and use both as DHW and storage tank, or only one of these two functions.

### 14.1.7. Storage tank

Line No.	Access	Programming	Possible values
5870	C	Combi storage tank	No   Yes

This setting activates the functions specific to the combined storage tanks. It is thus possible to use the electrical resistor of the tank both for heating and for the DHW.

## 14.2. Configuration of boiler controller inputs / outputs

### 14.2.1. Output, relay QX

Line number disconnect QX1	QX2	QX3	Access	Programming	Possible values
5890	5891	5892	C	Relay output QX1, 2, 3	None   Cons circuit pump VK1 Q15   Boiler pump Q1   Alarm output K10   Heat circuit pump HC3 Q20   Cons circuit pump VK2 Q18   Cascade pump Q25   Heat circuit pump HC1 Q2   Heat circuit pump HC2 Q6   DHW ctrl elem Q3   Status information K36

The output settings associate the corresponding functions in accordance with the selection.

By default, relay QX1 is configured for Boiler pump Q1.

**None**

No function on the output by relay.

**Consumer circuit pump 1 Q15**

The consumer circuit pump VK1 can be used for an additional consumer. In association with an external heat request at input H with the *Consumer circuit request configuration*. 1, the application can be used, for example, for a heater battery or similar.

**Boiler pump Q1**

The connected pump serves to circulate the boiler water.

**Output, alarm relay K10**

If a fault occurs, it is indicated by the alarm relay. Closure of the contact is time-delayed by 2 minutes. When the error is eliminated, meaning that the error message is no longer present, the contact immediately opens.

**Rq:** If the fault cannot be eliminated for the moment, the relay can be reinitialised nonetheless. This is performed in the **Faults** page .

**Pump CC3 Q20**

The heating circuit with pump CC3 is activated.

**Consumer circuit pump 2 Q18**

The consumer circuit pump VK2 can be used for an additional consumer. In association with an external heat request at input H with the *Consumer circuit request configuration*. 2, the application can be used, for example, for a heater battery or similar.

**Cascade pump Q25**

Boiler pump common to all boilers of a cascade

**Pump CC1 Q2**

Heating circuit with pump CC1 activated.

**Pump CC2 Q6**

Heating circuit with pump CC2 activated.

**DHW pump/valve Q3**

Adjustment component for DHW tank

**Status message K36**

The output is activated when the burner is operating (flame detected).

---

### 14.2.2. Sensor input BX

Line No. BX2	Line No. BX3	Access	Programming	Possible values
5931	5932	C	Sensor input BX2, 3	None   Common flow sensor B10   Cascade return sensor B70

The sensor input settings associate the corresponding functions according to the selection.

### 14.2.3. Inputs H1 / H5

Line No. H1	Line No. H5	Access	Programming	Possible values
5950	5977	C	Function input Hx	None   Optg mode change HCs+DHW   Optg mode changeover HC1   Optg mode changeover HC1   Optg mode changeover HC2   Optg mode changeover HC3   Heat generation lock   Error/alarm message   Consumer request VK1   Consumer request VK2   Excess heat discharge   Consumer request VK1 10V   Consumer request VK2 10V   Pressure measurement 10V

#### None

No function on input.

#### Mode switching

- heating circuit

The heating circuit modes are switched on the mode configured on line 900 / 1200 / 1500) by the connection terminals Hx (for example, telephone switch).

- domestic hot water

The DHW load blocking function is only activated with the *setting "heating circuit +DHW mode switchover"* or *"DHW mode switchover"*.

#### Generator blocked achieved

The generator is locked by the connection terminals Hx. All the temperature requests from the heating circuits and DHW are ignored. The boiler frost protection function is ensured during this time.

#### Error / alarm message

Input H1 generates a regulator error message. If the alarm output is configured accordingly (relay outputs QX1...3, lines 5891...5893), the error is retransmitted or indicated by an additional contact (for example, indicator light or external buzzer).

#### Consumer circuit request.

The flow setpoint set is activated by the terminals (for example, with a hot battery function of a hot air curtain).

The setpoint must be set on line 1859, 1909, 1959.

#### Evacuation of surplus heat

The surplus heat evacuation function is used, for example, by an external generator to constrain the consumers (heating circuit, DHW tank, pump Hx) to dissipate their surplus heat by an override signal. The « Evacuate excess heat » parameter is used to specify, for each consumer, acknowledgement of the override signal, and therefore participation in the surplus heat evacuation process.

**Local action**

With the setting "Device address LPB 0 or >1", the evacuation function only acts on the local consumers connected to the device.

**Central action (LPB)**

With the setting "Device address LPB = 1", the evacuation function also acts on the consumers of the other devices of the same segment. It is not possible to evacuate the surplus heat in the entire system on segments other than segment 0.

**Consumer circuit request. 10V**

The external load application node x receives a heat request in the form of a voltage signal (0...10V-). The linear characteristic is defined by two fixed points (voltage value 1 / function value 1 and voltage value 2 / function value 2).

**10V pressure measurement**

*Function internal to boiler*

Line No.		Access	Programming	Possible values
H1	H5			
5951	5978	C	Contact type	NC   NO

**NC contact**

The contact is normally closed and must be opened to activate the selected function.


**NO contact**

The contact is normally open and must be closed to activate the selected function.

Parameter <i>Direction of action of contact Hx</i>	State of contact on terminal Hx	State of function / action
NO contact	open	inactive
	closed	active
NC contact	open	active
	closed	inactive

Line No.	Access	Programming	Possible values
5953	C	Voltage value 1 H1 (U1)	0 ... 10 V
5954	C	Function value 1 H1 (F1)	-1000 ... 5000
5955	C	Voltage value 2 H1 (U2)	0 ... 10 V
5956	C	Function value 2 H1 (F2)	-1000 ... 5000

The linear characteristic is defined by two fixed points. The setting is performed with two parameter binomials for « Function value » and « Voltage value »(F1/U1 and F2/U2).

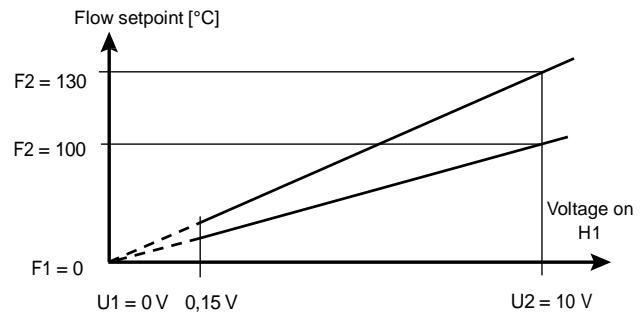Example of 10V heat request:

If the input signal goes below the 0.15 V threshold, the heat request is invalidated and therefore not operative.

### 14.3. Extension module configuration

Line No.			Access	Programming	Possible values
Mod. 1	Mod. 2	Mod. 3			
6020	6021	6022	C	Function extension module 1, 2, 3	None   Multifunctional   Heat circuit 1   Heat circuit 2   Heat circuit 3   Return temp controller   Primary contr/system pump

By assigning a function to the extension module, the inputs / outputs are self-configured.

#### **None**

The function is inoperative.

#### **Multifunction**

The functions which can be assigned to the multifunction inputs/outputs can be viewed on lines 6030...6038 and 6040...6045.

#### **Heating circuit 1**

The settings corresponding to the « Heating circuit 1 » operator page adapt to this application.

#### **Heating circuit 2**

The settings corresponding to the « Heating circuit 2 » operator page adapt to this application.

#### **Heating circuit 3**

The settings corresponding to the « Heating circuit 3 » operator page adapt to this application.

#### **Return temp. regulator**

This function is not used. It results in a configuration error message.

Connections:

	QX21	QX22	QX23	BX21	BX22	H2
<b>Multifunction</b>	*	*	*	*	*	*
<b>Heating circuit 1</b>	Y1	Y2	Q2	B1	*	*
<b>Heating circuit 2</b>	Y5	Y6	Q6	B12	*	*
<b>Heating circuit 3</b>	Y11	Y12	Q20	B14	*	*

#### 14.3.1. Extension module EX 1 / 2 / 3

EX 1	Line No.			Access	Programming	Possible values
	EX 2	EX 3				
6024	6026	6028	C	Funct input EX21 module 1 , 2, 3		None   Limit thermostat HC

##### **None**

The input has no function

##### **Heating circuit safety thermostat**

If the extension module is used for the heating circuit, an external safety thermostat can be connected (for floor heating, for example) to input EX21 (230 V~).

#### 14.3.2. Extension module QX 1 / 2 / 3

QX 21	Line No.			Access	Programming	Possible values
	QX 22	QX 23				
6030	6031	6032	C	Relay output module 1		None   Cons circuit pump VK1 Q15   Boiler pump Q1   Alarm output K10   Heat circuit pump HC3 Q20   Cons circuit pump VK2 Q18   Cascade pump Q25   Heat circuit pump HC1 Q2   Heat circuit pump HC2 Q6   DHW ctrl elem Q3   Status information K36
6033	6034	6035	C	Relay output module 2		
6036	6037	6038	C	Relay output module 3		

The output settings associate the corresponding functions in accordance with the selection.



##### **INFORMATION:**

The outputs QX of the extension module have the same functions as those of the boiler controller. See chapter 14.2.1, page 79.

### 14.3.3. Extension module BX

Line No. BX 21	Line No. BX 22	Access	Programming	Possible values
6040	6041	C	Sensor input module 1	None   Common flow sensor B10   Cascade return sensor B70
6042	6043	C	Sensor input module 2	
6044	6045	C	Sensor input module 3	

The sensor input settings associate the corresponding functions according to the selection.



**INFORMATION:**

The inputs of sensor BX of the extension module have the same functions as those of the boiler controller. See chapter 14.2.2, page 80.

### 14.3.4. Extension module H2 1 / 2 / 3

Line No. module 1	Line No. module 2	Line No. module 3	Access	Programming	Possible values
6046	6054	6062	C	Function input H2	None   Optg mode change HCs+DHW   Optg mode changeover HC1   Optg mode changeover HC2   Optg mode changeover HC3   Heat generation lock   Error/alarm message   Consumer request VK1   Consumer request VK2   Excess heat discharge   Consumer request VK1 10V   Consumer request VK2 10V   Pressure measurement 10V
6047	6055	6063	C	Contact type H2	NC   NO
6049	6057	6065	C	Voltage value 1 H2 (U1)	0 ... 10 V
6050	6058	6066	C	Function value 1 H2 (F1)	-1000 ... 5000
6051	6059	6067	C	Voltage value 2 H2 (U2)	0 ... 10 V
6052	6060	6068	C	Function value 2 H2 (F2)	-1000 ... 5000



**INFORMATION:**

Inputs H2 of the extension modules have the same functions as those of the boiler controller. See chapter 14.2.3, page 81.

## 14.4. System configuration

### 14.4.1. Type of sensor / corrections

Line No.	Access	Programming	Possible values
6097	S	Sensor type collector	NTC   Pt 1000

If an extended temperature range is required, a Pt1000 (-28...350 °C) sensor can be used as solar panel sensor B6, rather than sensor CTN (-28...200 °C). The input of multifunction sensor BX (standard device or extension module) to which the sensor B6 is set and connected will therefore be indifferent. The corresponding input automatically uses the appropriate characteristic insofar as it is configured accordingly.

Line No.	Access	Programming	Possible values
6098	S	Readjustm collector sensor	-20 ... 20 °C
6100	S	Readjustm outside sensor	-3 ... 3 °C

### 14.4.2. Building and ambient temperature model

Line No.	Access	Programming	Possible values
6110	S	Time constant building	0 ... 50 h

The influence of the outdoor temperature on the ambient temperature variations is a function of the accumulative mass of the building (type of construction). This setting is used to act on the reaction speed of the flow setpoint in the event of a fluctuation of the outdoor temperature.

**Example :**

>20 hours

The ambient temperature reacts slowly to the outdoor temperature fluctuations.

10...20 hours

This setting can be used for most buildings.

<10 hours

The ambient temperature reacts quickly to the outdoor temperature fluctuations.

### 14.4.3. Setpoint control

Line No.	Access	Programming	Possible values
6116	S	Const tmpls compens consig.	0 ... 14 min
6117	S	Compens centr T° consigne	1 ... 100 °C

The setpoint control function adapts the setpoint of the heat generator.

If the temperature measured at B10 is far from the line flow setpoint, the setpoint of the generators is increased. This increase can be filtered with parameter 6116 and limited by parameter 6117.

#### 14.4.4. Frost protection

Line No.	Access	Programming	Possible values
6120	S	Frost protection plant	Off   On

Depending on the current outdoor temperature, the regulator will trigger all the enabled pumps of the installation and prevent local freezing of the heating installation. The boilers are not started up.

#### 14.4.5. Pump / valve degumming

Line No.	Access	Programming	Possible values
6127	S	Pump/valve kick duration	0 ... 51 s

The pumps and valves are periodically activated to protect against seizure. Activation of the pumps results in circulation of water in the installation. The pump mechanical parts and the valve seat are rinsed and cleaned of suspended particles to prevent gumming

The pumps directly connected to the standard device are activated every Friday at 10 :00 hours throughout the duration of the degumming process set with an interval of 1 minute.

Degumming is only activated when there is no heat request in progress.



##### INFORMATION:

Degumming of the valve only takes place provided the valve has not been actuated by a regulator function since the last degumming operation.

Degumming of the pump only takes place provided the pump has not been actuated by a regulator function since the last degumming operation.

#### 14.4.6. Register sensor

If faulty sensors are detected after installation, and to prevent them from being integrated in a correct state (which could happen in the event of automatic detection), there is a Commissioning status function.

This function learns to recognise the sensors connected and generates, in the event of a fault, an error message while inhibiting any change of installation diagram.

Line No.	Access	Programming	Possible values
6200	C	Save sensors	No   Yes

At midnight, the standard device registers the states at the sensor terminals provided the regulator has been operating for at least 2 hours. If a sensor breaks down after registration, the standard device generates an error message. This setting is used to immediately register the sensors. This may be necessary, for example, when a sensor is removed and is no longer useful.

Line No.	Access	Programming	Possible values
6205	S	Reset to default parameter	No   Yes

All the parameters can be reset to the factory settings, except the following pages :

- Date and time
- User interface
- Radio and all time schedule programs
- and the manual mode setpoint

## 14.5. Information

### 14.5.1. Installation diagram

The installation diagram can be validated by parameters 6212, 6215 and 6217.

Line No.	Access	Programming	Possible values
6212	C	Check no. heat source 1	11 : no pump 12 : with boiler pump 13 : with recycling pump 14 : with boiler and recycling pumps
6215	C	Check no. storage tank	0 : tank 4 : DHW with pump
6217	C	Check no. heating circuits	1 ... 30303

The value indicated in parameter 6217 takes the form **xxyyzz** where xx refers to heating circuit 3, yy refers to heating circuit 2 and zz refers to heating circuit 1.

Heating circuit	CC3 (x)	CC2 (yy)	CC1 (zz)
None	00	00	00
Direct without pump	01	01	01
Direct with pump	02	02	02
3-way valve	03	03	03

Example 1, a heating circuit (HC1 direct without pump):

actual value of parameter: 000001 value indicated: 1

Example 2, two heating circuits (HC1 direct with pump and HC2 with 3-way valve):

actual value of parameter: 000302 value indicated: 302

Example 3, three heating circuits (HC1 with 3-way valve, HC2 direct without pump HC3 direct with pump):

actual value of parameter: 020103 value indicated: 20103

Example 4, a heating circuit (HC2 direct without pump):

actual value of parameter: 000100 value indicated: 100

Line No.	Access	Programming	Possible values
6230	S	Info 1 OEM	See boiler manual
6231	S	Info 2 OEM	See boiler manual
6234	S	Boiler type	

#### **14.5.2. Characteristics of device**

Line No.	Access	Programming	Possible values
6220	S	Software version	

This information indicates the current version of the standard device

## 15. "LPB SYSTEM" PARAMETERS

To communicate with the other regulators, the OCI 345 enables use of the LPB bus. This accessory is screwed onto the boiler controller platform. The LPB bus is used either to allow the boiler to receive heat requests from other regulators having the same bus, or to create boiler cascades (cascade can be configured to optimise operation).

### 15.1. LPB address

Line No.	Access	Programming	Possible values
6600	C	Device address	0 ... 16
6601	S	Segment address	0 ... 14

The device address identifies each address on the bus somewhat like a postal address. Each device must have a correct address to ensure communication.

### 15.2. Bus supply function

Line No.	Access	Programming	Possible values
6604	S	Bus power supply function	Off   Automatically

The bus power supply is a direct system supply from the regulators (no central power supply). The type of bus supply provided by the regulators is adjustable.

#### Off

The regulator does not supply the bus with voltage.

#### Automatic

The electrical power supply of the bus by the regulators is automatically switched on/off on request by the bus.

### 15.3. Bus power supply status

Line No.	Access	Programming	Possible values
6605	S	Bus power supply state	Off   On

The display indicates if the regulator is currently supplying the bus.

#### Off

Supply of the bus by the regulators is currently cut off.

#### On

Supply of the bus by the regulators is currently active ; the regulator is supplying current to the bus.

## 15.4. Centralised functions



### CAUTION:

These settings only concern the device with address 1.

#### Centralised « Summer » switching (LPB)

The standard device with address 1 can centralise the summer mode switching for the LPB compatible devices.

To do so, it distributes its own summer/winter heating limit status for heating circuit 1 to the other devices on the bus and forces their heating circuits to Eco mode provided they are not in Comfort mode.



### INFORMATION:

Only transition to the summer mode is concerned by override of the centralised switching function. If the standard master device goes back to winter mode, the other devices return to their local state, whatever it may have been, for example, before the summer mode was controlled.

The centralised function is controlled by two parameters of the standard device :

Winter/summer switchover parameter:

- local:

The summer heating limit is not shared

- centralised:

The summer heating limit is transmitted to all the heating circuits in accordance with the perimeter defined.

The action perimeter in the bus depends on the segment address and on the parameter « *Switching action perimeter* »:

- Segment address = 0 and perimeter = Segment:

The summer switching function only acts on the standard devices in their own segment 0.

- Segment address = 0 et perimeter = System:

The summer switching function acts on the standard devices in all the segments (0...14).

- Segment address > 0:

The parameter is not applicable The summer switching function always acts only on the standard devices in their own segment.



### INFORMATION:

The « *action perimeter* » parameter of the switching functions also acts in sharing of the other centralised switching functions, such as the Mode switching function.

#### Centralised switching of mode by LPB

The standard device with address 1 can centralise mode switching for the LPB compatible devices. The switching functions on the central standard device (by input Hx) then also act on the heating circuits and on the DHW of the other devices on the bus.

Line No.	Access	Programming	Possible values
6620	S	Action changeover functions	Segment   System

The range of the centralised switching functions can be defined.

This concerns :

Mode switching input H (provided line 6623 is set for « Centralised »")

« Summer » switching (by setting « Centralised » on line 6621)

Inputs to be implemented:

### Segment

The switching function applies to all the regulators of a same segment.

### System

the switching function applies to all the regulators of the system (all segments included).

The regulator must be in segment 0.

Line No.	Access	Programming	Possible values
6621	S	Summer changeover	Locally   Centrally

The regulator can only apply the summer switching function to the local heating circuits, or, by LPB, to another regulator of the same segment or system.

The « summer » switching perimeter is as follows :

#### Local setting

local action; the local circuit is activated and deactivated in accordance with the settings on lines 730, 1030, 1330.

#### Centralised setting

Centralised action ; Depending on the parameter set on the « Switching perimeter » line, either the heating circuits of the segment or those of the whole system (line 730) will be activated or deactivated.

Line No.	Access	Programming	Possible values
6623	S	Optg mode changeover	Locally   Centrally

The standard device with address 1 can centralise mode switching for the LPB compatible devices.

The switching functions on the central standard device (by H1 / H2 or the heating circuit mode switching parameter ) then also act on the heating circuits and on the DHW of the other devices on the bus

The effect of a centralised mode switching function depends on the device used :

For the devices **executing 1**, the heating circuits switch to *frost protection mode*.

For the devices **executing 2**, the heating circuits switch either to *frost protection mode* or to *reduced operation mode*. The mode can be determined for each circuit (parameter "Mode switching of heating circuit 1 = 900, HC 2 = 1200, heating circuit P = 1500").

**CAUTION:**

While the centralised mode switching function is active, local mode selection is inhibited on all the devices.

The effect of mode switching by input H is as follows :

**Local setting**

Local action ; The local heating circuit is activated/deactivated

**Centralised setting**

Central action ; Depending on the parameter set on the « Switching perimeter » line, either the heating circuits of the segment or those of the entire system will be activated/deactivated.

Line No.	Access	Programming	Possible values
6624	S	Manual source lock	Locally   Segment

The action perimeter of the boiler locking function by input H is as follows in this case :

**Local setting**

Local action The local generator is locked.

**“Segment “input”**

Central action: All the cascade generators are locked.

Line No.	Access	Programming	Possible values
6625	S	DHW assignment	Local HCs   All HCs in segment   All HCs in system

The DHW should only be assigned provided DHW production is only controlled by the heating time schedule program (see lines 1620 or 5061).

**Local heating circuits**

DHW production only takes place for the local heating circuit.

**All the heating circuits of the segment**

DHW production takes place for all the heating circuits of the segment.

**All the heating circuits in the system**

DHW production takes place for all the heating circuits of the system.

Whatever the setting, the regulators in « vacation » mode are also taken into account for DHW production.

Line No.	Access	Programming	Possible values
6631	S	Ext source in Eco mode	Off   On DHW   On

The energy savings mode can be selected in the "Special mode/Service" menu at command line 7139.

The external boilers connected to the local bus operate as follows in eco mode :

**Off**

Remains locked .

**DHW on**

Released for DHW charging.

**On**

Continuously released.

## 15.5. Clock

Line No.	Access	Programming	Possible values
6640	C	Clock mode	Autonomously   Slave without remote setting   Slave with remote setting   Master

This setting defines the action of the system time on the time set in the regulator.

**Independent**

The time can be set on the regulator. The regulator time is not synchronised on the system time.

**Slave without adjustment**

The time cannot be set on the regulator. The regulator time is continuously automatically synchronised on the system time.

**Slave with adjustment**

The time can be set on the regulator. It is simultaneously used as system time by the master. The regulator time is however automatically and continuously adapted to the system time.

**Master**

The time can be set on the regulator. The regulator time becomes the reference time for the system. The system time is synchronised.

## 15.6. Outdoor temperature

Line No.	Access	Programming	Possible values
6650	S	Outside temp source	0 ... 239

In the installation with LPB local bus, a single outdoor sensor only will suffice. It is connected to any regulator and supplies the temperature to the regulators which do not have an outdoor sensor. The screen first indicates the segment number, then the address of the device.

-- . -- Address of outdoor sensor cannot be read

01.02 Address of outdoor temperature sensor

The first number corresponds to the segment number (01.)

The second number corresponds to the device address (.02)

**INFORMATION:**

If necessary (for example, if a building has different solar exposure areas), several areas of the system can be equipped with a separate outdoor sensor.

## 16. “ERROR” PARAMETERS

When a fault occurs, an error message can be read using the Info key. The display indicates the cause of the fault.

The boiler controller saves the last 20 faults. The system stores the fault code, the time and the operating phase during which the fault has occurred.

### 16.1. Information message

A fault present in the system appears on the display with the Albatros code for which the error has occurred.

Line No.	Access	Programming	Possible values
6705	E	SW diagnostic code	0 ... 65535

A fault present in the system is displayed here with the internal software diagnostic code for which the error has occurred.

Line No.	Access	Programming	Possible values
6706	E	Burn ctrl phase lockout pos	0 ... 255

A fault present in the system is displayed with the disturbance phase in which the error has occurred.

### 16.2. Reset

Line No.	Access	Programming	Possible values
6710	C	Reset alarm relay	No   Yes

When a fault occurs, an alarm can be triggered on relay QX. . The relay must be configured accordingly. The alarm relay can be reinitialised by this setting.

### 16.3. Fault indication function

Line No.	Access	Programming	Possible values
6740	S	Flow temp 1 alarm	10 ... 240 min
6741	S	Flow temp 2 alarm	10 ... 240 min
6742	S	Flow temp 3 alarm	10 ... 240 min
6745	S	DHW charging alarm	1 ... 48 h

These functions can be used to maintain the required flow temperatures. If the flow temperature deviates continuously with respect to the required level for more than the time period set, a message is generated. If, during an active alarm, the setting point is again reached, the error message is cancelled.

Line No.	Access	Programming	Possible values
6743	S	Boiler temp alarm	10 ... 240 min

This function monitors the boiler temperature when the burner is active and generates an alarm message in the event of a fault.

## 16.4. History

Line No.	Access	Programming	Possible values
6800, 6810, 6820, 6830, 6840, 6850, 6860, 6870, 6880, 6890, 6900, 6910, 6920, 6930, 6940, 6950, 6960, 6970, 6990	S	History ...	00:00 ... 23:59 h:m

The unit registers the last 20 faults which have occurred in a non-volatile memory. Every new input deletes the oldest input from the memory. For each error input, the system registers the code, the time, the internal software diagnostic code and the disturbance phase of the safety unit.

Line No.	Access	Programming	Possible values
6803, 6813, 6823, 6833, 6843, 6853, 6863, 6873, 6883, 6893, 6903, 6913, 6923, 6933, 6943, 6953, 6963, 6973, 6993	S	Error code ...	Error No.: error

Line No.	Access	Programming	Possible values
6805, 6815, 6825, 6835, 6845, 6855, 6865, 6875, 6885, 6895, 6905, 6915, 6925, 6935, 6945, 6955, 6965, 6975, 6995	S	Software diagnostic code ...	0 ... 9999

Line No.	Access	Programming	Possible values
6806, 6816, 6826, 6836, 6846, 6856, 6866, 6876, 6886, 6896, 6906, 6916, 6926, 6936, 6946, 6956, 6966, 6976, 6996	S	Safety unit phase ...	0 ... 255

## 17. “MAINTENANCE / SPECIAL MODE” PARAMETERS

### 17.1. Maintenance function

Line No.	Access	Programming	Possible values
7040	S	Burner hours interval	100 ... 10000 h

A maintenance message is displayed as soon as the interval set for the burner operating hours has elapsed.

Line No.	Access	Programming	Possible values
7041	S	Burn hrs since maintenance	0 ... 10000 h

Totalisation and display of current value. The value can be reset to 0 on this line.

Line No.	Access	Programming	Possible values
7042	S	Burner start interval	100 ... 65500

A maintenance message is displayed as soon as the interval set for the burner startups has elapsed.

Line No.	Access	Programming	Possible values
7043	S	Burn starts since maint	0 ... 65535

Totalisation and display of current value. The value can be reset to 0 on this line.

Line No.	Access	Programming	Possible values
7044	S	Maintenance interval	1 ... 240 months

A maintenance message is displayed when the interval set for operating time has elapsed. The burner can be turned on or off.

Line No.	Access	Programming	Possible values
7045	S	Time since maintenance	1 ... 240 months

Totalisation and display of current value. The value can be reset to 0 on this line.

Line No.	Access	Programming	Possible values
7050	S	Fan speed ionization current	0 ... 10000 rpm

Speed limits starting from which the burner ionisation current maintenance alarm must be generated when the ionisation current monitoring function controls an increase in speed due to an ionisation current which is too low.

Line No.	Access	Programming	Possible values
7051	S	Message ionization current	No   Yes

Display and reinitialisation indicator for burner ionisation current maintenance alarm for boiler controller. The maintenance alarm can only be reset provided the triggering event has been eliminated.

## 17.2. Cleaning

Line No.	Access	Programming	Possible values
7130	E	Chimney sweep function	Off   On
7131	E	Burner output	Partial load   Full load   Max heating load

The burner is activated. For the burner to operate as long as possible, the only active cutout point is the maximum temperature limitation of the boiler.

The burner power can be adjusted during the cleaning function:

**Partial load:**

Cleaning function with minimum boiler power.

**Full load:**

Cleaning function with maximum boiler power.

**Maximum heating load:**

Cleaning function with maximum heat power configured.



**INFORMATION:** This function is deactivated by setting -- on this line or automatically when the maximum boiler temperature is reached.

## 17.3. Maintenance function

Line No.	Access	Programming	Possible values
7140	E	Manual control	Off   On

If the manual mode is active, the relay outputs are no longer controlled according to the regulation state, but are adjusted, according to their function, on a predefined state of the manual mode.

The relay outputs are switched on a state which will produce heat in accordance with their hydraulic function.

**Adjustment of manual mode setpoint:**

When the manual mode is activated, you must go into the main display. This is where the maintenance/special mode symbol is displayed.

By pressing on the Info key, the "Manual mode" information is displayed in which the setpoint can be defined.

If the cleaning function is activated in manual mode, the latter is interrupted to allow the function to run. The manual mode stays active so long as it is selected.



**CAUTION:**

This function is not monitored as a function of time. The manual mode selection remains active even after a restart.

Line No.	Access	Programming	Possible values
7143	S	Controller stop function	Off   On

If stopping of the regulator is activated, the boiler is directly controlled to the burner power set in the regulator stopping setpoint.

Line No.	Access	Programming	Possible values
7145	S	Controller stop setpoint	0 ... 100 %

When a regulator stopping function is active, the boiler is set to the power entered here.

Line No.	Access	Programming	Possible values
7146	C	Deaeration function	Off   On

Parameter defining manual triggering of function by control key for example, or by maintenance/special mode menu . At the end of the purge operation, the parameter is reset to *Off*. It can also be set to Off to interrupt the purge operation at any time.

Line No.	Access	Programming	Possible values
7147	C	Type of venting	None   Heating circuit continuous   Heating circuit cycled   DHW continuous   DHW cycled

This parameter is used to preselect the purge phases; also refer to the previous section, **Purge function**.

If the function is initiated, this value indicates the current phase for information.

### None

Operates as parameter: By default, i.e. the purge function is active throughout phase 1 (continuous heating circuit); Phase 2 (Cyclic heating circuit); Phase 3 (continuous DHW) and Phase 4 (cyclic DHW).

Operates as information value: The function is interrupted.

### Continuous heating circuit

Operates as parameter: The purge function is active throughout phase 1 (Continuous heating circuit); Phase 2 (Cyclic heating circuit); Phase 3 (continuous DHW) and Phase 4 (cyclic DHW).

Operates as information value: The function is in phase 1 (Continuous heating circuit).

### Cyclic heating circuit

Operates as parameter: The purge function is only active throughout phase 2 (Continuous heating circuit); Phase 3 (continuous DHW) and Phase 4 (cyclic DHW).

Operates as information value: The function is in phase 2 (Cyclic heating circuit).

**Continuous DHW**

Operates as parameter: The purge function is only active throughout phase 3 (Continuous DHW) and phase 4 (cyclic DHW).

Operates as information value: The function is in phase 3 (Continuous DHW).

**Cyclic DHW**

Operates as parameter: The purge function is only active throughout phase 4 (cyclic DHW).

Operates as information value: The function is in phase 4 (cyclic DHW).

---

## 17.4. Service

---

Line No.	Access	Programming	Possible values
7170	C	Telephone customer service	0 ... 9

Entry of telephone number which appears in the information display

## 18. “INPUT / OUTPUT TEST” PARAMETERS

The input/output test is used to check correct operation of the connected components.



**CAUTION:**

The selected sensor values are updated within 5 seconds max. The display does not take account of the measured value corrections.



**INFORMATION:**

The relay test can be activated by a diagnostic software, and by the user interface. It remains active for 8 minutes max., after which it is forced to interrupt.

### 18.1. Relay output test

Line No.	Access	Programming	Possible values
7700	C	Relay test	No test   Everything off   Relay output QX1   Relay output QX2   Relay output QX3   Relay output QX4   Relay output QX21 module 1   Relay output QX22 module 1   Relay output QX23 module 1   Relay output QX21 module 2   Relay output QX22 module 2   Relay output QX23 module 2   Relay output QX21 module 3   Relay output QX22 module 3   Relay output QX23 module 3

The relay test is used to trigger and stop all of the relay outputs (burner, pumps, etc.) independently of the regulator state. This is used to quickly check the wiring.

A parameter dedicated to this purpose is used to energise each relay individually. The set state remains active on exit from this parameter.

The test can be interrupted explicitly, otherwise it is automatically deactivated after 1 hour.

**No test**

The output test is deactivated

**Everything is OFF**

All the outputs are deactivated.

**Relay output QX...**

Only QX... is activated.

**Relay output QX2... module n**

Only QX2... on the extension module n is activated.

**CAUTION:**

The electronic temperature regulator of the boiler has priority with respect to the outputs test. It can therefore override the burner relay output test.

## 18.2. Sensor inputs test.

Line No.	Access	Programming	Possible values
7730	C	Outside temp B9	-50 ... 50 °C
7750	C	DHW temp B3/B38	0 ... 140 °C
7760	C	Boiler temp B2	0 ... 140 °C
7820	C	Sensor temp BX1	-28 ... 350 °C
7821	C	Sensor temp BX2	-28 ... 350 °C
7822	C	Sensor temp BX3	-28 ... 350 °C
7823	C	Sensor temp BX4	-28 ... 350 °C
7830	C	Sensor temp BX21 module 1	-28 ... 350 °C
7831	C	Sensor temp BX22 module 1	-28 ... 350 °C
7832	C	Sensor temp BX21 module 2	-28 ... 350 °C
7833	C	Sensor temp BX22 module 2	-28 ... 350 °C
7834	C	Sensor temp BX21 module 3	-28 ... 350 °C
7835	C	Sensor temp BX22 module 3	-28 ... 350 °C

The inputs test is used to read the current measurement values on the input terminals of the units. This is used to quickly check the wiring.

## 18.3. Test of inputs H1 / H2 / H3 / H4 / H5 / H6 / H7

Line No.	Access	Programming	Possible values
7840	C	Voltage signal H1	0 ... 10 V
7841	C	Contact state H1	Open   Closed
7845	C	Voltage signal H2 module 1	0 ... 10 V
7846	C	Contact state H2 module 1	Open   Closed
7848	C	Voltage signal H2 module 2	0 ... 10 V
7849	C	Contact state H2 module 2	Open   Closed
7851	C	Voltage signal H2 module 3	0 ... 10 V
7852	C	Contact state H2 module 3	Open   Closed
7854	C	Voltage signal H3	0 ... 10 V
7855	C	Contact state H3	Open   Closed
7860	C	Contact state H4	Open   Closed
7862	C	Frequency H4	0 ... 2000
7865	C	Contact state H5	Open   Closed
7872	C	Contact state H6	Open   Closed
7874	C	Contact state H7	Open   Closed

The inputs test is used to read the current measurement values on the input terminals of the units. This is used to quickly check the wiring.

## 18.4. Test of EX inputs (extension module)

Line No.	Access	Programming	Possible values
7950	C	Input EX21 module 1	0V   230V
7951	C	Input EX21 module 2	0V   230V
7952	C	Input EX21 module 3	0V   230V

The inputs test is used to read the current measurement values on the input terminals of the units. This is used to quickly check the wiring.

## 19. “STATE” PARAMETERS

The current operating state of the installation is displayed by status displays.

Line No.	Access	Programming
8000	C	State heating circuit 1
8001	C	State heating circuit 2
8002	C	State heating circuit 3

End user (info level)	Commissioning, specialist	State Nbr.
Thermostat response	Thermostat response	3
Manual intervention active	Manual intervention active	4
Drying function activated	Drying function activated	102
Heating mode restriction	Overheating protection active Restriction, heating protection Restriction, DHW priority Restriction, storage tank	56 103 104 105 106
Forced drawing	Forced drawing, storage tank Forced drawing, DHW Forced drawing, boiler Forced drawing Time delay on cutout active	107 108 109 110 17
Comfort heating mode	Startup + accelerated heating option Optimisation on activation Accelerated temperature build-up Comfort heating mode	111 112 113 114
Reduced heating mode	Optimisation on cutout Reduced heating mode	115 116
Frost protection activated	Frost protection Frost protection, flow active Installation frost protection active	101 117 23 24
Summer operation	Summer operation	118
Off	Day eco mode active Lowered, reduced Lowered, frost protection Ambient temperature limitation Off	119 120 121 122 25

Line No.	Access	Programming
8003	C	State DHW

End user (info level)	Commissioning, specialist	State Nbr.
Thermostat response	Thermostat response	3
Manual intervention active	Manual intervention active	4
Withdrawal mode	Withdrawal mode	199
Heat holding mode EN	Heat holding mode active Heat holding mode EN	222 221
	Adiabatic cooling by manifold Adiabatic cooling by generator / heating circuits	77 78
Adiabatic cooling active		53
Load lock active	Discharge protection active Load duration limitation active Load locked	79 80 81 82
Forced load active	Override, Maximum tank temperature Override, Maximum load temperature Override, anti-legionella setpoint Override, comfort setpoint	83 84 85 86 67
Load by electrical resistor	Load by electrical resistor, anti-legionella setpoint Load by electrical resistor, Comfort setpoint Load by electrical resistor, reduced setpoint Load by electrical resistor, frost protection setpoint Electrical resistor released	87 88 89 90 91 66
Accelerated load active	Flow active Accelerated load, anti-legionella	92 93 94
Load activated	Load, anti-legionella setpoint Load, Comfort setpoint Load, reduced setpoint	95 96 97 69
Frost protection activated	Frost protection activated Instantaneous hot water frost protection	24 223
Time delay on cutout active	Time delay on cutout active	17
Load on standby	Load on standby	201
Loaded	Loaded, tank maximum temperature Loaded, maximum load temperature Loaded, anti-legionella temperature Loaded, comfort temperature Loaded, reduced temperature	70 71 98 99 100 75
Off	Off	25
Ready	Ready	200

Line No.	Access	Programming
8005	C	State boiler

End user (info level)	Commissioning, specialist	State Nbr.
STB response	STB response	1
Safety limitation test active	Safety limitation test active	123
fault	fault	2
	Flue gas temperature, cutout	232
	Flue gas temperature, power limitation	233
Smoke temperature too high		234
Thermostat response	Thermostat response	3
Manual intervention active	Manual intervention active	4
	Cleaning function, nominal load	5
	Cleaning function, partial load	6
Cleaning function active		7
	Manual lock	8
	Locked, solid fuel boiler	172
	Auto lock	9
	Locked, outdoor temperature	176
	Locked, ecological mode	198
Blocked		10
	Minimum limitation	20
	Minimum limitation, partial load	21
Minimum limitation active	Minimum limitation active	22
	Load shed on startup	11
	Load shed on startup, partial load	12
	Re-load limitation	13
	Re-load limitation, partial load	14
In operation		18
Load storage tank	Load storage tank	59
In operation for heating circuit, DHW	In operation for heating circuit, DHW	170
Partial load for heating circuit, DHW	Partial load for heating circuit, DHW	171
Released for heating circuit, DHW	Released for heating circuit, DHW	173
In operation for DHW	In operation for DHW	168
Partial load for DHW	Partial load for DHW	169
Released for DHW	Released for DHW	174
In operation for heating circuit	In operation for heating circuit	166
Partial load for heating circuit	Partial load for heating circuit	167
Released for heating circuit	Released for heating circuit	175
Time delay on cutout active	Time delay on cutout active	17
Released	Released	19
	Installation frost protection active	23
Frost protection activated		24
Off	Off	25

Line No.	Access	Programming
8007	C	State solar

End user (info level)	Commissioning, specialist	State Nbr.
Manual intervention active	Manual intervention active	4
Fault	Fault	2
Collective frost protection active	Collective frost protection active	52
Adiabatic cooling active	Adiabatic cooling active	53
Tank maximum temperature reached	Tank maximum temperature reached	54
Evaporation protection active	Evaporation protection active	55
Overheating protection active	Overheating protection active	56
Maximum load temperature reached	Maximum load temperature reached	57
Load DHW+tank+pool	Load DHW+tank+pool	151
Load DHW+tank	Load DHW+tank	152
Load DHW+pool	Load DHW+pool	153
Load tank+pool	Load tank+pool	154
Load DHW	Load DHW	58
Load storage tank	Load storage tank	59
Load pool	Load pool	60
	Minimum load temperature not reached	61
	Insufficient differential temperature	62
Insufficient sunshine	Insufficient sunshine	63

Line No.	Access	Programming
8008	C	State solid fuel boiler

End user (info level)	Commissioning, specialist	State Nbr.
Manual intervention active	Manual intervention active	4
Fault	Fault	2
Overheating protection active	Overheating protection active	56
Blocked	Manual lock Auto lock	8 9 10
Minimum limitation active	Minimum limitation Minimum limitation, partial load Minimum limitation active	20 21 22
In operation for heating circuit Partial load for heating circuit In operation for DHW Partial load for DHW In operation for heating circuit, DHW Partial load for heating circuit, DHW Time delay on cutout active In operation	Load shed on startup Load shed on startup, partial load Return limitation Return limitation, partial load In operation for heating circuit Partial load for heating circuit In operation for DHW Partial load for DHW In operation for heating circuit, DHW Partial load for heating circuit, DHW Time delay on cutout active In operation	11 12 13 14 166 167 168 169 170 171 17 18

End user (info level)	Commissioning, specialist	State Nbr.
Ignition aid activated	Ignition aid activated	163
Released	Released	19
	Installation frost protection active	23
	Boiler frost protection activated	141
Frost protection activated		24
Off	Off	25

Line No.	Access	Programming
8009	C	State burner

End user (info level)	Commissioning, specialist	State Nbr.
Lockout	Lockout	211
Start prevention	Start prevention	212
In operation	In operation	18
	Safety time	214
	Preventilation	218
Commissioning / Setting into service	Commissioning / Setting into service	215
	Post-ventilation	219
	Shutdown	213
	Return to zero	217
Reduced	Reduced	216

Line No.	Access	Programming
8010	C	State buffer

End user (info level)	Commissioning, specialist	State Nbr.
Heat	Heat	147
Frost protection activated	Frost protection activated	24
	Electrical load, backup mode	64
	Load by electrical resistor, evaporator protection	65
	Electric load, de-icing	
	Load by electrical resistor, override	131
	Load by electrical resistor, replacement	164
		165
	Load locked	81
	Restriction, DHW priority	104
		124
Restricted load		
	Forced load active	67
	Partial load active	68
		69
Load activated		
	Adiabatic cooling by manifold	77
	Adiabatic cooling by DHW / heating circuits	142
Adiabatic cooling active		53

End user (info level)	Commissioning, specialist	State Nbr.
Loaded	Loaded, tank maximum temperature	70
	Loaded, maximum load temperature	71
	Loaded, first load at setpoint temperature	72
	Loaded, setpoint temperature	73
	Partially loaded, setpoint temperature	74
	Loaded, minimum load temperature	143
		75
Cold	Cold	76
No request	No request	51

Line No.	Access	Programming
8011	C	State swimming pool

End user (info level)	Commissioning, specialist	State Nbr.
Manual intervention active	Manual intervention active	4
Fault	Fault	2
Heating mode restriction	Heating mode restriction	106
Forced drawing	Forced drawing	110
Heating mode	Generator heating mode	155
		137
Heated, maximum pool temperature	Heated, maximum pool temperature	156
Heated	Heated, solar setpoint	158
	Heated, generator setpoint	157
		159
Heating off	Heating mode, ART solar	160
	Heating mode, ART generator	161
		162
Cold	Cold	76

## 20. "DIAGNOSTICS" PARAMETERS

### 20.1. Cascade diagnostic

Various setpoints and actual values, relay switching states and generator states can be set for diagnostic purposes.

Line No.	Access	Programming	Possible values
8100, 8102, 8104, 8106, 8108, 8110, 8112, 8114, 8116, 8118, 8120, 8122, 8124, 8126, 8128, 8130	C	Priority source	0 ... 16
8101, 8103, 8105, 8107, 8109, 8111, 8113, 8115, 8117, 8119, 8121, 8123, 8125, 8127, 8129, 8131	C	State source	Missing   Faulty   Manual control active   Heat generation lock active   Chimney sweep funct active   Temporarily unavailable   Outside temp limit active   Not released   Released
8138	C	Cascade flow temp	0 ... 140 °C
8139	C	Cascade flow temp setp	0 ... 140 °C
8140	C	Cascade return temp	0 ... 140 °C
8141	C	Cascade return temp setp	0 ... 140 °C
8150	C	Source seq ch'over current	0 ... 990 h

### 20.2. Generator diagnostic

Various setpoints and actual values, relay switching states and timer states can be set for diagnostic purposes.

Line No.	Access	Programming	Possible values
8304	S	Boiler pump Q1	Off   On
8308	S	Boiler pump speed	0 ... 100 %
8309	S	Bypass pump speed	0 ... 100 %
8310	C	Boiler temp	0 ... 140 °C
8311	C	Boiler setpoint	0 ... 140 °C
8312	C	Boiler switching point	0 ... 140 °C
8313	C	Control sensor	0 ... 140 °C
8314	C	Boiler return temp	0 ... 140 °C
8315	C	Boiler return temp set	0 ... 140 °C
8316	C	Flue gas temp	0 ... 350 °C
8318	C	Flue gas temp max	0 ... 350 °C
8321	C	Primary exchanger temp	0 ... 140 °C
8323	C	Fan speed	0 ... 10000 tr/min
8324	C	Set point fan	0 ... 10000 tr/min
8325	C	Current fan control	0 ... 100 %

Line No.	Access	Programming	Possible values
8326	C	Burner modulation	0 ... 100 %
8327	C	Water pressure	0 ... 10
8329	S	Ionization current	0 ... 100 $\mu$ A
8330	S	Hours run 1st stage	00:00:00 ... 2730:15:00 h
8331	S	Start counter 1st stage	0 ... 2147483647
8338	E	Hours run heating mode	00:00:00 ... 8333:07:00 h
8339	E	Hours run DHW	00:00:00 ... 8333:07:00 h
8390	S	Current phase number	TNB   TLO   TNN   STY   STV   THL1   THL1A   TV   TBRE   TW1   TW2   TVZ   TSA1   TSA2   TI   MOD   THL2   THL2A   TN   SAV   STOE
8499	S	Collector pump 1	Off   On
8501	S	Solar ctrl elem buffer	Off   On
8502	S	Solar ctrl elem swi pool	Off   On
8505	S	Speed collector pump 1	0 ... 100 %
8506	S	Speed solar pump ext exch	0 ... 100 %
8507	S	Speed solar pump buffer	0 ... 100 %
8508	S	Speed solar pump swi pool	0 ... 100 %
8510	C	Collector temp 1	-28 ... 350 °C
8511	C	Collector temp 1 max	-28 ... 350 °C
8512	C	Collector temp 1 min	-28 ... 350 °C
8513	C	dt collector 1/DHW	-168 ... 350 °C
8514	C	dt collector 1/buffer	-168 ... 350 °C
8515	C	dt collector 1/swimming pool	-168 ... 350 °C
8519	C	Solar flow temp	-28 ... 350 °C
8520	C	Solar return temp	-28 ... 350 °C
8526	E	24-hour yield solar energy	0 ... 999,9 kW/h
8527	E	Total yield solar energy	0 ... 9999999,9 kW/h
8530	E	Hours run solar yield	00:00:00 ... 8333:07:00 h
8531	E	Hours run collect overtemp	00:00:00 ... 8333:07:00 h
8532	E	Hours run collector pump	00:00:00 ... 8333:07:00 h
8560	C	Solid fuel boiler temp	0 ... 140 °C
8570	E	Hours run solid fuel boiler	00:00:00 ... 8333:07:00 h

## 20.3. Consumer diagnostic

Various setpoints and actual values, relay switching states and timer states can be set for diagnostic purposes.

Line No.	Access	Programming	Possible values
8700	C	Outside temp	-50 ... 50 °C
8701	E	Outside temp min	-50 ... 50 °C
8702	E	Outside temp max	-50 ... 50 °C
8703	C	Outside temp attenuated	-50 ... 50 °C

Line No.	Access	Programming	Possible values
8704	C	Outside temp composite	-50 ... 50 °C
8730, 8760, 8790	C	Heating circuit pump 1, 2, 3	Off   On
8731, 8761, 8791	C	Heat circ mix valv 1, 2, 3 open	Off   On
8732, 8762, 8792	C	Heat circ mix valv 1, 2, 3 close	Off   On
8735, 8765, 8795	S	Speed heating circuit pump 1, 2, 3	0 ... 100 %
8740, 8770, 8800	C	Room temp 1, 2, 3	0 ... 50 °C
8741, 8771, 8801	C	Room setpoint 1, 2, 3	4 ... 35 °C
8743, 8773, 8803	C	Flow temp 1, 2, 3	0 ... 140 °C
8744, 8774, 8804	C	Flow temp setpoint 1, 2, 3	0 ... 140 °C
8749, 8779, 8809	C	Room thermostat 1, 2, 3	No demand   Demand
8820	C	DHW pump	Off   On
8825	S	Speed DHW pump	0 ... 100 %
8826	S	Speed DHW interm circ pump	0 ... 100 %
8827	S	Speed inst DHW heater pump	0 ... 100 %
8830	C	DHW temp 1	0 ... 140 °C
8831	C	DHW temp setpoint	8 ... 80 °C
8832	C	DHW temp 2	0 ... 140 °C
8835	C	DHW circulation temp	0 ... 140 °C
8836	C	DHW charging temp	0 ... 140 °C
8852	C	DHW consumption temp	0 ... 140 °C
8853	C	Instant WH setpoint	0 ... 140 °C
8860	C	DHW flow	0 ... 30 l/min
8875, 8885	C	Flow temp setp VK1, 2	5 ... 130 °C
8895	C	Flow temp setp swimming pool	5 ... 130 °C
8900	C	Swimming pool temp	0 ... 140 °C
8901	C	Swimming pool setpoint	8 ... 80 °C
8930	C	Primary controller temp	0 ... 140 °C
8931	C	Primary controller set	0 ... 140 °C
8950	C	Common flow temp	0 ... 140 °C
8951	C	Common flow temp setp	0 ... 140 °C
8952	C	Common return temp	0 ... 140 °C
8962	C	Common output setpoint	0 ... 100 %
8980	C	Buffer temp 1	0 ... 140 °C
8981	C	Buffer setpoint	0 ... 140 °C
8982	C	Buffer temp 2	0 ... 140 °C
8983	C	Buffer temp 3	0 ... 140 °C
9005, 9006, 9009	C	Water pressure H1, 2, 3	0 ... 10 bar
9031, 9032, 9033, 9034	C	Relay output QX1, 2, 3, 4	Off   On
9050, 9053, 9056	C	Relay output QX21 module 1, 2, 3	Off   On
9051, 9054, 9057	C	Relay output QX22 module 1, 2, 3	Off   On
9052, 9055, 9058	C	Relay output QX23 module 1, 2, 3	Off   On

## 21. “SAFETY UNIT” PARAMETERS

### 21.1. Operation

Line No.	Access	Programming
9524	S	Required speed LF

Rotation speed setpoint with partial load adjustable on control interface This value can only always be greater than the minimum rotation speed setpoint with partial load

Line No.	Access	Programming
9525	S	Required speed LF min

Minimum speed setpoint, partial load (safety parameter). Limit for rotation speed setpoint, *partial load*.

Line No.	Access	Programming
9529	S	Required speed HF

Rotation speed setpoint with nominal load adjustable on control interface This value can only always be greater than the maximum rotation speed setpoint with nominal load .

Line No.	Access	Programming
9530	S	Required speed HF max

Maximum speed setpoint with nominal load (safety parameter) *Limit for rotation speed setpoint with nominal load* .

### 21.2. Chimney drying function

Line No.	Access	Programming
9650	S	Chimney drying

If the chimney drying function is activated, the function starts after a shutdown on transition to reduced mode. The chimney drying function can be interrupted by any heat request, and restarts when the system returns to standby.

#### Off

The function is inoperative.

#### Temporary

Duration of chimney drying in accordance with "Chimney drying duration" parameter, line (9652).

#### Continuous

The chimney drying function is continuously executed in standby mode

Line No.	Access	Programming
9651	S	Req speed chimney drying


Speed at which chimney drying must be executed.

Line No.	Access	Programming
9652	S	Duration chimney drying


Duration of chimney drying when execution must be limited in time.

**ATLANTIC BELGIUM SA**


Avenue du Château Jaco, 1  
1410 WATERLOO  
Tel. : 02/357 28 28  
Fax : 02/351 49 72  
[www.ygnis.be](http://www.ygnis.be)

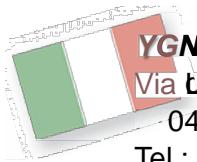**YGNIS ITALIA SPA**

Via Lombardia, 56  
040 CASTRONNO (VA)  
Tel.: 0332 895240 r.a.  
Fax : 0332 893063  
[www.ygnis.it](http://www.ygnis.it)

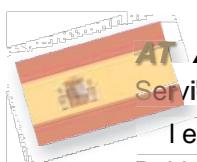**ATLANTIC IBERICA SAU**

Servicio de Asistencia Técnica Ygnis  
Le Molinot 59-61  
Pol Ind Camí Ral  
08860 CASTELLDEFELS (BARCELONA)  
Tel. : 902 45 45 22  
Fax : 905 45 45 20  
[servicio-tecnico@groupe-atlantic.com](mailto:servicio-tecnico@groupe-atlantic.com)  
[www.ygnis.es](http://www.ygnis.es)

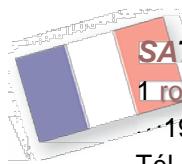**SATC ATLANTIC GUILLOT**

1 route de Fleurville  
190 PONT DE VAUX  
Tél. : 0 825 396 634 / 03 51 42 70 03  
Fax : 03 85 51 59 30  
[www.atlantic-guillot.fr](http://www.atlantic-guillot.fr)

**YGNIS AG**

Wohuserstrasse 31/33  
7 RUSWIL CH  
Tel.: +41 (0) 41 496 91 20  
Fax : +41 (0) 41 496 91 21  
Hotline : 0848 865 865  
[www.ygnis.ch](http://www.ygnis.ch)

**HAMWORTHY HEATING LIMITED**

Customer Service Center,  
Wessex House, Stinsford Road,  
New Fields Business Park,  
Poole, Dorset BH17 0NF  
Tel.: 01202 662500  
Fax.: 01202 662522  
[service@hamworthy-heating.com](mailto:service@hamworthy-heating.com)  
[www.hamworthy-heating.com](http://www.hamworthy-heating.com)

Others countries, contact your local retailer