

Exalt Flow Sensor Replacement



| Kit Part Number | Description | Model |
|-----------------|-------------------------|-----------------------|
| EXRKIT58 | Flow Sensor Replacement | Exalt 155 & 199 Combi |

Each Kit Includes:

- Flow Sensor

Recommended Tools:

- Phillips Head Screwdriver
- Flat Head Screwdriver



Indicates a potentially hazardous situation which, if ignored, can result in serious injury or substantial property damage.



Indicates special instructions on installation, operation or maintenance, which are important to equipment but not related to personal injury hazards.



For your safety, turn off electrical power supply at service panel and allow unit to cool before proceeding to avoid possible electrical shock and scald hazard. Failure to do so can cause severe personal injury or death.



Failure to follow instructions below can result in severe personal injury or damage if ignored.

- Instructions are for a qualified installer/ service technician only.
- Read all instructions before proceeding.
- Follow instructions in proper order.

Exalt Flow Sensor Replacement



1. Preliminary Instructions

1. Verify that the pressure sensor replacement kit is correct for the model of boiler. See table on page 1.
2. Carefully open and unpack the PARTS BOX from its shipping carton.
3. Carefully remove and check for any damage.

NOTICE

Installing a damaged sensor will cause malfunction of the boiler. Contact IdealUSA right away if the pressure sensor damaged in any way.

4. Turn off the electrical power supply to the boiler.
5. Close the manual gas shut off valve to the unit.

2. Drain the boiler

1. Turn power to the unit "OFF"
2. Close all isolation valves on the system piping to the boiler. Close the fill valve line to the system.
3. Connect a garden hose to the boiler drain.
4. Direct the hose to a suitable place of drainage. Ensure boiler drain connection is between the boiler and the closed isolation valve.
5. Open the drain valve and begin draining the boiler.



WARNING

Water from the boiler drain connection may be extremely hot. To avoid personal injury, death or substantial property damage:

- Tighten all drain hose connections to avoid leakage.
- Direct hot water away from all persons.

3. Pressure Sensor Removal

1. Remove the screw from the bottom of the front panel. Remove the front panel of the boiler. Pull the panel up and forward to remove the front panel from the unit. Do not discard the screws.

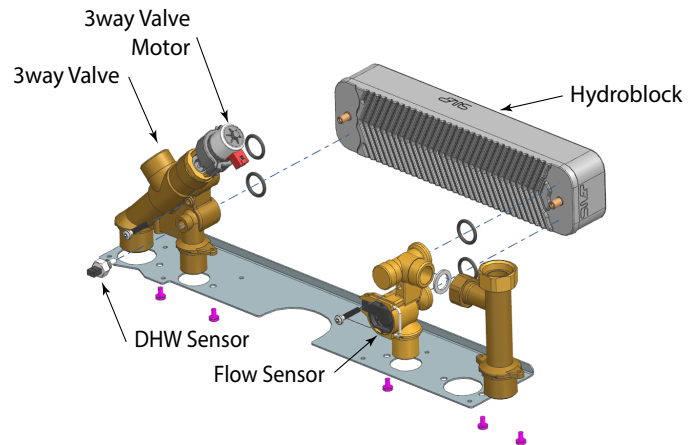


Fig. 2: Flow Sensor Installation

2. Disconnect the wire harness from the flow sensor by pulling back the locking clip and pulling the harness out.

NOTICE

Take care to ensure the wiring and harness are not damaged.

3. Pull the lock pin below the Sensor out and pull the pressure sensor out.

NOTICE

Do not pull the flow sensor out by the wire connection. This can damage the plug.

NOTICE

If the flow sensor is stuck, gently pry the sensor out using a screwdriver or the lock pin

4. Flow Sensor Installation

1. Ensure the wheel is installed on the new flow sensor and spins freely.
2. Insert the new sensor with the wheel into the connection. Insert the locking pin to secure in place.
3. Reconnect the wiring harness to the sensor.

Exalt Flow Sensor Replacement



4. Give the sensor a light tug up to ensure the locking clip is engaged properly.
5. Open all isolation valves and the fill system on the boiler to refill the unit. Check for leaks around the flow sensor and reseal the device if necessary.



Water leaks from the boiler may be extremely hot and may cause personal injury, death or substantial property damage:

6. Re-installing the front jacket panel.
7. Reconnect power supply and return the boiler back to service. Confirm proper operation by creating a domestic water demand and confirming the Instinct boiler senses the flow.